

Lift-Master

The Professional Line

To comply with FCC rules, adjustment or modification of receiver and/or transmitter is prohibited, except for changing the code setting and replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

WARNING


Children operating or playing with a garage door opener can injure themselves or others. *The garage door could close and cause serious injury or death. Do not allow children to operate the wall push button(s) or remote control(s).*

A moving garage door could injure or kill someone under it. Activate the opener only when you can see the door clearly, it is free of obstructions, and is properly adjusted.

The push buttons on the Four-Function remote controls can activate garage door openers, entryways and/or light controls. (Instructions for programming light products are included with those accessories.)

In general, code switch remote controls are used when several persons are operating the same device. Code switches must be set to matching positions in all remote controls used to operate the same receiver. Follow the instructions for Figures 1 and 2. Use the "ribbed" push button exclusively for code switch application.


Figure 1

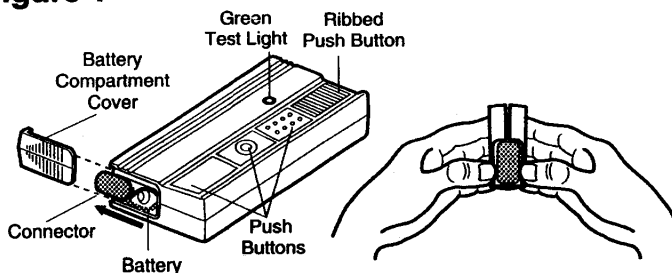

Access the code switches in the 84LM, four-function remote(s) as follows:

- Remove the battery compartment cover as shown in Figure 1.
- Remove the case screw on the housing bottom.
- Hold the remote control as indicated and pull to separate the housing. Set aside the case top (with push buttons).

Figure 2

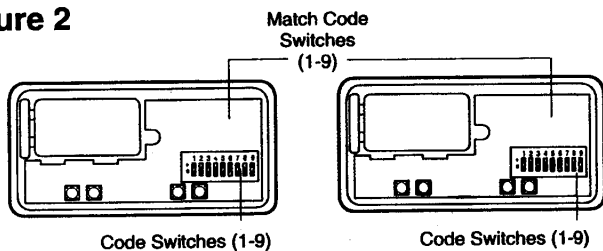

- Place remote circuit boards side by side. Make sure you set code switches 1 through 9 in all remotes to matching positions (see Figure 2). Use a pen or a screwdriver to move the switches to (+), (-) or (0).
- Reassemble case top and bottom by snapping them together.
- Replace the case screw and battery compartment cover.

Model 84LM Four-Function Remote Control

OWNER'S MANUAL

Program Receiver to Match Remote Control Code:

Each receiver must be programmed to accept the code of the remote push button that will be used to operate the device. When several remotes will operate the same device, it is only necessary to use the "ribbed" push button of one remote to program the receiver.

Select a remote control push button to operate the receiver.


- Press and HOLD the selected push button, Figure 1.
- Then press the "SMART" button on the receiver panel (see Figure 3). The green indicator light will FLASH once. Release the remote control push button.

Now the device will operate with the selected remote push button.

NOTE: If the remote push button is not held down until the indicator light flashes, the receiver has not accepted the code. If the "SMART" button is pressed and held until the adjacent indicator light turns off (about 6 seconds) ALL the codes the receiver has learned will be erased.

Figure 3


Representative Garage Door Opener Receiver

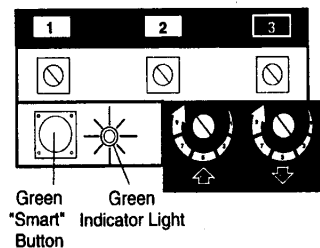

To Attach the Remote to Your Car Visor:

- Remove the visor clip from the clip holder.
- Remove the case screw. Insert tab on clip holder into case, Figure 4. Slide clip holder forward.
- Replace the case screw (do not overtighten). Slide visor clip onto clip holder.

Figure 4

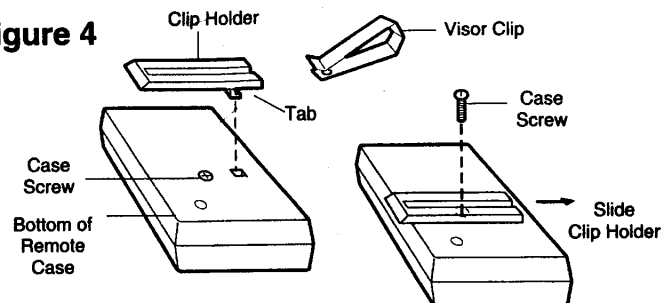

The Remote Control Battery:

The green test light should glow and the device should operate when the remote is activated.

The 9V battery should produce power for at least a year. If the green test light is *dim* or *does not come on*, replace the battery.

To change the battery, remove the battery compartment cover, unsnap the connector and remove the old battery (Figure 1). Insert a replacement battery. Snap the connector onto the new battery and replace compartment cover.

Replacement Parts

9V battery	10A16	Remote case only.....	41A4425
Visor Clip	29C128	(circuit board not included)	
Visor Clip Holder.....	31C412-1		

For service, dial our toll-free number: 1-800-528-9131