



Centaur Spinning Jenny

The Spinning Jenny Fence Dispenser is an essential tool used to pay out either flexible fence rail or high tensile coated wire during installation.

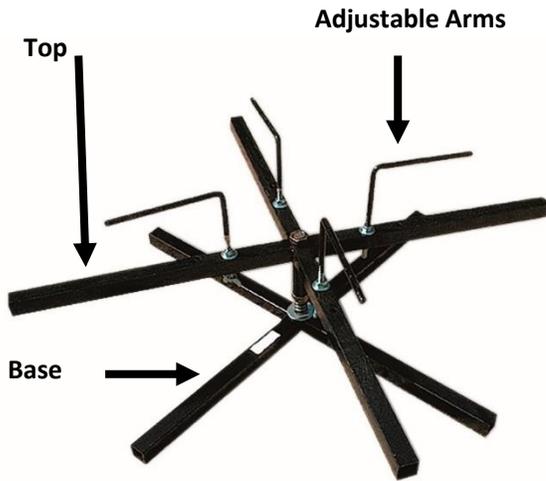

The Spinning Jenny is specially designed to assemble easily and reduce fence kinks and tangles during installation.

- Features an adjustable brake to control over-spin.
- 4 Leg base for extra stability.
- Adjustable arms make loading rail easy.
- Made in the USA

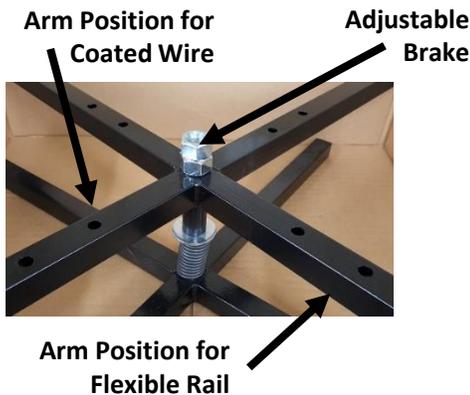

Adjustable Arm (Qty 4)



Assembled Jenny shown above holding white Centaur® flexible Rail

The Spinning Jenny may be used to dispense either flexible fence rail or high tensile coated wire.

Step 1 – Remove the Spinning Jenny from the box.

Step 2 – Place the roll of material on top of the Spinning Jenny.

Please note: If you are installing Hot Rail®, be sure the electric bead is at the desired position (upward for top rail charge, or downward for bottom rail charge).

Step 3 – Attach the Spinning Jenny arms.

- Insert the adjustable arms into the outer position for use with flexible rail.
- Insert the adjustable arms into the inner position for use with high tensile coated wire.
- Use the wing nuts provided to secure the arms into place.

Step 4 – Paying out (dispensing) rolled fence.

The Spinning Jenny is equipped with an adjustable brake to control over-spin during installation.

The Spinning Jenny may be placed on the ground while fence material is unrolled from it, or, the Jenny may be placed onto a truck to drive out the material.

Please note: If you are using a truck to drive out your material, be sure to anchor one end of the fence to the end/termination post first.