

# Aeromax 200K Keypad Programming

( For advanced programming, please refer to the Essex Keypad Manual Included with this system)

## User Code Operation

- 1) To open gate or door press your user code followed by the # sign.  
Example: (12345#) Note: When valid code is entered green LED will flash.

## Programming new user codes

- 1) Enter \*1 + Master Code (Default Master Code is 123) + #  
(Example: \*1123#)
- 2) Enter 1 + #
- 3) Enter User ID (1-500) + #
- 4) Enter User Code (3-8 Digits) + #
- 5) Enter # to complete programming for this user
- 6) To enter additional User Codes, return to step 3
- 7) If no additional users are to be added enter \*\*\*\* to exit programming and return to normal operation.

## Changing Master Code

- 1) Enter \*3 + Master Code (Default Master Code is 123) + #  
Example: (\*3132#)
- 2) Enter 1 + # Followed by new master code + #  
Example: (1#456#)
- 3) Enter \*\* to exit programming

## Deleting a User by User ID

- 1) Enter 4 +#
- 2) Enter the User ID (1to500) for the User to be deleted, followed by #
- 3) To delete an additional User, return to step b.
- 4) If no more Users are to be deleted, enter \*\* and return to step 3 or if you have completed all User Programming, enter second time to complete programming sequence and reset system to normal operation.