

Deer Net Folded



An economical net for enclosing small areas which need protection from deer damage. Deer Net is also ideal for seasonal protection when a fence is not needed year-round. It can be easily installed and removed and is reusable from year to year. It can also be used to cover plants or along the ground as deer deterrent. The product is folded in half for easy handling and merchandising.



C-Flex / Cintoflex C



Once installed, C-Flex and Cintoflex are virtually invisible against your landscaping. The fence are recommended for areas which experience light to moderate deer traffic. Popular with both landscapers and professional installers, C-Flex and Cintoflex C can be used to enclose the perimeter of your property or smaller areas such as gardens.



C-Flex P



The "P" stands for premium strength. Like C-Flex, C-Flex "P" is virtually invisible once installed and is recommended for areas that experience heavy deer traffic.

DEER FENCE



4800 East Monument Street
Baltimore, Maryland 21205
(P) 1-800-356-8495
(F) 1-877-836-2987
www.tenaxus.com

TENAX DEER CONTROL FENCING

DEER NET FOLDED

Product Code	2A040006
Color	Black
Mesh Size	0.669" x 0.944"
Roll Size	7' x 100'
Rolls per Pallet	20 rolls

G-FLEX

 
Product Code	60098109	60098409
Color	Black	Black
Mesh Size	1.77" x 1.97"	1.77" x 1.97"
Roll Size	7.5' x 100'	7.5' x 330'

GINTOFLEX^C

Product Code	60008409	60009409
Color	Black	Black
Mesh Size	1.77" x 1.97"	1.77" x 1.97"
Roll Size	10' x 330'	15' x 330'

G-FLEX-P

Product Code	60160259
Color	Black
Mesh Size	1.77" x 1.97"
Roll Size	7.5' x 164'

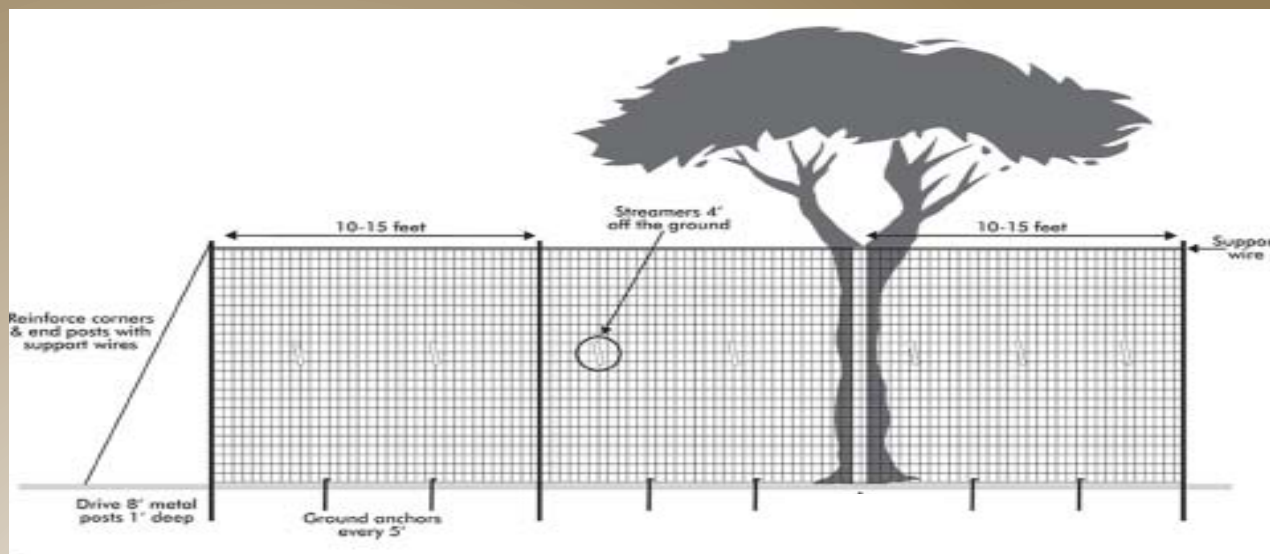

INSTALLATION

- Tubular 1 3/8" pipe rail steel, pressure treated 2" x 4"s or 4" x 4"s, or metal poles should be used and spaced no more than 15' apart. For optimum results use 10 foot posts which should be buried 3 feet deep. When trees are in installation path, wrap the netting around the tree. Pull the fence tight before securing to supports. For additional support weave a tension wire along the top and bottom of the fence, securing it to the supports.
- Deer are notorious for trying to push under fence! In order to keep them from getting in, be sure the fence netting touches the ground so that you can anchor it using 12" to 18" metal stakes every 8' - 10', or by attaching a running length of wire end to end, securely fastening it to the bottom of the fence. Additional reinforcement of a metal fence or chicken wire may be added to bottom for protection against rabbits and other animals that tend to chew through the fence.
- You will need to attach 12" long white ribbon onto the fence every 10' at a height of 4'. This will allow the deer to see the newly installed barrier, and keep them from running into it. The ribbon should be left up for six to eight weeks. It is most important to place ribbon along areas of high deer traffic and/or time worn paths (we also recommend using a double layer where frequently traveled paths exist).
- Corner posts may need additional support by using braces or support wires to hold them steady.
- NOTE: If you are interested in information regarding professional installers, please contact us.