

# Quick Start Up Guide for GateGuard w/Keypad

Congratulations on your purchase of Ritron's "RGG1" GateGuard w/Keypad Kit. This short quick start guide will help simplify your installation.


Ritron's GateGuard w/Keypad Kit enables you to wirelessly and remotely activate any gate, door, or any other piece of equipment that has a motorized operator.

## Kit Contents:

---

*Make sure your package includes all of these items:*

- 1) RQX-XT-KP Callbox w/Keypad
- 1) RPS-EXPO Power Supply for the Callbox
- 1) JBS Base Station Radio
- 1) JBS-MMK Base Station Mounting Bracket
- 1) JMX Handheld Radio
- 1) BCJS-AD Drop-In Charger for the Handheld Radio

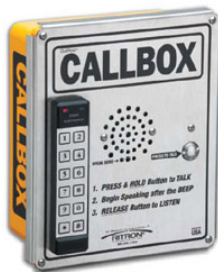

RQX-XT-KP Callbox w/Keypad



RPS-EXPO



JBS Base Station



JBS-MMK



JMX Handheld



BCJS-AD

## Steps to Ensure Ease of Installation:

---

- Unpack all of the items.
- Charge the Handheld Radio using your drop-in charger for 16 hours to ensure full charge of the battery.
- Unscrew the fasteners of the Callbox faceplate and open the internal box to install the Ni-Cad rechargeable D-Cell batteries or standard alkaline D-Cell batteries.
- If rechargeable batteries are being used, be sure to change the charge jump switch to the "ON" position. *See callbox manual.*
- Drill hole in the bottom or the back of the callbox to run the power and switch closure wires into the callbox.

## Installing Your System:

---

### Installing your Base Station

- 1) Plug your Base Station's power supply (RPS-1A) transformer into a standard 120VAC outlet and plug the male end of the power supply into the back of your Base Station.

- 2) Turn your Base Station on and turn to Channel 1 to communicate to your callbox and handheld radio.
- 3) If you choose to mount the Base Station to a wall, you should first install the mounting bracket (JBS-MMK) on the wall and then connect it to the Base Station using the existing screws on the side of the Base Station.

#### Installing your Callbox

- 1) Mount your callbox to a wall, gooseneck, or post using either the included mounting flanges or optional Callbox mounting plate (RQX-XTMK, *contact Ritron for details*)
- 2) Connect the Red and Black wires from the callbox to your power supply, (RPS-EXPO). This is included with your GateGuard Kit
- 3) Connect the Blue and Green wires from the callbox to your Gate Operator's switch output wires.
- 4) After wiring your callbox to your existing Gate Operator, be sure to seal the hole to ensure it's weather resistance, this is usually done with conduit.

#### Installing your Keypad

- 1) Keypad is pre-installed (*see callbox manual for programming instructions*)

### Using your new GateGuard System

#### Keypad

- To open gate with Keypad, simply enter the pre-authorized code.

#### Intercom

- To communicate from one radio to another simply press the push-to-talk button on the Handheld, Base Station, or Callbox radio. Release PTT to listen.
- To activate the gate from Handheld Radio press and hold the channel button until the activation tone is complete. To use the Base Station to activate the gate simply press and release the Z-Button. (See button location below).



- To turn off the handheld radio and base station radio, push and hold the "OFF" button.

**Call Ritron with any questions at 800-872-1872.**