

# INVISIDECK™

## Hidden SCRAIL® SYSTEM


## Tool #F36 RHN33-38 DT INSTALLATION INSTRUCTIONS

### SAFETY / INSTALLATION TIPS

- SAFETY:**
1. Safety is the #1 priority
  2. Always wear safety glasses
  3. Make sure air hose is always disconnected when gun is not in use
  4. Never point gun barrel at your body or anyone else

#### INSERTING CLIP


Place **INVISIDECK™ I-CLP CLIP** or TC-G (TC-150) CLIP into nose of gun with “horned tabs” sticking outwards from gun nose.

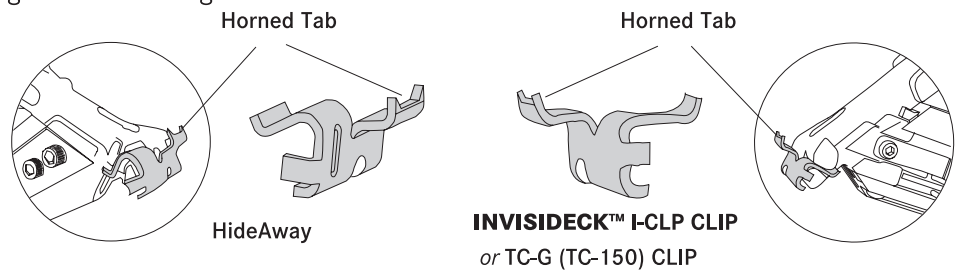

#### ADJUST / REPLACE RETAINING BALL


##### ADJUST:

1. Disconnect air supply to gun.
2. Insert clip into tool.
3. Insert hex key provided into set SCRAIL® at tip of nozzle.
4. Adjust until desired clip holding tension is obtained.

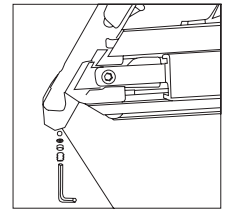

##### REPLACE:

1. Disconnect air supply to gun.
2. Use hex key to remove set SCRAIL®.
3. Remove and replace ball bearing washer and rubber compression spring.

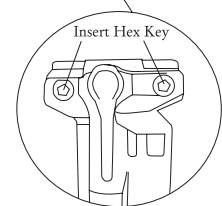

**NOTE: During use occasional adjustment may be required.**

#### TROUBLE SHOOTING

1. When clearing a jam disconnect the air hose to assure no accidental misfire.
2. If gun double fires: pull slightly up while rotating the gun clockwise when using the **INVISIDECK™ I-CLP CLIP** or TC-G (TC-150) CLIP and counter clockwise when using HideAway and pull to the right.
3. When in use, pressure adjustment may be needed depending on framing material density. Recommended pressure is 80 -100 PSI.
4. Be sure the air pressure is at the correct PSI when you reconnect air hose.

#### INVISIDECK™ SCRAIL® FASTENERS

1. SCRAIL® can be removed after firing with standard Phillips screw driver.
2. After firing, visually inspect each SCRAIL® to make sure it is fully installed. Adjust air pressure as needed.

**NOTE: Installation Tool is designed with a “Lock Out Safety”. Gun will not fire when only 5 SCRAIL® are left in the magazine. Once reloaded, gun will function normally.**

**For proper gun maintenance and care please refer to Operation Manual.  
Air compressor and hose not included.**