

CAUTION – YOU MUST INSTALL A GATE STOP with this product!

SureClose SF models require a separate gate stop to be installed to prevent the gate from being forced past 90°. Recommended opening setting is 85° to take into consideration possible installation abnormalities.

This package does not contain an external gate stop. It is the purchaser's responsibility to provide one. Absence of a gate stop will void warranty.


D&D recommends installing the gate stop at the bottom of the fence post if gate is – lower than 84" (210cm).

If you have any questions or need this information clarified, please contact us on:

North/South America (714) 677-1300 AU/NZ 1 800 500203 EU +31 (0) 3029 19847



SCOLM000021PA 26/02/2016

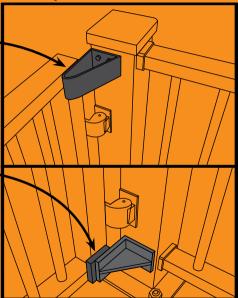

Examples of Gate Stops are shown for illustrative purposes. Seek advice from your installation provider for suitable Gate Stops for your application without voiding warranty.