



OWNER'S MANUAL  
**GP-SL100**  
**Commercial Duty Slide Gate Operator**  
With Inherent UPS Battery Back-up System



**TWO 12VDC, U1, 230A BATTERIES ARE REQUIRED BUT NOT INCLUDED.  
DO NOT Install This Operator Without Roller Guards, Safety Edges and Photo Beams!  
APPROPRIATE ENTRY/EXIT DEVICES WILL BE REQUIRED - SEE YOUR DEALER.**

This product meets and exceeds the requirements of UL 325 gate operator safety standards.

For more information on GTO/PRO's full line of automatic gate openers and access controls visit our website at [www.gtopro.com](http://www.gtopro.com)



GP-SL100 rev - 09/14/07



# WARNING!



- READ ALL INSTRUCTIONS COMPLETELY before attempting installation and use; failure to do so may result in serious injury or death!
- This unit must only be installed by an experienced technician!
- DANGER: HIGH VOLTAGE! Contact with gate operator circuitry can cause serious injury or death! Operator power must be disconnected before servicing!
- This gate operator may produce a high level of force. Stay clear of the unit while it is operating and exercise caution at all times.

The GP-SL100 automatic gate operators are intended for use with vehicular slide gates. The operators can be used in Class I, II, III, and IV applications.

### VEHICULAR GATE OPERATOR CLASS CATEGORIES

**Residential Vehicular Gate Operator—Class I:** A vehicular gate operator (or system) intended for use in a home of one-to-four single family dwelling, or a garage or parking area associated therewith.

**Commercial/General Access Vehicular Gate Operator—Class II:** A vehicular gate operator (or system) intended for use in a commercial location or building such as a multifamily housing unit (five or more single family units), hotel, garages, retail store, or other building servicing the general public.

**Industrial/Limited Access Vehicular Gate Operator—Class III:** A vehicular gate operator (or system) intended for use in an industrial location or building such as a factory or loading dock area or other locations not intended to service the general public.

**Restricted Access Vehicular Gate Operator—Class IV:** A vehicular gate operator (or system) intended for use in a guarded industrial location or building such as an airport security area or other restricted access locations not servicing the general public, in which unauthorized access is prevented via supervision by security personnel.

### Conversion Chart

#### *Converting Metric Units to English Equivalents*

<b>When You Know</b>	<b>Multiply By</b>	<b>To Find</b>	<b>Symbol</b>
centimeters	0.3937	inches	in. (or “)
meters	3.2808	feet	ft. (or ’)
kilograms	2.2046	pounds	lb. (or #)

#### *Converting English Units to Metric Equivalents*

<b>When You Know</b>	<b>Multiply By</b>	<b>To Find</b>	<b>Symbol</b>
inches	2.5400	centimeters	cm
feet	0.3048	meters	m
pounds	0.4535	kilograms	kg

#### *Temperature*

deg. Celsius	$(^{\circ}\text{C} \times 1.8) + 32$	deg. Fahrenheit	$^{\circ}\text{F}$
deg. Fahrenheit	$(^{\circ}\text{F} - 32) / 1.8$	deg. Celsius	$^{\circ}\text{C}$

# Table of Contents

Gate Operator Class Categories .....	Inside Cover
Metric Conversion Chart.....	Inside Cover
Safety Instructions for the GP-SL100 Slide Gate Operators .....	1
Important Safety Instructions for the System Designer.....	1
Important Safety Instructions for the Installer .....	2
Important Safety Instructions Specific to Secondary Means of Protection Against Entrapment.....	3
Important Safety Instructions for the Consumer/End User .....	4
Required Safety Precautions for Gates .....	5
Warning Labels .....	6
Technical Specifications .....	7
Parts Identification.....	8
Installing the Gate Operator.....	9
Preparation of the Gate.....	9
Operator Installation Overview .....	9
Using the Mounting Template .....	10
Mounting Template (not to scale) .....	11
Removing the Operator Housing .....	12
Mounting the Operator .....	12
Connecting Power to the Operator .....	12
Installing the Chain .....	14
Control Board Description .....	15
Setting The Limits .....	16
Stall Force and Auto-Close Adjustments.....	17
DIP Switch Settings .....	18
Input Connections.....	19
Accessory Terminal Connections.....	20
Output Connections .....	21
Accessory Power Supply.....	22
Prison Mode Operation and Wiring A 3-Button Station.....	23
Reinstalling the Operator Housing .....	24
Installing a Dual System.....	25
Dual Gate Link Connection.....	25
Setting Dual Gate Sequence .....	26
Overview of a Dual Gate Operator Installation .....	27
Maintenance .....	28
Troubleshooting Guide .....	29
Warranty and Repair Service .....	32
Installation Checklist.....	Back Cover

## SAFETY INSTRUCTIONS FOR THE GP-SL100 SLIDE GATE OPERATORS

Because automatic gate operators produce high levels of force, all system designers, installers, and consumers have an obligation to know the potential hazards associated with improperly designed, installed, or maintained gate operator systems. *Keep in mind that the gate operator is just one component of the total gate operating system.* Each component must work in unison to provide the consumer with convenience, security, and safety.

This manual contains various safety precautions and warnings for the system designer, installer, and consumer. Because there are many possible applications of the gate operator, the safety precautions and warnings contained in this manual cannot be completely exhaustive in nature. They do, however, provide an overview of the safe design, installation, and use of this product. **CAREFULLY READ AND FOLLOW ALL SAFETY PRECAUTIONS, WARNINGS, AND INSTALLATION INSTRUCTIONS TO ENSURE THE SAFE SYSTEM DESIGN, INSTALLATION, AND USE OF THIS PRODUCT.**

The precautions and warnings in this manual are identified with these   warning symbols.

This  symbol identifies the conditions that can result in serious injury or death from electrical shock.

This  symbol identifies the conditions that can result in damage to the operator or its components, serious injury, or death.

**Because GTO automatic gate operators are only part of the total gate operating system, it is the responsibility of the designer, installer, and purchaser to ensure the total system is safe for its intended use. Bypassing safety devices or neglecting to use safety devices with the gate operator is NOT acceptable.**

## IMPORTANT SAFETY INSTRUCTIONS for the System Designer

### **WARNING: To reduce the risk of injury or death:**

1. **READ AND FOLLOW ALL INSTRUCTIONS.**
2. This operator is intended for use only on vehicular gates. Pedestrians must be supplied with a separate walk-through gate (*see **Entrapment Protection** on page 5*).
3. When designing a system that will be entered from a highway or main thoroughfare, make sure the system is placed far enough from the road to prevent traffic congestion.

# IMPORTANT SAFETY INSTRUCTIONS For the Installer

## WARNING—To reduce the risk of injury or death:

### I. Before Installation

1. **READ AND FOLLOW ALL INSTRUCTIONS.**
2. Verify this operator is proper for the type and size of gate, and its frequency of use.
3. Make sure that the gate has been properly installed and slides freely in both directions. Repair or replace all worn or damaged gate hardware prior to installation. A freely moving gate will require less force to operate and will enhance the performance of the operator and safety devices used with the system.
4. All openings of a horizontal slide gate must be guarded or screened to prevent a 2 1/4 inch diameter sphere from passing through openings anywhere in the gate. This screen (or guard) must also be installed over the portion of adjacent fence that the gate covers in the open position (*see page 5*).
5. This gate operator is intended for vehicular gates ONLY. A separate entrance or gate must be installed for pedestrian use (*see page 5*). **NO ONE SHOULD CROSS THE PATH OF A MOVING GATE.**

### II. During Installation

1. Install the gate operator on the inside of the property and fence line. DO NOT install an operator on the outside of the gate where the public has access to it.
-  2. Be careful with moving parts and avoid close proximity to areas where fingers or hands could be pinched.
-  3. Determine the best obstruction sensing setting for this installation. The gate MUST stop and reverse on contact with an obstruction. After adjusting the force or the limit of travel, retest the gate operator. **Failure to adjust and retest the gate operator properly can increase the risk of injury or death** (*see page 17*).
-  4. **Additional safety equipment such as photo beams, safety edges and roller guards MUST be installed to prevent bodily injury** (*see page 9*).
-  5. Mount access controls away from the gate (**minimum** distance is 10 feet). The user must have full view of the gate but be unable to touch it while operating the controls.
6. Secure outdoor or easily accessed gate operator controls in order to prohibit unauthorized use of the gate.

### III. After Installation

1. Review **ALL** safety instructions with the consumer/end user and explain the basic operation and safety systems of the entire gate operator system.
2. Inform the consumer/end user that servicing of the operator must only be done by an *experienced technician*.
3. Attach the warning signs (included) to each side of the gate to alert public of automatic gate operation. Take a photo of warning signs installed on gate. Record the date of the photo for your reference.
4. **SAVE THESE INSTRUCTIONS.** Leave **IMPORTANT SAFETY INSTRUCTIONS** (included) with consumer/end user.

# IMPORTANT SAFETY INSTRUCTIONS Specific to Secondary Means of Protection Against Entrapment

As specified by Underwriters Laboratories Inc. UL 325 (30A.1.1), automatic gate operators shall have *provisions for, or be supplied with*, at least one independent primary and one independent secondary means to protect against entrapment. GTO gate operators utilize **Type A**, an inherent entrapment sensing system, as the **primary** type of entrapment protection. The GP-SL100 operators have provisions for the connection of **Type B1, B2, or D** protection to be used as the *secondary* type of entrapment protection.

1. For gate operators utilizing a non-contact sensor (Type B1) in accordance with UL 325 (51.8.4 [h]):
  - A. Refer to the sensor *manufacturer's instructions* on the placement of non-contact sensors for each type of application.
  - B. Care shall be exercised to reduce the risk of nuisance tripping, such as when a vehicle trips the sensor while the gate is still moving.
  - C. One or more non-contact sensors shall be located where the risk of entrapment or obstruction exists, such as the perimeter reachable by a moving gate or barrier.
2. For gate operators utilizing a contact sensor (Type B2) in accordance with UL 325 (51.8.4 [i]):
  - A. One or more contact sensors shall be located at the leading edge, trailing edge, and post mounted both inside and outside of a vehicular slide gate system.
  - B. A hard wired contact sensor shall be located and its wiring arranged so that the communication between the sensor and the gate operator is not subjected to mechanical damage.
  - C. A wireless contact sensor such as one that transmits radio frequency (RF) signals to the gate operator for entrapment protection functions shall be located where the transmission of the signals are not obstructed or impeded by building structures, natural landscaping or similar obstruction. A wireless contact sensor shall function under the intended end-use conditions.
3. For gate operators utilizing an actuating device requiring continuous pressure to maintain opening or closing motion of the gate (Type D) in accordance with UL 325 (51.8.4 [e]):
  - A. The gate operator controls must be placed so that the user has full view of the gate area when the gate is moving.
  - B. Warning signs (*see page 6*) shall be placed adjacent to the controls.
  - C. An automatic closing device (timer, loop sensor, etc.) shall not be employed.
  - D. No other activation device shall be connected.

## ENTRAPMENT ALARM (UL 325; 30A.1.1A)

The GP-SL100 operators are designed to stop and reverse for 2 seconds when the gate comes in contact with an obstruction or when an object activates the non-contact sensors. Additionally, these operators are equipped with an **audio entrapment alarm** which will function if the unit obstructs **twice** while opening or closing. This alarm will sound for a period of 5 minutes or until the operator receives an intended signal (e.g., transmitter signal) and the gate returns to a fully open or fully closed position.

# Important Safety Instructions for the Consumer/End User



**WARNING: To reduce the risk of injury or death:**

-  **1. READ AND FOLLOW ALL INSTRUCTIONS.**
-  **2.** Distribute and discuss copies of the **IMPORTANT SAFETY INSTRUCTIONS** manual with all persons authorized to use your gate. **SAVE THESE INSTRUCTIONS.**
-  **3.** Always keep people and objects away from the gate and its area of travel. **NO ONE SHOULD CROSS THE PATH OF THE MOVING GATE.**
-  **4.** Your automatic gate is not for pedestrian use. If pedestrian traffic is expected near the gate, a walk-through gate must be installed for this purpose (*see page 5*).
-  **5.** Do not allow children or pets near your gate. **Never let children operate or play with gate controls.** Keep the remote controls away from children and unauthorized users; store controls where children and unauthorized users do not have access to them.
-  **6.** If push buttons or key switches are installed, they should be within sight of the gate, yet located far enough from the gate (at least 10 feet) so the gate cannot be touched while in operation. Do not operate any control without watching the movement of the gate.
-  **7.** Do not activate your gate operator unless you can see it and can determine that its area of travel is clear of people, pets, or other obstructions.
-  **8.** If your gate has open rollers, be sure that roller guards have been installed to prevent hands and fingers from being caught in the rollers (*see page 5*).
-  **9.** It is your responsibility to make sure that the installer posted warning signs on both sides of your gate. If any of these signs or warning decals become damaged, illegible or missing, replace them immediately. Contact your installer or GTO for replacements.
-  **10.** Verify that electric safety edge sensors or photoelectric sensors have been installed (*see page 5*). These safety devices should be tested monthly.
-  **11.** **KEEP GATES PROPERLY MAINTAINED.** Have a qualified service person make repairs to the gate hardware. **NEVER REMOVE THE OPERATOR HOUSING.**
-  **12.** **DANGER: HIGH VOLTAGE! Contact with gate operator circuitry can cause serious injury or death! DO NOT** attempt to service this operator yourself; for service, contact your installer or another experienced technician.
-  **13.** Have your gate operator tested monthly and serviced regularly by an experienced technician. The gate **MUST** stop and reverse on contact with an obstruction or when an object activates the non-contact sensors. If these functions are observed to operate improperly, discontinue use and have operator serviced immediately.

# Required Safety Precautions for Gates

## Install Screen Guard Over Gate and Fence

Injuries may occur when people put their hands, arms, legs, etc., through openings in the grill when the gate is operated, trapping them between the grill and the fence post (or fence). All openings of a horizontal slide gate must be guarded or screened to prevent a 2 1/4" diameter sphere from passing through openings anywhere in the gate. This screen/guard must also be installed over the portion of adjacent fence that the gate covers in the open position. Screening will prevent access through openings in areas where the gate travels.

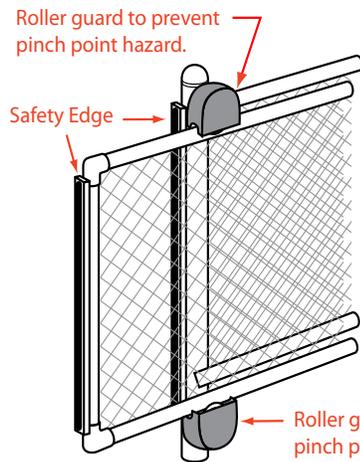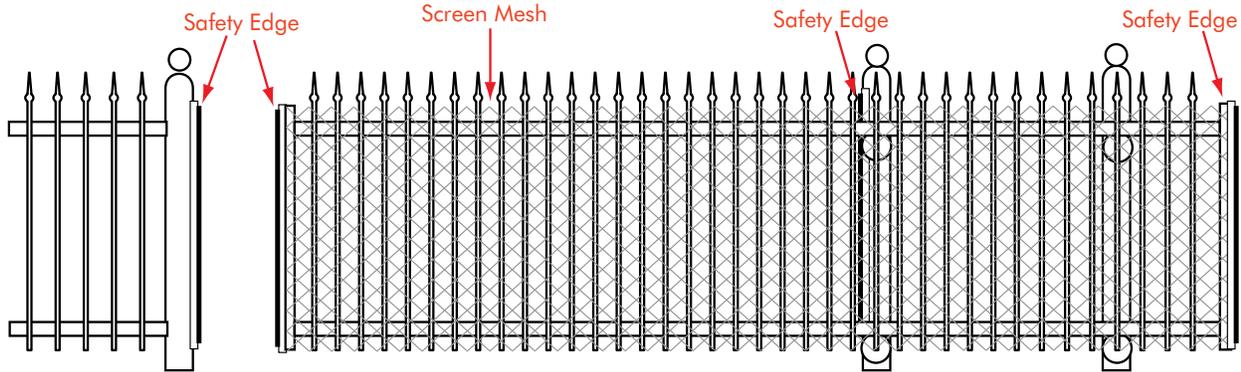

## Roller Guards

Injuries occur when hands become caught between the gate and the roller. Roller guards and enclosed tracks must be installed to prevent this pinch point hazard.




## Warning Signs

The warning signs (with orange panel) must be installed on both sides of the gate.

## Entrapment Protection

GTO's internal obstruction settings, even when properly adjusted, may not be sensitive enough to prevent bodily injury. For this reason, safety devices such as safety edges and photo beams **MUST** be installed. Furthermore, a walk-through gate must be installed if pedestrian traffic is expected near the gate. We recommend the GTO Bulldog Pedestrian Gate Lock (available as an accessory) for controlled access.

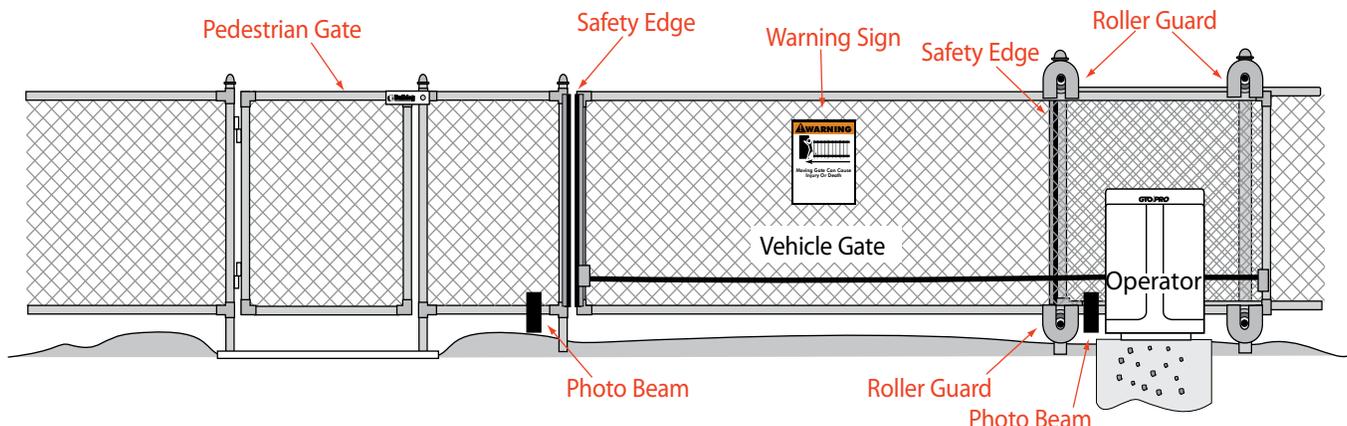


# Warning Labels


These warning signs and labels should be found at the locations specified below. If any of them are missing, immediately contact your installer for replacements.



warning signs (2) to be installed on each side of the gate (3–5 feet above the bottom of the gate)

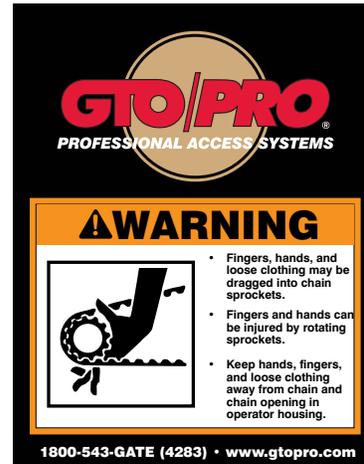

warning label (1) installed on operator housing

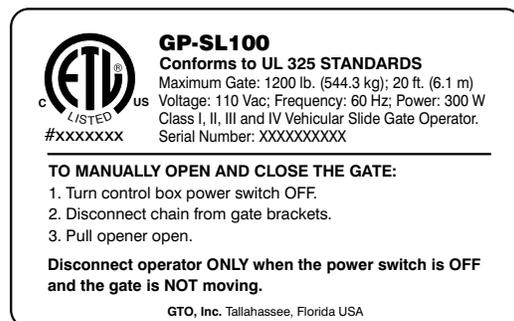

Product identification and manual operation instruction label (1) installed on cover.

# Technical Specifications

## Motor

- Brushless DC motor 24VDC 300 watts
- ½ Horsepower
- Maximum motor current 20Amp
- 2500 RPM
- Open and close time 1 ft/sec

## Gear Reducer

- Aluminum Cased 25:1 size 50 worm reducer with ball bearings.
- Permanently lubricated with synthetic gear oil – oil specifications 5w-30, Mobil 1 recommended

## Power

- 120 vac @60 Hz with inherent 24 vdc battery backup
- Batteries are required – two 12 vdc, U1, 230A minimum cold crank amps wired together in series.
- 100 cycles in backup typical for minimum size battery.
- 15 amp circuit breaker on dedicated circuit
- On board 120 vac outlet for accessories that pull no more than 1 amp of current

## Control

- Microcontroller based logic control board
- Adjustable autoclose
- Independent obstruction settings
- Diagnostic LED's & Audible Alarms
- Accessory terminals compatible with loop detectors, photo beams, edge sensors, push buttons, card readers, exit wands, etc.
- Relay Outputs
- On board Open and Close buttons
- Jog Buttons

## Construction

- Heavy duty steel frame rotomolded UV stabilized HDPE cover
- RB207-20 #41 Chain, 20ft (6.1m)

## Operational Capacity

- Continuous duty operations
- Max rating: 32 foot opening for 37 foot gate @ 1200 lbs
- Dual Gate compatible using two conductor 22 AWG shielded wire rated for direct burial. Recommended Belden Wire®, 22 AWG, type 8761, 9461, 9451, 1266A or equivalent. 1-pair shielded with drain wire. Available at electrical supply store.

## Dimensions

- Housing Dimensions: height 27 in (68.7 cm), depth 18 in (45.7 cm), width 15 in (38 cm), shipping weight: 80-85 lbs
- Concrete Pad Dimensions: 18 in x 18 in, (45.7 cm x 45.7 cm). Consult local building codes for depth below ground level. Absolute minimum depth 18 in (45.7 cm) below ground level.

## Operational Temperature:


- In colder climates (ambient temperatures less than 10 degrees) GTO recommends the use of a thermostatically controlled heating source (ceramic heating strips, etc.) on the batteries and gearbox assembly. Styles, types, and power requirements of heating devices will vary by climate and region.

## Warranty:

- **Residential** (7) years for mechanical parts, (5) years electronic components
- **Commercial** (5) years for mechanical parts, (3) years electronic components

# Parts Identification

## GTO/PRO AC Slide Gate Operator Parts

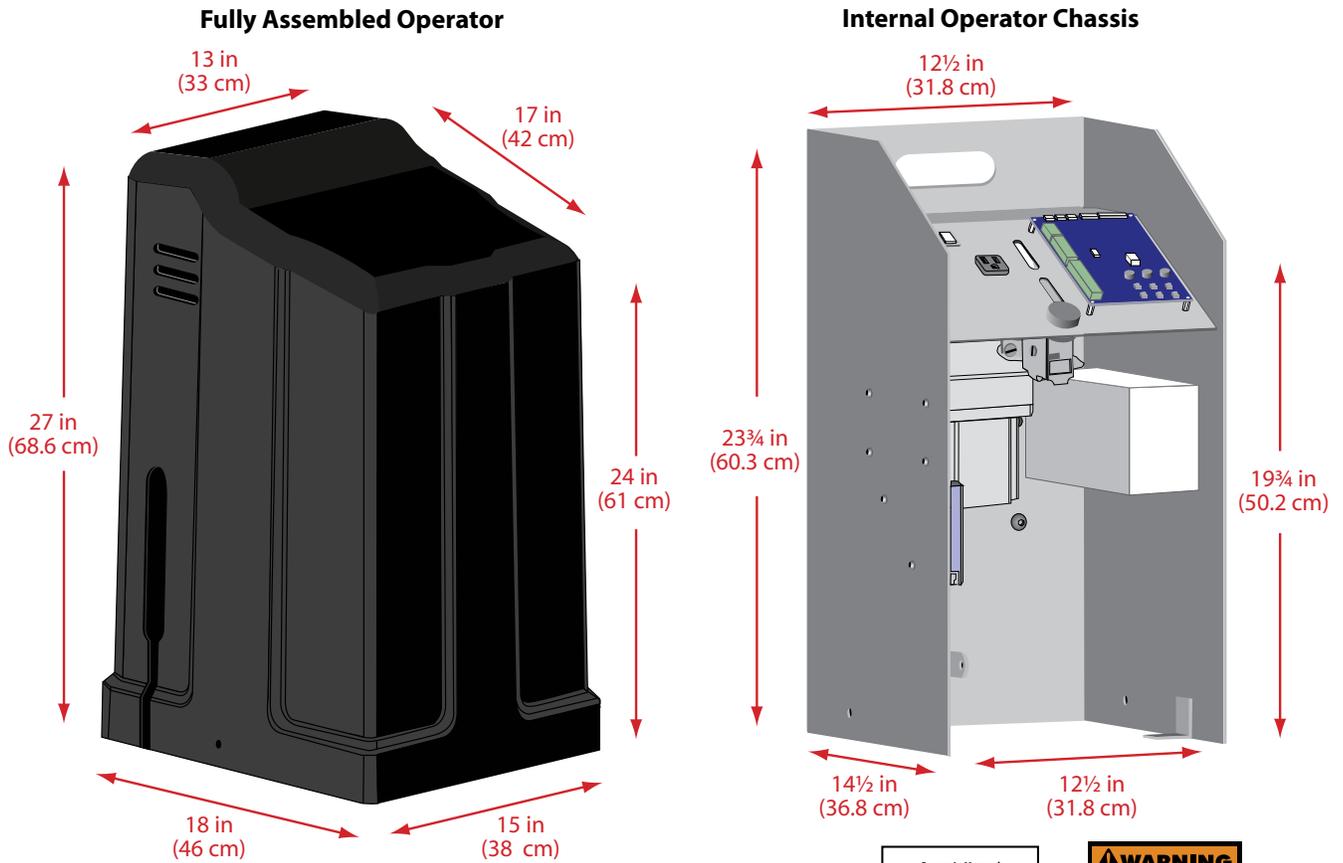

**NOTE:** GTO receiver (RB709U), batteries (12vdc, U1, 230A minimum) not included. Must order separately.




Owner's Manual




Gate Warning Signs (one for each side)

## Hardware

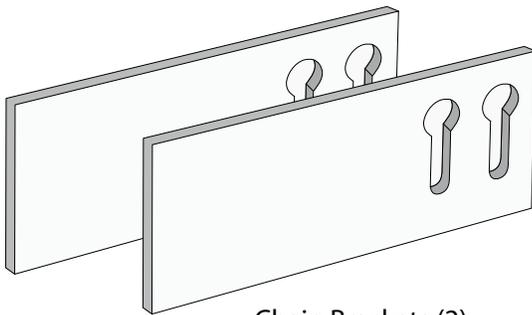

Chain Brackets (2)

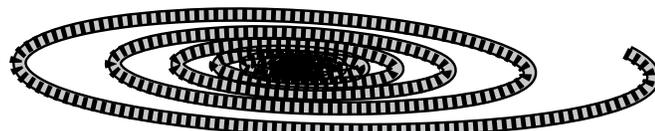

20ft (6.1m) No. 41 Chain (1)



1/2" Nut (4)



Chain Adjuster Bolts (2)



Washers (2)



Hex Bolts (2)



Ty Wraps (8)

# Installing the Gate Operator

This unit must only be installed by an experienced technician.

## Preparation of the Gate


Before installing the GTO/PRO slide gate operator, make sure:

- the gate is properly installed.
- the gate is plumb, level, and moves freely.
- the gate does not bind or drag on the ground.
- the gate is screened if necessary (see page 5.)
- roller guards are installed (see page 5.)

## Overview of a Single Gate Operator Installation

The diagram below is an example of a single slide gate installation with required safety features. The operator must be installed on the inside of the gate. **You must install safety edges, photo beams and roller guards (not included) to reduce the possibility of bodily injury.**

**NOTE:** A separate gate or entrance must be installed for pedestrian use.

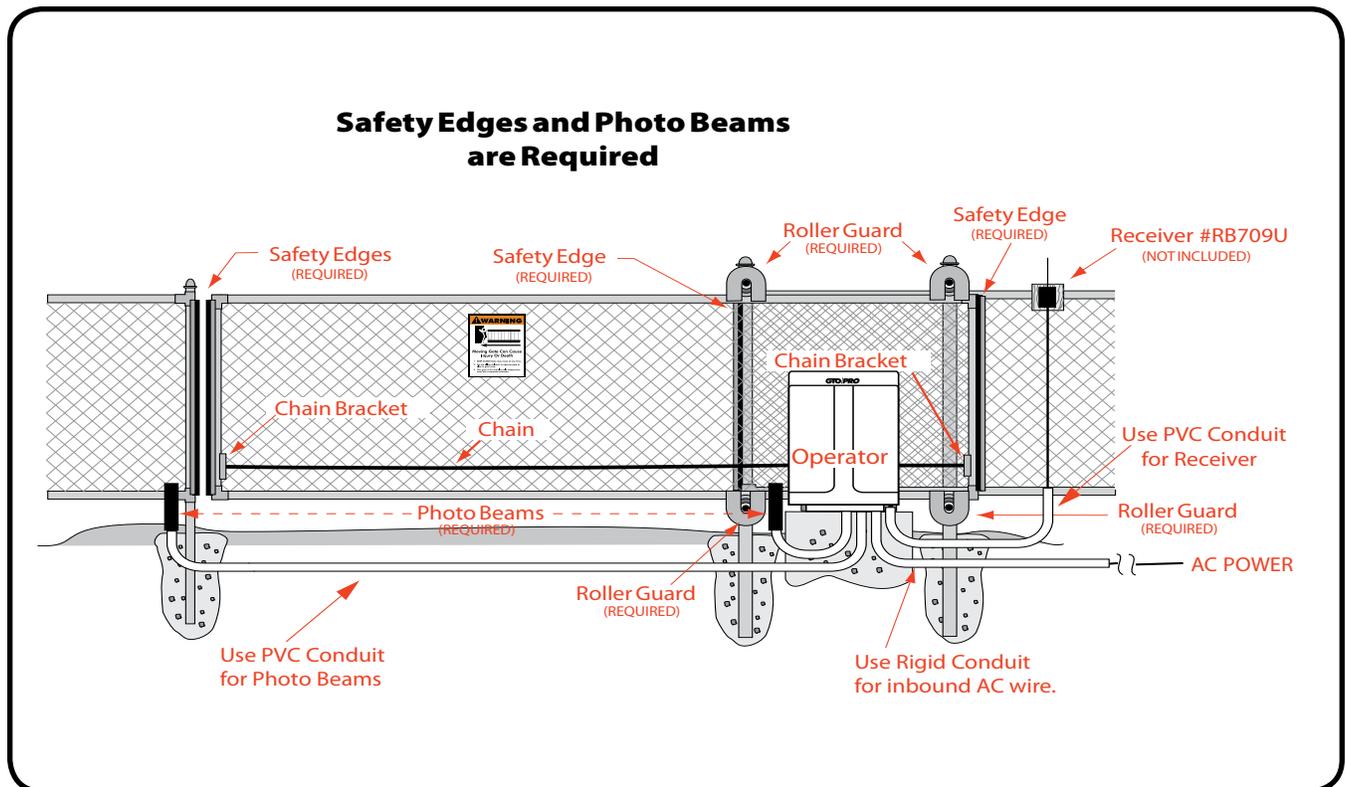

# Using the Mounting Template


The mounting template (*see insert*) is designed to simplify mounting the operator. It provides the installer with the proper locations for running power and accessory wiring conduits. The template is also marked with the correct distance between the operator mounting holes and shows the installer how to position the operator for the correct clearance between the housing and the gate.

**NOTE:** The operator must be securely mounted on a level concrete pad. If you do not have an existing pad to work with, be sure to install wiring conduit before pouring concrete. You must use (5) 3/8" diameter wedge type mounting anchors, washers, and nuts (not included) to mount the operator on the pad.


Study the mounting template. Lay the mounting template on the level concrete pad and mark the pad according to the instructions on the template.

Before mounting the operator, check the following:

- The concrete pad is level.
- (5) 3/8" diameter mounting anchors are in their correct positions.
- Conduit for power and accessory wiring is installed.

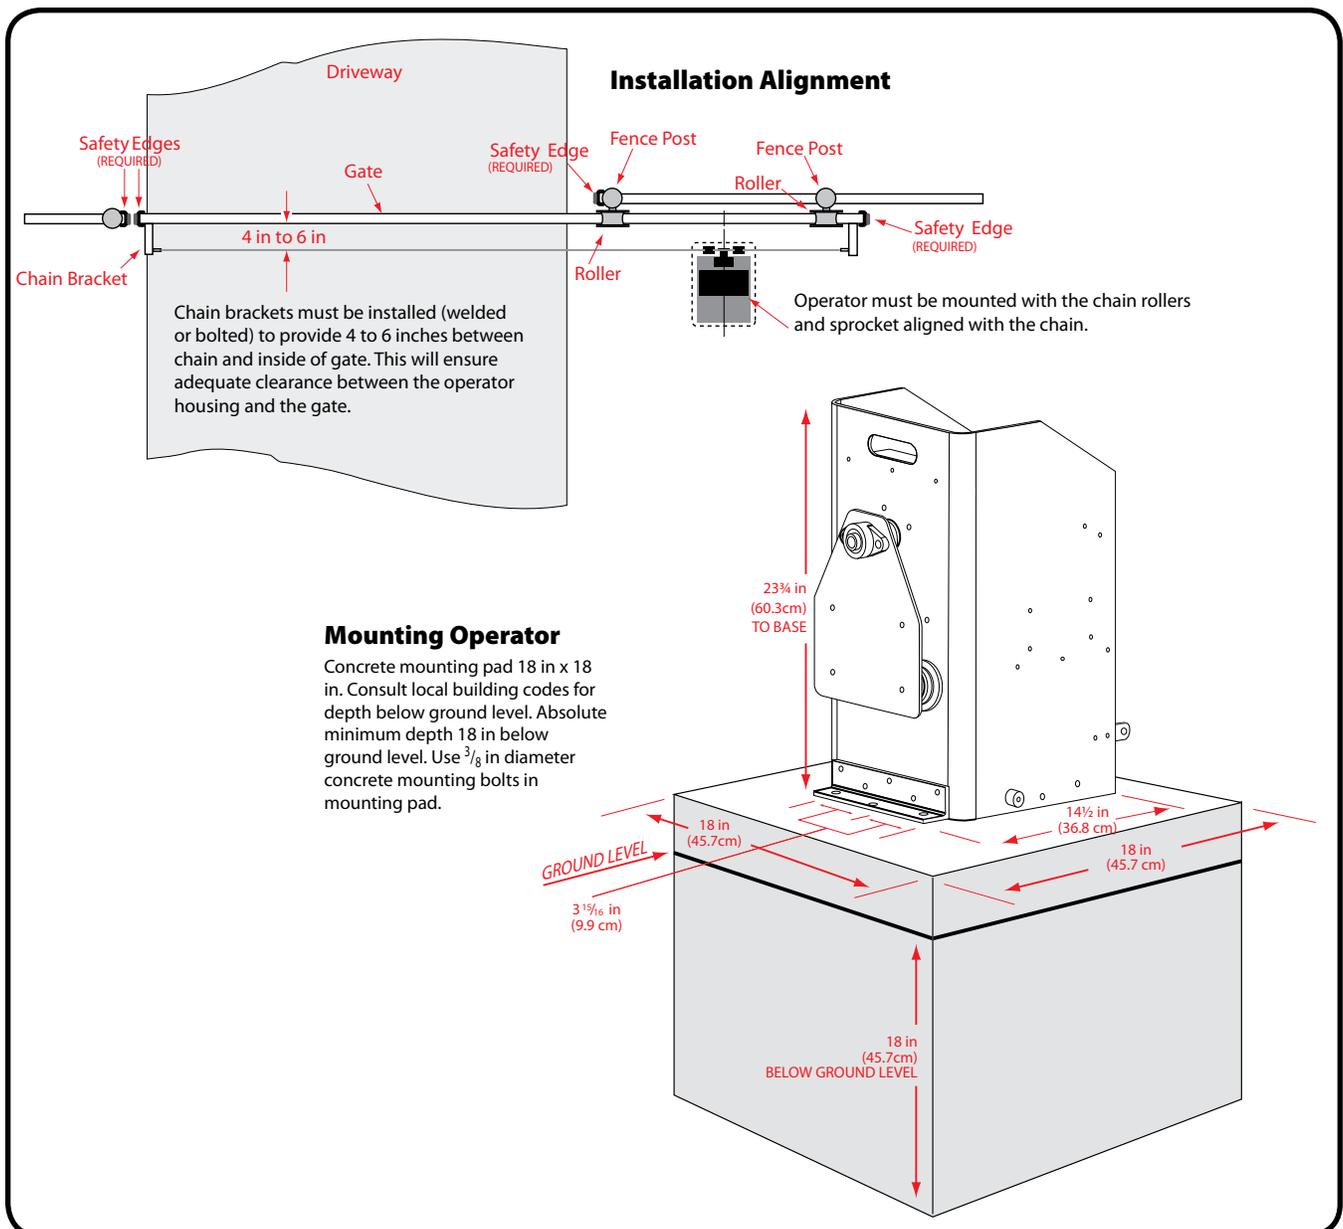


# Mounting Template (NOT TO SCALE)

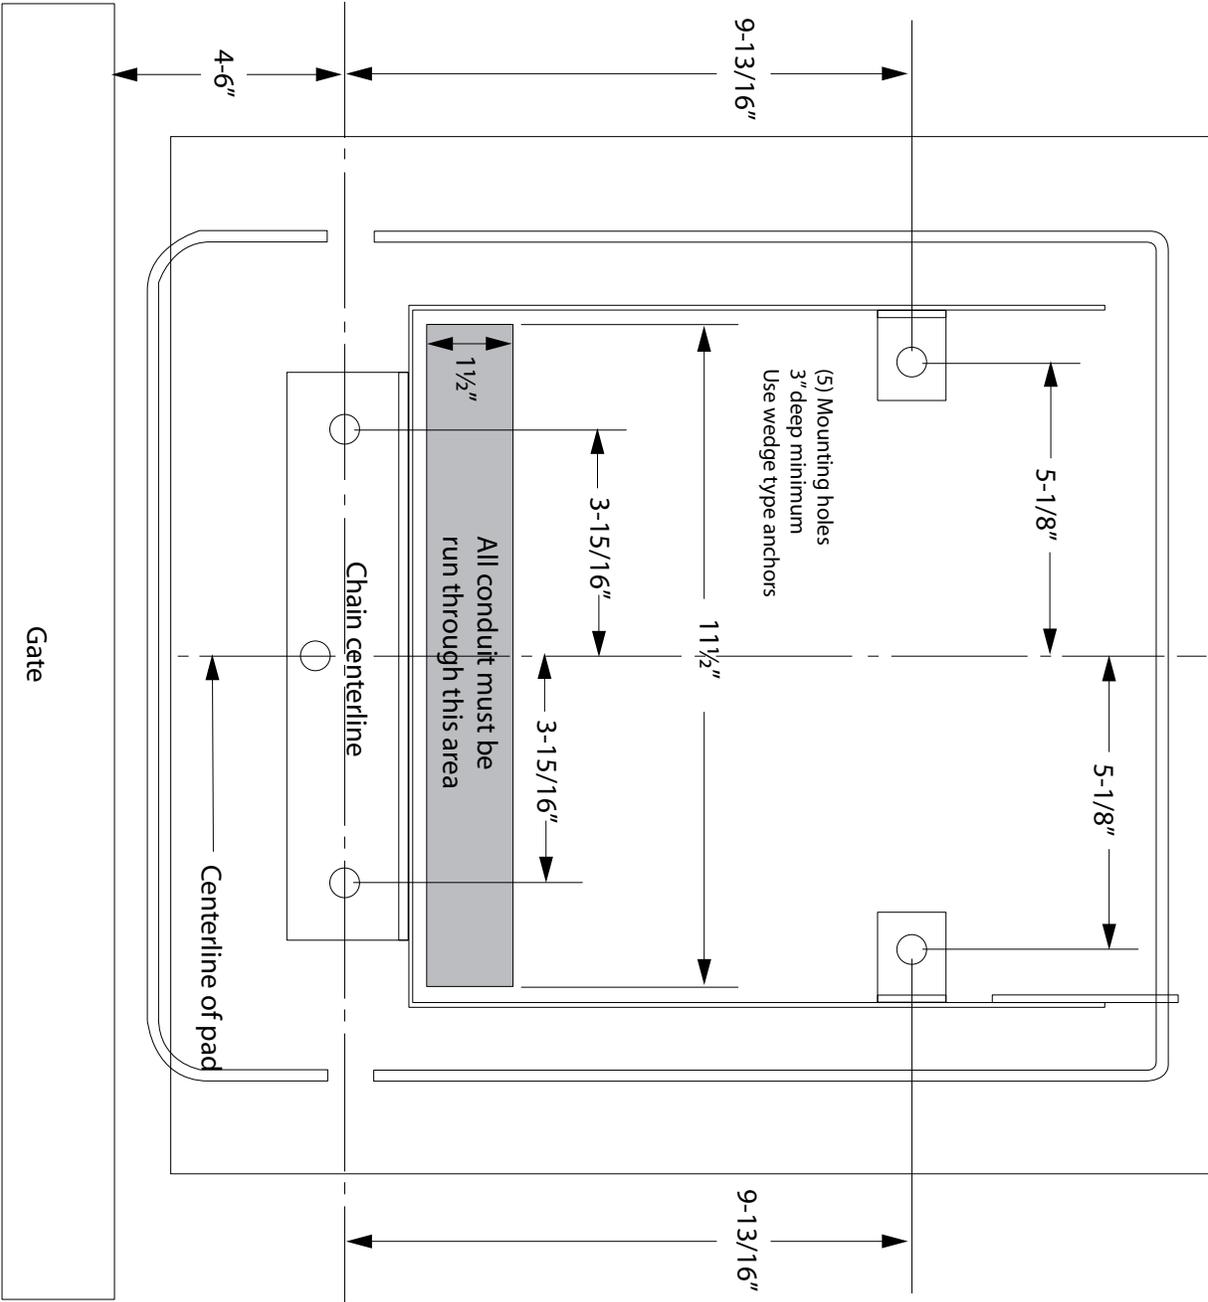

# Removing the Operator Housing

Before you can gain access to the operator frame and its mounting holes, the housing will have to be removed from the operator.

1. Remove the (2) 3/8" allen bolts and (2) m8 washers from the operator housing (this hardware is located on each side of the housing).
2. Lift the housing off the operator and set it aside.

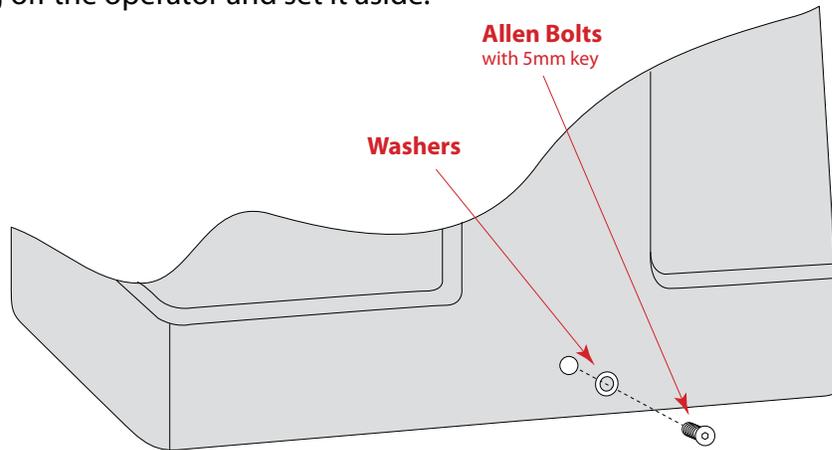

# Mounting the Operator


1. Lift the operator and align its mounting holes over the 3/8" diameter concrete mounting anchors.
2. Lower the operator into position and fasten it to the mounting anchors with (4) 3/8" washers and nuts (not provided).

# Connecting Power to the Operator

1. Turn the breaker power switch off before connecting AC power. Have a licensed electrician run 115 Vac wiring into the Field Wiring Connection Compartment. The 115 Vac line will power the gate operator system. The circuit must be protected with a 15 A main disconnect breaker (not provided).


 **NOTE:** Power and wiring connections *MUST* be performed by a licensed electrician in accordance with NEC (National Electric Code) and local codes.

 **NEVER** run low voltage (e.g., accessory or receiver) wires in conduit containing 115 Vac wiring.

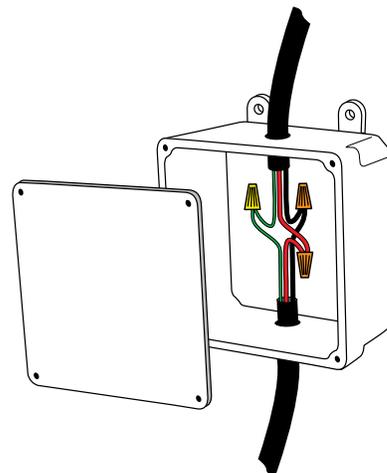

2. Connect batteries to operator as shown. The red wire connects to the positive terminal in the control box. The black wire connects to the negative terminal in the control box. The jumper wire (included) connects both batteries together with the remaining terminals. Wire the 24V system in series as shown below.
3. Turn on AC power at this time.

 **NOTE:** Battery should be a 12 Vdc, U1, 230 Amp Minimum, Lead Acid Battery (Typical Lawn and Tractor Battery).

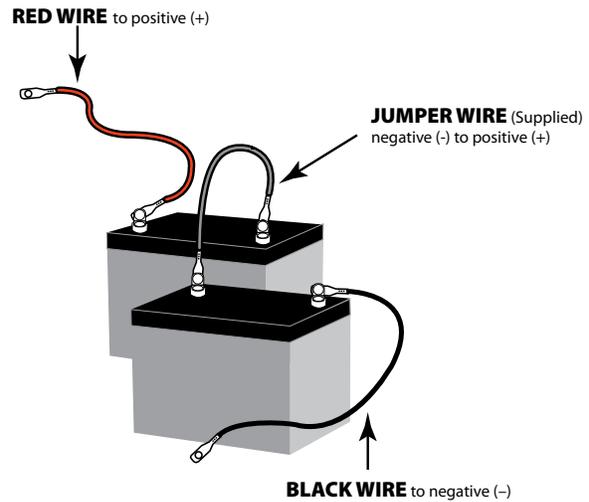


## Installing the Chain

 **NOTE:** All work on chain requires disconnecting AC power and batteries !


1. Make sure the operator power switch is **OFF**.
2. Set '**OPTIONS**' **DIP** switch #1 to select the proper open direction of the gate.
3. Set the operator power switch to the '**ON**' position.
4. Press and release the '**OPEN**' button on the board and allow the operator to run until the '**AT OPEN LIMIT**' **LED** is on. (Note: The '**STALL FORCE**' potentiometer may have to be increased if the operator will not run).
5. The '**AT OPEN LIMIT**' **LED** should be on when the operator reached the open limit and stopped.
6. Turn **OFF** operator power.

**NOTE:** When first turning operator power switch on, the unit may beep once every 5 seconds until the new batteries can be fully charged (30-60 minutes charging time).

7. Bolt or weld (when correct position is determined) the chain brackets (included) on the operator side of the gate (see illustration below).
8. Insert a chain adjuster bolt (included) in each bracket. Secure chain adjuster bolt using the (2) nuts (included), as shown. Do not overtighten the nuts; they will be used to adjust chain tension.
9. Pull the gate to the desired open position.
10. Attach chain to one chain adjuster bolt. Use #41 chain with the GP-SL100.
11. Thread chain through chain sprockets. Attach chain to second chain adjuster bolt. Allow a minimum of 1 inch slack in chain for every 10 feet of gate.
12. Chain adjuster bolts: adjust outside nut until desired chain tension is achieved. Tighten inside nut to secure bolt (see illustration below).

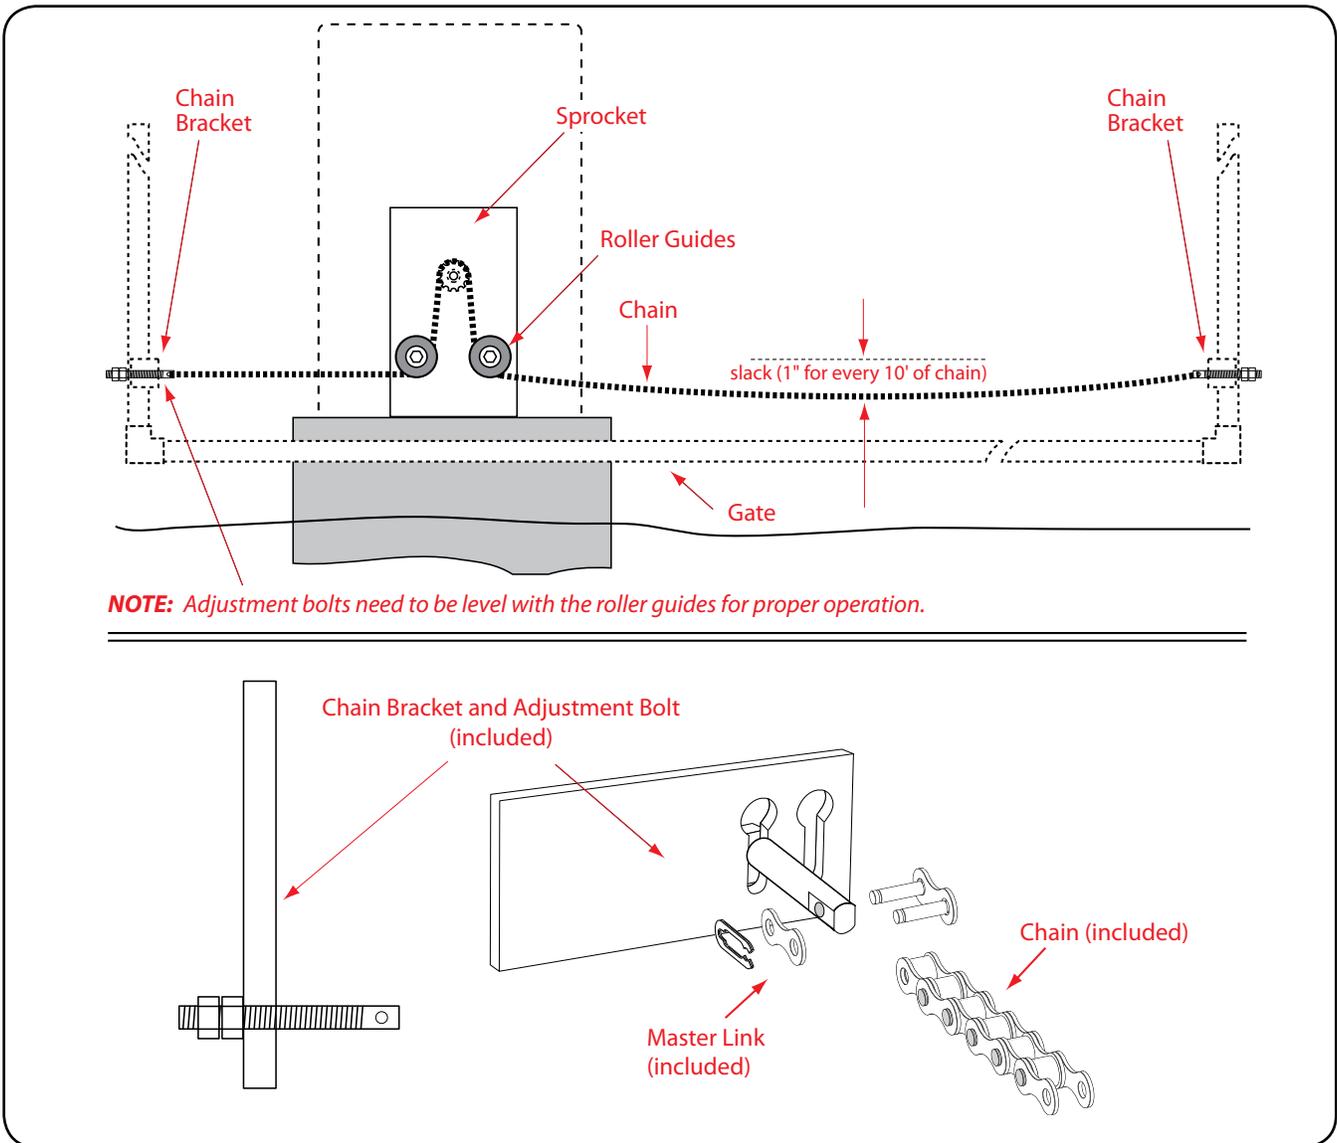


# Control Board Description

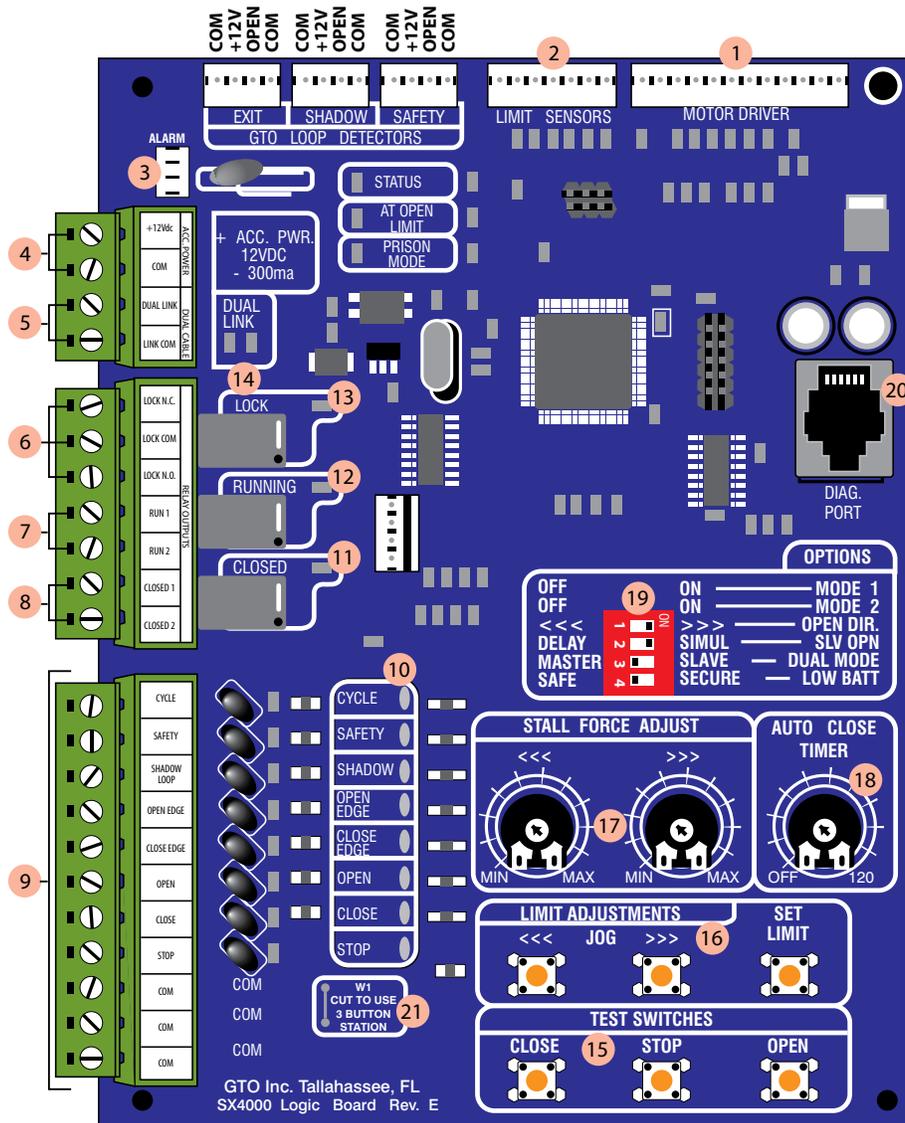

- 1 **BLDC Motor Control Connection**
- 2 **Limit Sensor Connection**
- 3 **Alarm / Buzzer Connection**
- 4 **12Vdc Accessory Power**
- 5 **Dual Link Connection**
- 6 **Relay Output** - To Control Lock
- 7 **Relay Output** - To Indicate Gate's Running
- 8 **Relay Output** - To Indicate Gate's Closed
- 9 **Logic Control Inputs**
- 10 **LED Indicators** - For control inputs
- 11 **LED Indicators** - To show 'closed' relay is on
- 12 **LED Indicator** - To Show 'Running' Relay is on
- 13 **LED Indicator** - To Show 'Lock' Relay is on
- 14 **LED Indicators** - To Show Dual Link Communication
- 15 **Test Switches** - To Control Gate Operation
- 16 **Limit Adjustment Control Switches**
- 17 **Left and Right Stall Force Adjustment**
- 18 **Auto Close Timers Adjustment Potentiometer** (OFF, 3-120 sec)
- 19 **DIP Switch Option Setting**
- 20 **Diagnostic Port** (NOT for telephone)
- 21 **W1** - for 3-button Station with Normally Close 'Stop' Button

# Setting the Limits

1. Install the chain onto the sprocket with gate at desired open position. This is the open limit of the gate.
2. Turn on operator power.
3. Press and release the **CLOSE** button on the board and be prepared to press the **STOP** button when the gate reached the desired closed position/limit.
4. The **JOG** buttons can be used to bring the gate to the precise closed position. The **JOG** buttons will slowly run the gate when pressed and stop the gate when released.
5. Once at the desired closed position, press and hold the **SET LIMIT** button for 3 seconds or until the alarm sounds and **STATUS LED** is on. At this time, release the **SET LIMIT** button.
6. Press and release the **OPEN** button on the logic board and allow the gate to run all the way to the open position. Once the gate reaches the open position, the closed limit is 'learned' and stored in 'non-volatile' memory (the logic board will 'remember' this limit when power is removed from the board).
7. Run the gate and verify that it stopped at the appropriate positions.

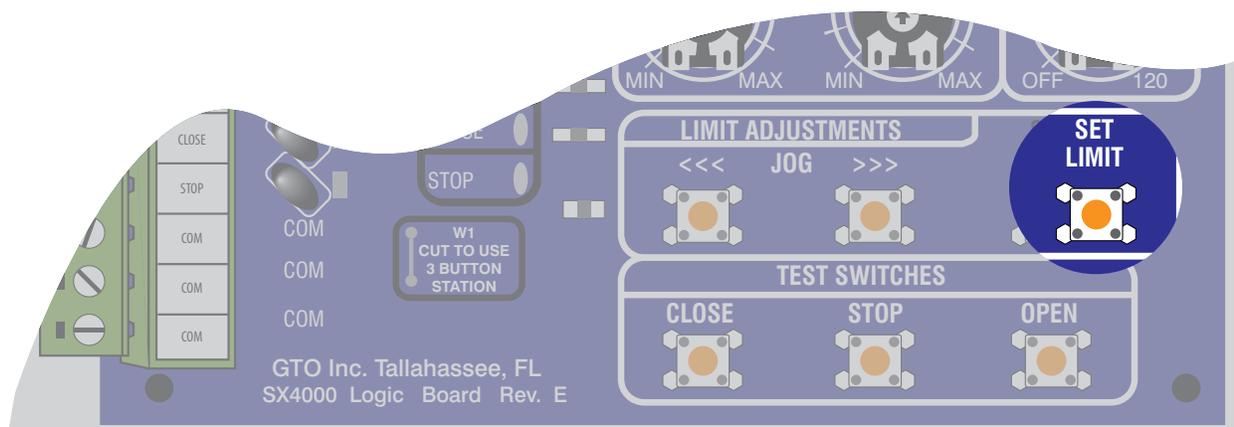


# Stall Force and Auto-Close Adjustments

## Stall Force Adjustment:

**IMPORTANT:** For safety reasons, the **STALL FORCE** potentiometers are set at the “10 o'clock” position at the factory.

The obstruction sensitivity is independently adjustable for each direction of travel. Upon sensing an obstruction, the gate will stop and reverse direction for approximately 2 seconds.

1. Turning the potentiometer clockwise (toward the MAX position) increases the amount of force the operator applies to an obstruction. Turning the potentiometer counter-clockwise (toward the MIN position) decreases the amount of force the operator applies to an obstruction.
2. Use a small screwdriver to adjust the appropriate potentiometer and operate the gate until it can run without obstructing and reversing direction.

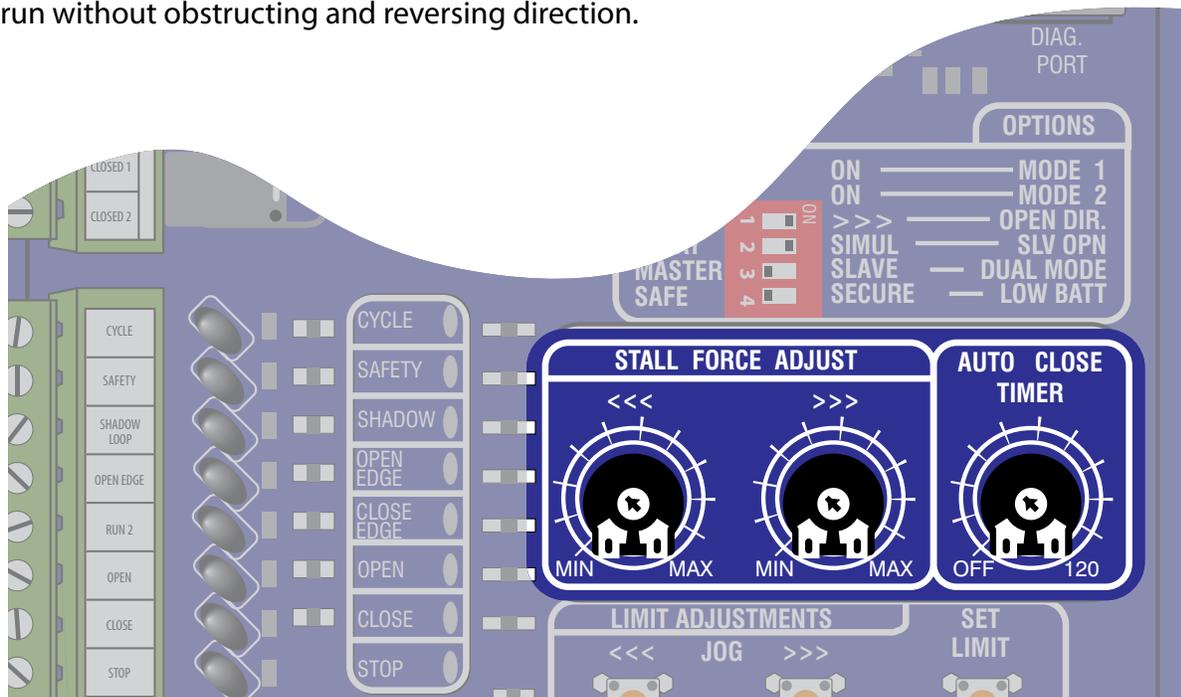

## Auto-Close Adjustment:

The **Auto-Close** potentiometer allows the user to set the time that the gate will stay at the open position/limit before it automatically starts to close the gate.

This feature can be turned off by turning the **AUTO CLOSE TIMER** potentiometer all the way counter-clockwise. It is shipped from the factory in the OFF position (auto close feature is disabled).

- The auto close time is adjustable from 3-120 seconds.
- This feature is only enabled when the gate is at the open limit.
- This feature is disabled if the following inputs are activated.
- OPEN, SAFETY, SHADOW, CLS-EDGE or STOP.

# DIP Switch Settings

## MODE 1 & MODE 2:

- Reserved for future features

## DIP #1: OPEN DIRECTION

- OFF: for gate that opens to the left, closes to the right.
- ON: for gate that opens to the right, closes to the left.

## DIP #2: SLAVE OPEN SEQUENCE (dual gate installation only)


- NOTE: This DIP switch is applicable if and only if all the following conditions are valid:
  - DIP switch #3 is OFF (Master mode)
  - Dual Link cable is connected.
  - Slave mode is detected from the second board (DIP switch #3 of the second board is ON)
- If the above conditions are not met, the board will default to single gate operation. If DIP #3 is OFF (Master)
  - OFF: Slave gate will open after the master gate.
  - ON: Slave gate will open simultaneously with the master gate.

## DIP #3: MASTER/SLAVE (applicable to dual gate installation only)


- NOTE: This DIP switch is applicable if and only if all the following conditions are valid:
  - Dual Link cable is connected.
  - The second operator is detected by the master.
- If the above conditions are not met, the board will default to single mode operation. If DIP #3 is OFF (Master)
  - OFF: Master mode operation in dual gate installation if slave setting is detected from the other board.
  - ON: Slave mode operation in dual gate installation if master setting is detected from the other board. Control board is non-functional if master operator is not detected.

## DIP #4: FAIL SAFE/FAIL SECURE OPERATION

- OFF: Fail safe mode  
When low battery and no AC power conditions are detected the gate will automatically run to the opened position. The gate will remain at the open position until AC power is restored and the battery reaches an acceptable charge level.
- ON: Fail secure mode  
When low battery is detected and no AC power is present, the gate will automatically run to the closed position. The gate will remain at the closed position until AC power is restored and the battery reaches an acceptable charge level.

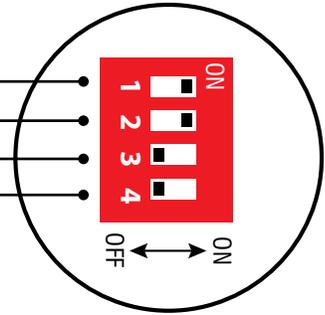

*These switches are for dual gate applications only. See page 26 for dual gate settings.*

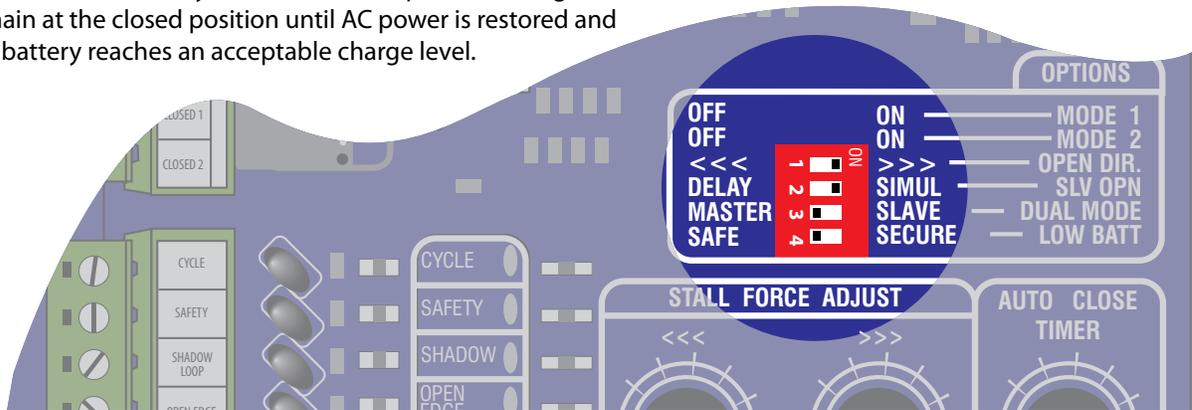

# Input Connections

## NOTE:

- All control inputs are dry-contact, normally open, inputs except for #8. *DO NOT apply external voltage sources to these inputs.*
- All inputs are connected with respect to **COMMON** terminal.
- All inputs have a corresponding LED indicator for diagnostic purposes. All input LED indicators, except for the **STOP LED**, will be dimly lit when its corresponding input is inactive and brightly lit when it is activated.

- 1 CYCLE:** (Typically for use with doorbell button or hardwired key pad)

  - Each activation at this input will cycle the operation as follows:  
... OPEN  STOP  CLOSE  STOP  OPEN  ...
- 2 SAFETY:** (Typically for use with photo beam device, loop detector or other non-contact sensors)

  - Activation of this input while the gate is closing will cause the gate to stop and return to the opened position.
  - Activation of this input while the gate is opening has no effect (gate will continue to open).
  - Activation of this input while gate is idle will prevent gate from closing.
- 3 SHADOW:** (Typically for use with loop detector device)

  - This input is only monitored when the gate is at the fully open position. At any other position, activation of this input has no effect on gate operation.
  - Activation of this input while gate at the fully open position will prevent gate from closing.
- 4 OPEN EDGE:** (Typically for use with safety edge device)

  - Activation of this input while the gate is opening will cause the gate to stop and reverse direction for approximately 2 seconds.
  - Activation of this input while the gate is closing has no effect (gate will continue to close).
  - Activation of this input while gate is idle will prevent gate from opening.
- 5 CLOSE EDGE:** (Typically for use with safety edge device)


  - Activation of this input while the gate is closing will cause the gate to stop and reverse direction for approximately 2 seconds.
  - Activation of this input while the gate is opening has no effect (gate will continue to open).
  - Activation of this input while gate is idle will prevent gate from closing.
- 6 OPEN:** (Typically for use with exit loop or wand)

  - Activation of this input will open the gate if it's not already at the open position
  - Activation of this input while at open limit will restart the auto close time (if enabled).
- 7 CLOSE:** (Typically for use with 3-button control station)


  - Activation of this input will close the gate if it is idle AND not already at the closed position.
  - Activation of this input while gate is opening will stop the gate.
- 8 STOP:** (For use with 3-button control station that has 'NORMALLY CLOSED' STOP button)

  - Activation of this input will stop the gate.
  - Jumper 'W1' must be cut when using normally closed 'STOP' button.
  - A normally closed button must be connected to 'STOP' and 'COM' in order for gate to operate.
- 9 COM:** Circuit common (reference for all logic input)

  - Three (3) terminals to provide extra common connection point.

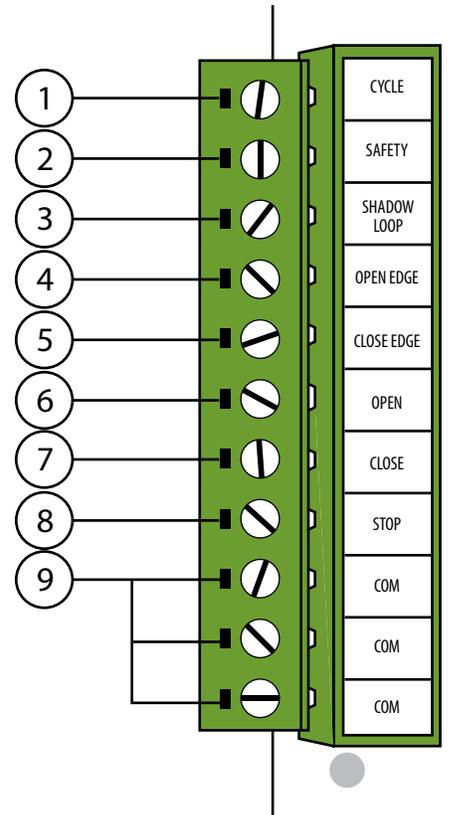

# Accessory Terminal Connections

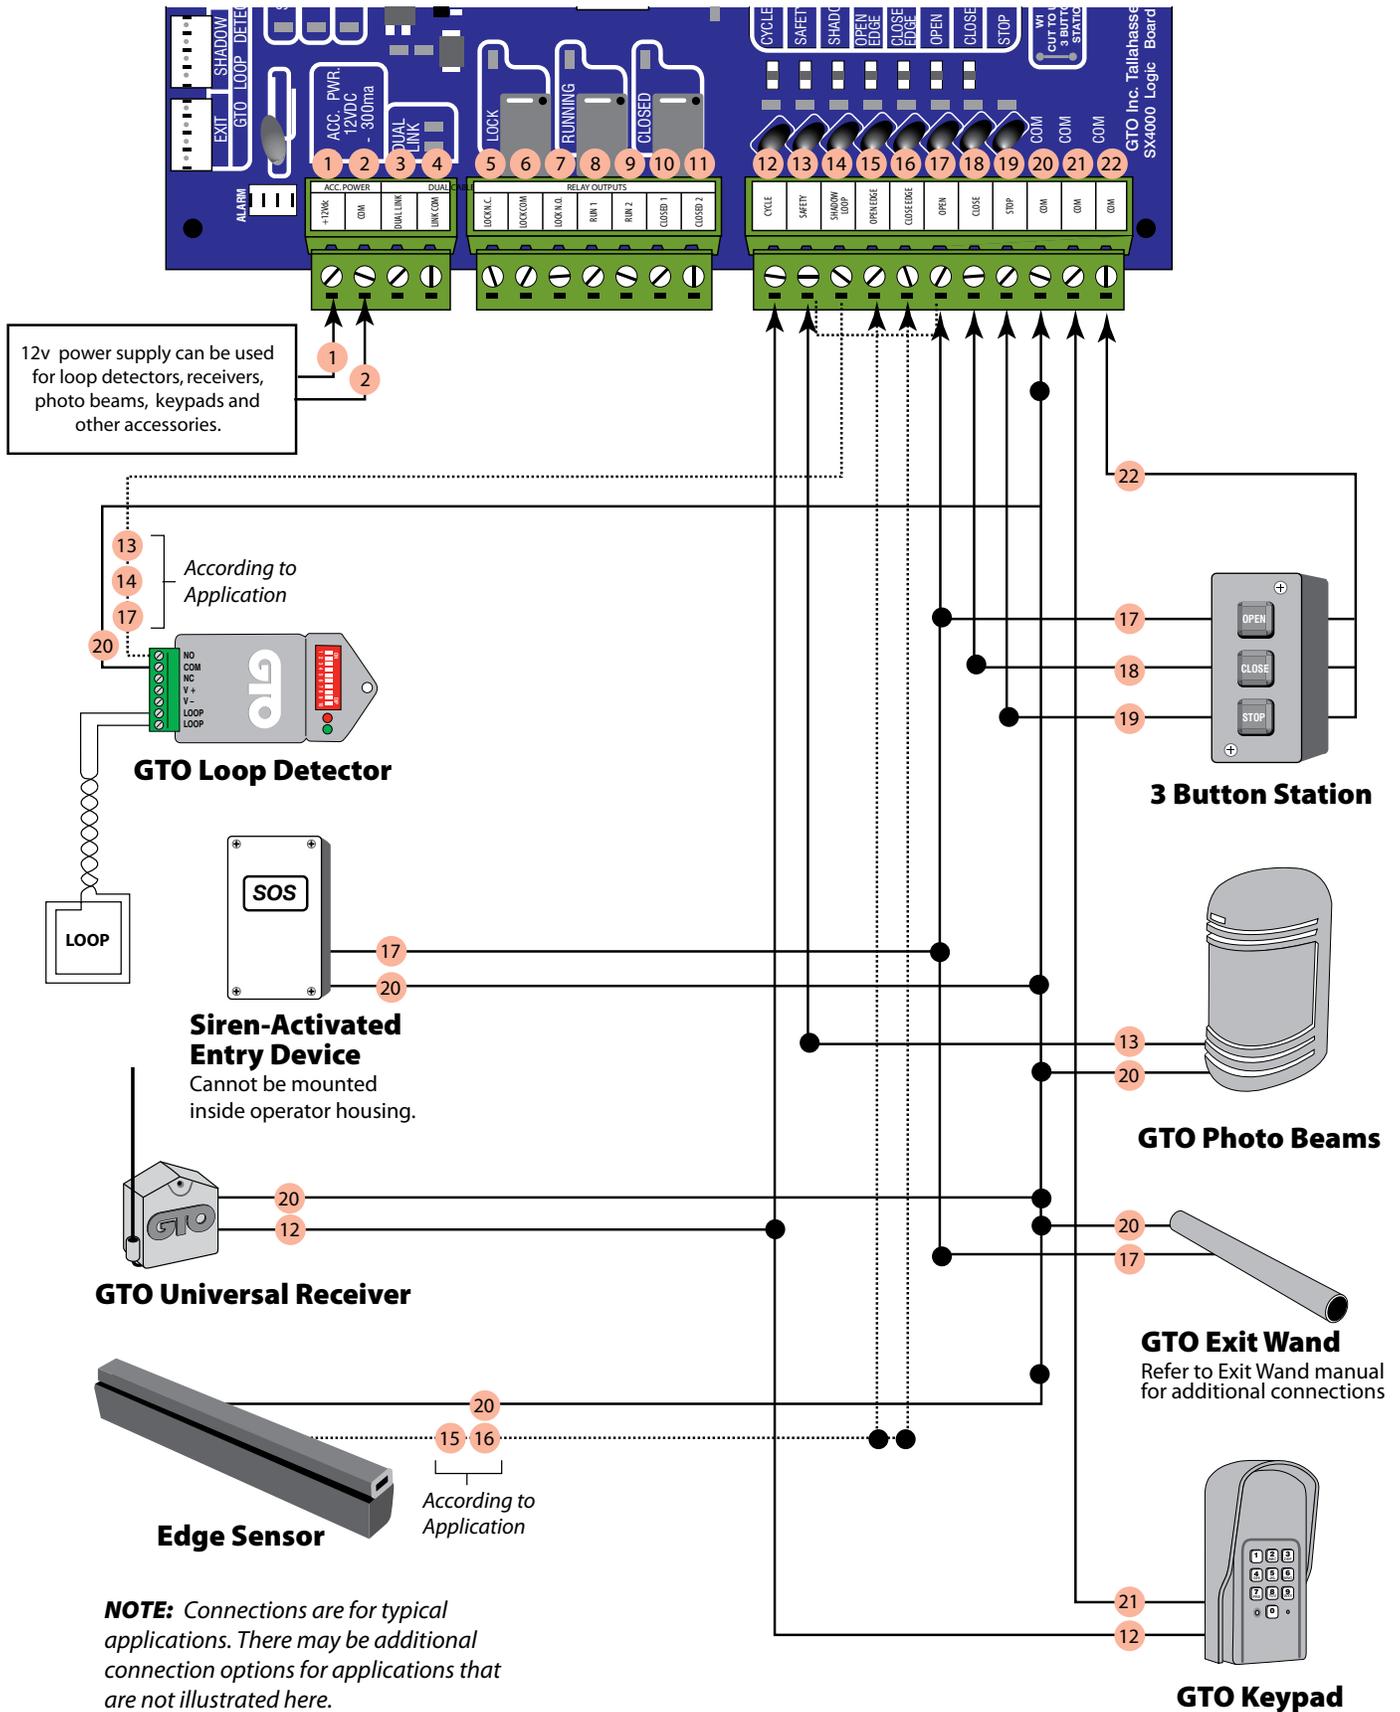

# Output Connections



## Note:

- Maximum rating for all relay outputs are 24Vac/dc, 1 Amp.
- All relay outputs are dry contact (no voltage) switching.
- All outputs have corresponding LED indicator for diagnostic purposes. The corresponding LED indicator will be lit when its relay is activated.

1. **CLOSED 1** and **CLOSED 2**: At closed limit relay output.
  - These two (2) terminals are shorted when gate is at the closed limit.
2. **RUN 1** and **RUN 2**: Gate moving relay output.
  - These two (2) terminals are shorted whenever the gate is moving/running.
3. **LOCK COM** and **LOCK N.O. / LOCK N.C.:** Lock relay output
  - This relay output is designed for use with either mechanical or mag-lock device. The relay is activated (releasing the lock) during the first and the last 2-4 seconds of gate running.


**Example A:** Mag-Lock Connection: Use **LOCK COM** and **LOCK NC** terminals. The diagram below is for a typical mag-lock connection. Refer to the mag-lock manual for detailed operations.

**Example B:** For locks that are energized to release: Use **LOCK COM** and **LOCK NO** terminals.

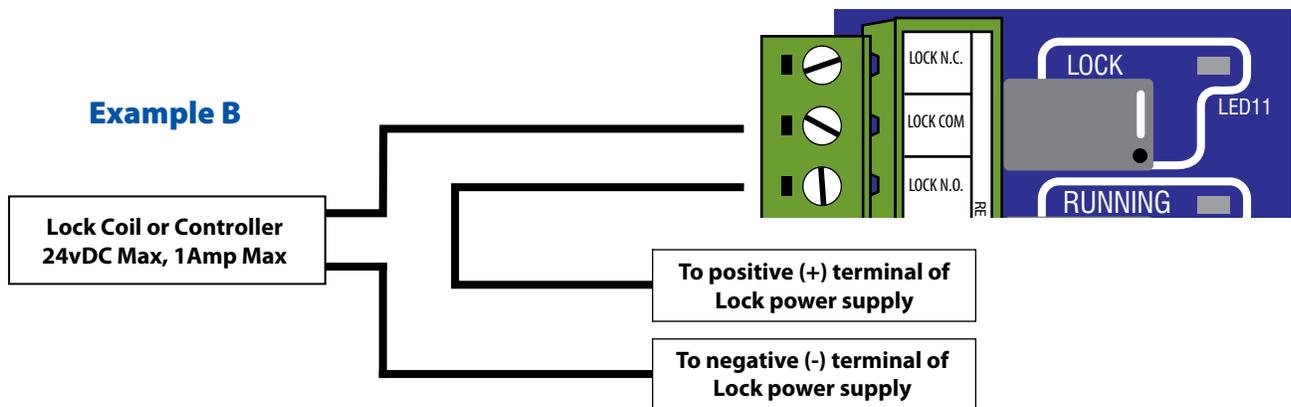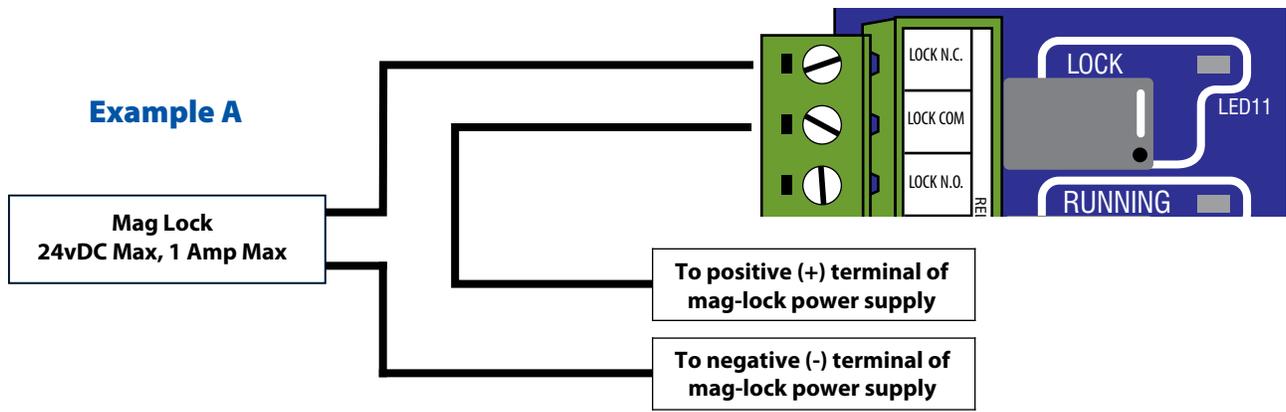

# Accessory Power Supply Connection

- 12Vdc @ 300 mA (.3A) maximum power supply for additional accessories.
- If you lose power to your accessories, the accessories are protected by a poly-fuse. Disconnect accessories and allow poly-fuse to cool down for 2 minutes before reconnecting.

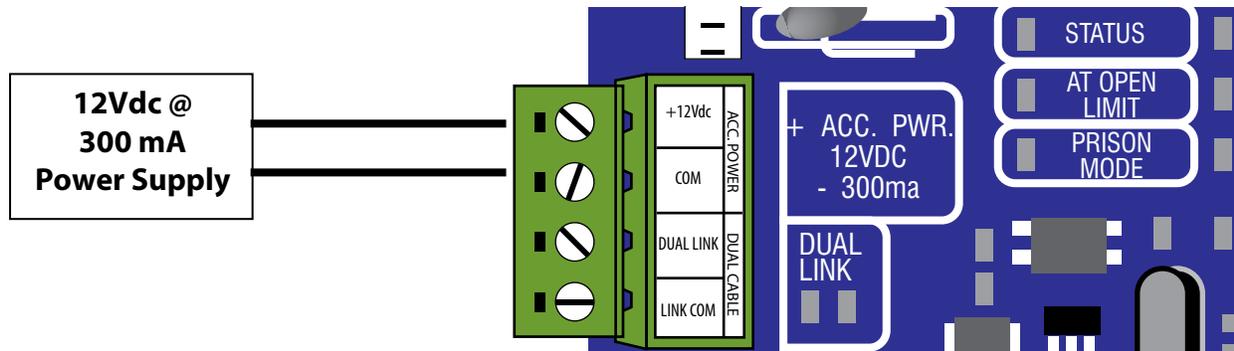


# Prison Mode Operation (CLASS IV APPLICATIONS)


Prison mode operation means that constant pressure at the **CLOSE** or the **OPEN** push button station input is required to move the gate in the desired direction.

Follow these steps to toggle the **PRISON MODE** operation on/off:

1. Power down the unit.
2. Press and hold the **OPEN** and **CLOSE** push button while powering on the unit.
3. The **PRISON MODE LED** indicator will be on if operating in prison mode.
4. Repeat the above steps to turn off prison mode operation.

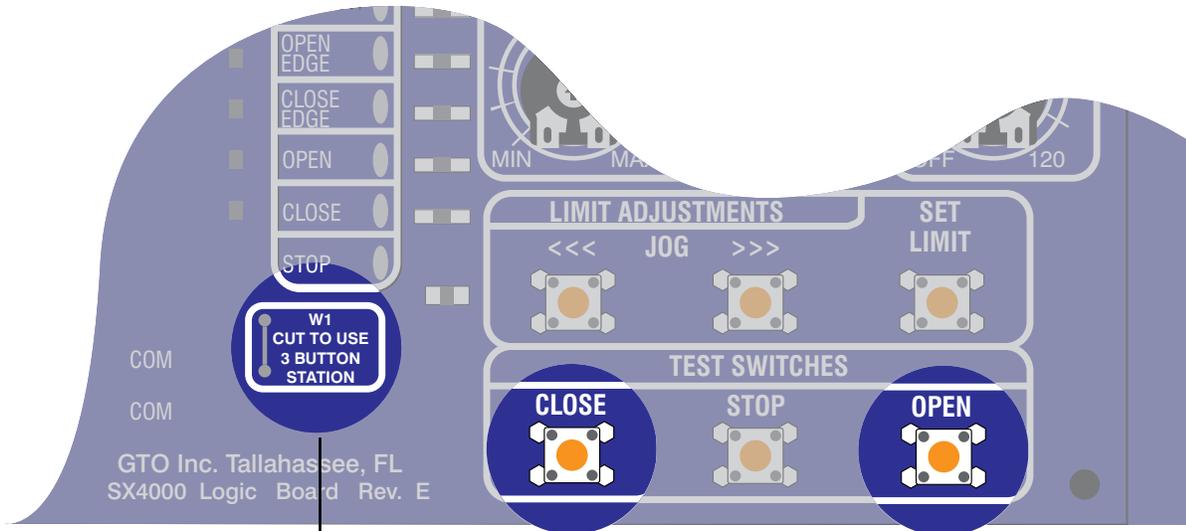


Press and hold at power up to toggle to prison mode.

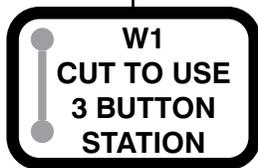

## Wiring a 3-button station

**NOTE:** The W1 Jumper must be cut in order to use a 3-button station.


To restore normal operation of cut jumper you must connect a wire between the **STOP** and **COM** terminals. This wire functions the same as the W1 jumper.

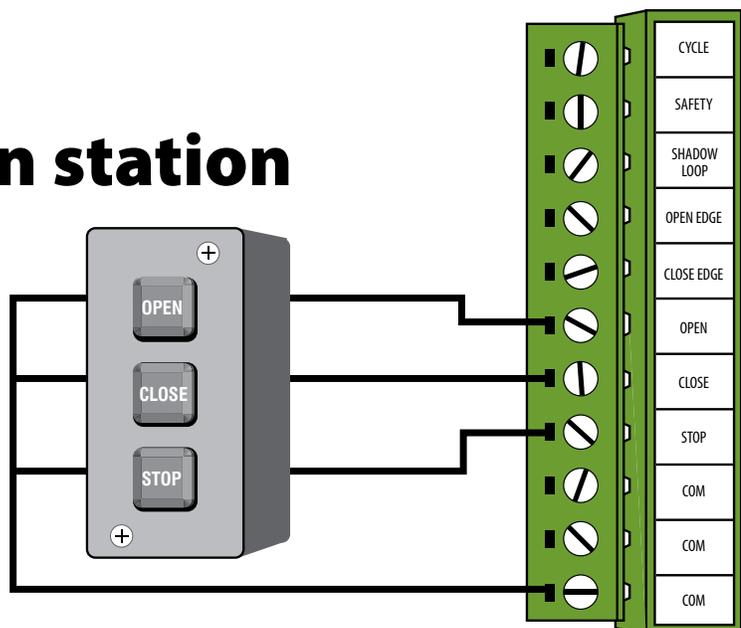

# Reinstalling the Operator Housing


Check to make sure the roller guards, fence screen, safety edges (or photoelectric beams), warning signs, and pedestrian gate (if necessary) are installed (see pages 5-6) before fastening the housing to the operator. Also, verify that the chain is properly aligned and not kinked or binding along its path of travel.

1. **Lower the operator housing** into position over the operator.

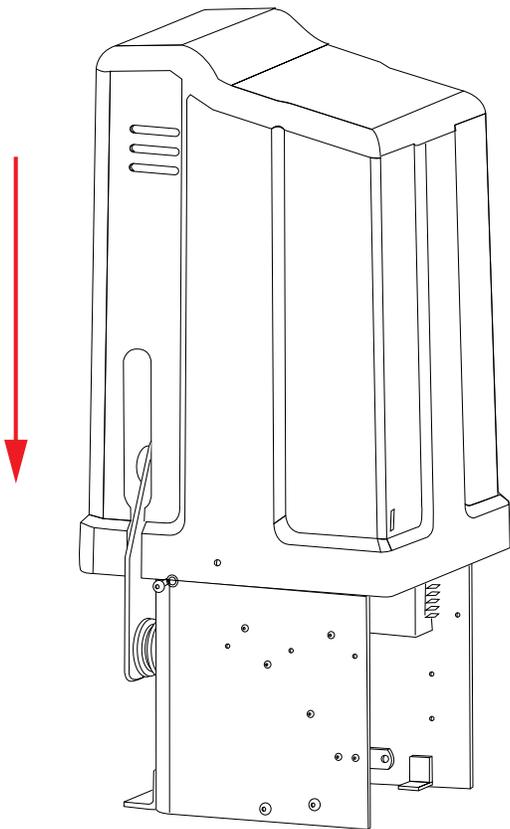

2. **Pull sides out slightly** so that the housing sits into place properly over the base.

3. **Fasten the housing** to the operator with (2) Washers and (2) Allen Bolts.

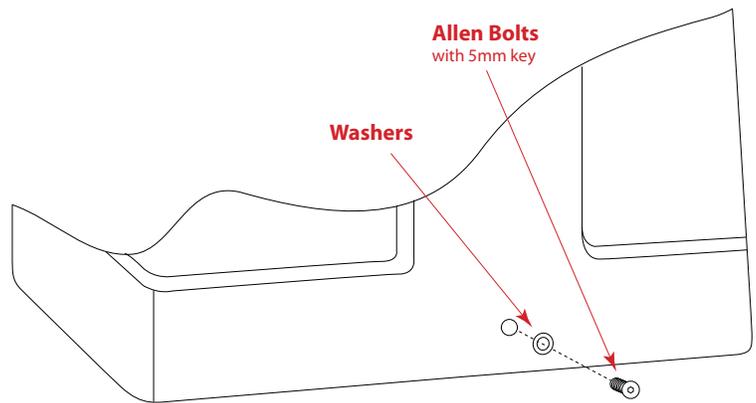

The installation is complete. Test the operator, accessories, and safety devices for correct function. Read and fill out the **INSTALLATION CHECKLIST** on the back cover of this manual.


# Installing a Dual Gate Operator System

**IMPORTANT:** With a dual gate system certain control board settings and connections are required on the MASTER unit only and some are required on both the MASTER and the SLAVE unit. The list below gives an overview.

- **Gate Sequencing** - DIP #2 on Master Unit
- **Alarms** - wired to MASTER only
- **Entry Devices** - can be wired to either unit
- **Adjustable Auto Close** - MASTER controls opening and closing for both gates)
- **Locks** - controlled by the MASTER unit
- **Setting Limits** - set DIP#3 on each operator to MASTER position (OFF) in order to set the limit for each gate. After the limit is set, DIP #3 can be set to SLAVE (ON) position for dual mode operation.

## Dual Gate Link Connection

- These two (2) terminals provide communication connections for dual gate applications where one unit operates as a master and the other as slave operator.
- Shielded twisted pair must be used. The shield connection should be connected at one end to the **LINK COM** terminal but not both. (Recommended cables are shown on page 27.)
- Connect the **DUAL LINK** terminals of the two operators together.
- Connect the **LINK COM** terminals of the two operators together.
- Set OPTIONS DIP Switch #2 and #3 accordingly.
- If these terminals are not connected, each operator will automatically operate in single mode, if DIP #3 is in MASTER position (OFF). If DIP #3 is set to the SLAVE position (ON) the unit is non-functional.
- Recommended Belden Wire®, 22 AWG, type 8761, 9461, 9451, 1266A or equivalent. 1-pair shielded with drain wire. Available at your local electrical supply store.

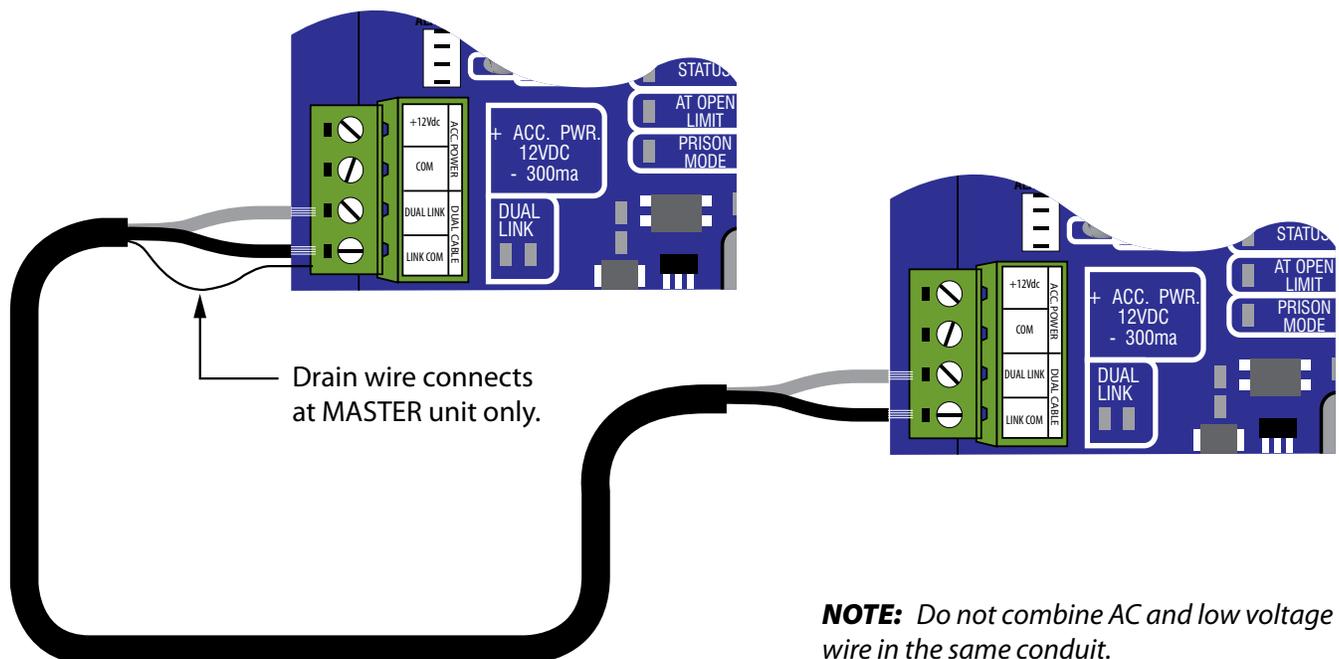

# Setting Dual Gate Sequence

GP-SL100 operators come from the factory with the #2 DIP switches set to OFF. **DIP Switches must be changed to accommodate dual gate operation.** The information below shows the proper settings for a dual gate application.



**Master** DIP Switch Settings



**Slave** DIP Switch Settings

---

**IMPORTANT:** The #2 Switch Settings are set on the MASTER Operator only. If DIP #3 is set to slave (ON), DIP #2 and #4 are dictated by MASTER DIP settings.

**DIP #1**

- OFF:** For gate that opens to the left, closes to the right.
- ON:** For gate that opens to the right, closes to the left.

**DIP #2**

- ON:** SLAVE and MASTER open simultaneously
- OFF:** MASTER opens 1st, SLAVE delays when opening

**DIP #3**

- ON:** SLAVE mode used for SLAVE operator only
- OFF:** MASTER mode used for MASTER operator only

**DIP #4**

- ON:** FAIL SECURE mode
- OFF:** FAIL SAFE mode


# Overview of a Dual Gate Operator Installation

The diagram below is an example of a dual slide gate installation with required safety features. The operators must be installed on the inside of the gate. **You must install safety edges, photo beams and roller guards (not included) to reduce the possibility of bodily injury.**

## Safety Edges and Photo Beams are Required

### Slave Operator

### Master Operator

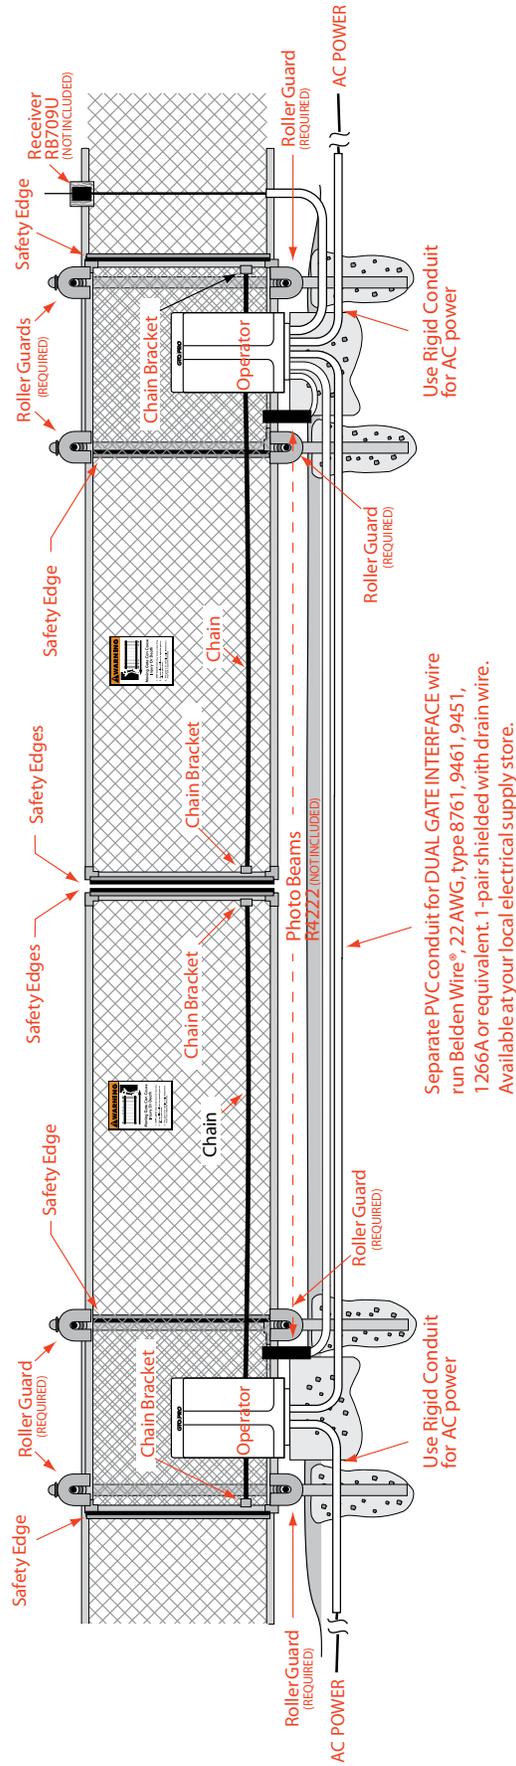

**NOTE:** A separate gate or entrance must be installed for pedestrian use.  
Not shown here.

# Maintenance



**WARNING: ALWAYS TURN OPERATOR OFF AND DISCONNECT AC POWER BEFORE ADJUSTING OR SERVICING IT.**

## Maintenance Schedule:

- Test the operator, accessories, and safety devices *monthly*.
- Service the gate operator, accessories, and safety devices *regularly*.

## Maintenance Checklist

- Test the safety edges to make sure the gate responds.
- Check the obstruction settings (both open and close modes) *see page 17*.
- Oil and adjust the chain when necessary.
- Check for wear on all moving parts, and tighten bolts as necessary.
- Check the gearbox for any sign of oil leakage. If the gearbox is leaking, call the GTO Service Department for assistance.
- Check rollers or hinges on the gate and lubricate if needed.
- Check for loose or corroded wires.
- Make sure the warning signs, roller guards, fence screen, etc. (*see page 5*) are installed.



# TroubleShooting Guide



**WARNING: ALWAYS TURN OPERATOR OFF AND DISCONNECT BATTERIES BEFORE ADJUSTING OR SERVICING IT.**

## GP-SL100 Audible Feedback

SYMPTOM	DIAGNOSIS	CHECK
One beep every 5 seconds when the gate is in motion.	There is no AC power present.  The battery voltage is low.	<ul style="list-style-type: none"> <li>• GFI</li> <li>• Circuit Breaker</li> <li>• Connections in the Field Wiring Connection Compartment</li> <li>• Battery Connections</li> <li>• Battery Voltage</li> <li>• Load Test Battery</li> </ul>
One beep every 10 seconds when the gate is idle.	<p>The battery is critically low.</p> <p>If #4 dip switch is in the FAIL SAFE position and the gate is at the OPEN Limit, the operator will be disabled until AC power is restored and the battery voltage has reached 26 vdc.</p> <p>If #4 dip switch is in the FAIL SECURE position and the gate at the CLOSED Limit, the operator will be disabled until AC power is restored and the battery voltage has reached 26 vdc.</p>	<ul style="list-style-type: none"> <li>• GFI</li> <li>• Circuit Breaker</li> <li>• Connections in the Field Wiring Connection Compartment</li> <li>• Battery Connections</li> <li>• Battery Voltage</li> <li>• Load Test Battery</li> </ul>
1 beep with 2 seconds pause	The revolution counter circuit board is not being detected.	<ul style="list-style-type: none"> <li>• Check Connections for Limit Sensors on Logic Board</li> </ul>
2 beeps with 2 seconds pause	The logic board does not detect the motor drive board connections.	<ul style="list-style-type: none"> <li>• Check BLDC Speed Control connections on Logic Board and Motor Drive Board</li> </ul>
3 beeps with 2 seconds pause	The gate has traveled outside the maximum allowable limit of the operator.	<ul style="list-style-type: none"> <li>• Check Limit Sensor Connections on Logic Board</li> </ul>
4 beeps with 2 seconds pause	The motor has moved in the wrong direction.	<ul style="list-style-type: none"> <li>• Check BLDC Speed Control connections on Logic Board and Motor Drive Board</li> </ul>
5 beeps with 2 seconds pause	No movement was detected from the motor twice.	<ul style="list-style-type: none"> <li>• Check path of Gate for obstructions.</li> <li>• Check to ensure chain is not bound.</li> <li>• Check to ensure motor is not jammed.</li> </ul>

## GP-SL100 Visual Feedback

SYMPTOM	DIAGNOSIS	CHECK
<p><b>Cycle LED ON</b> brightly Status Light flashes</p>	<p>Cycle terminal shorted to Com</p>	<ul style="list-style-type: none"> <li>• Push button or key on keypad is stuck.</li> <li>• Wire between push button, keypad, etc. and cycle terminal is shorted</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>
<p><b>Safety LED ON</b> brightly Status Light flashes</p>	<p>Safety terminal shorted to Com</p>	<ul style="list-style-type: none"> <li>• Photo beam or loop detector is sensing a presence.</li> <li>• Relay on photo beam or loop detector is shorted or latched.</li> <li>• Wire between photo beam or loop detector and safety terminal is shorted.</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>
<p><b>Shadow LED ON</b> brightly Status Light flashes</p>	<p>Shadow terminal shorted to Com</p>	<ul style="list-style-type: none"> <li>• Photo beam or loop detector is sensing a presence.</li> <li>• Relay on photo beam or loop detector is shorted or latched.</li> <li>• Wire between photo beam or loop detector and shadow terminal is shorted.</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>
<p><b>Open Edge LED ON</b> brightly Status Light flashes</p>	<p>Open Edge terminal shorted to Com</p>	<ul style="list-style-type: none"> <li>• Edge sensor is sensing an obstruction.</li> <li>• Relay from edge sensor is shorted or latched.</li> <li>• Wire between edge sensor and open edge terminal is shorted.</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>

SYMPTOM	DIAGNOSIS	CHECK
<b>Close Edge LED ON</b> brightly Status Light flashes	Close Edge terminal shorted to Com	<ul style="list-style-type: none"> <li>• Edge sensor is sensing an obstruction.</li> <li>• Relay from edge sensor is shorted or latched.</li> <li>• Wire between edge sensor and open edge terminal is shorted.</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>
<b>Open LED ON</b> brightly Status Light flashes	Open terminal shorted to Com	<ul style="list-style-type: none"> <li>• Push button is stuck.</li> <li>• Exit wand, Loop detector, Photo beam, etc., is sensing a presence.</li> <li>• Relay from Exit wand, Loop detector, Photo beam, etc. is shorted or latched.</li> <li>• Wire from Exit wand, Loop detector, Photo beam, etc. is shorted.</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>
<b>Close LED ON</b> brightly Status Light flashes	Close terminal shorted to Com	<ul style="list-style-type: none"> <li>• Push button is stuck</li> <li>• Check terminal voltage with respect to Com to ensure you read 12 vdc.</li> </ul>
<b>Stop LED ON</b> brightly Status Light flashes	Stop and Com terminals open.	<ul style="list-style-type: none"> <li>• W1 is cut and normally open button is wired to Stop and Com.</li> <li>• W1 is cut and no normally closed push button is wired to Stop and Com.</li> <li>• Wire between normally closed push button and Stop terminal is cut or disconnected.</li> <li>• Check terminal voltage with respect to Com to ensure you read 0 vdc.</li> </ul>

# Warranty and Repair Service

If the GTO gate operator system is not working properly, please follow the steps below:

## Instructions for the Consumer/End User:

1. Call your dealer or installer for service. *Only an experienced technician may service this unit.*
2. If your dealer or installer is unable to solve the problem, he will contact the GTO Service Department.

## Instructions for the Dealer/Installer:

1. Call the GTO Service Department at **(800) 543-1236** or **(850) 575-4144** to discuss the problem with a service technician.
2. If repair or replacement is necessary, you will be assigned a **Return Goods Authorization Number (RGA)**.
3. Carefully pack the component(s) authorized for return and write the RGA number on the outside of the package in **LARGE BOLD PRINT**. Ship freight prepaid to **GTO, Inc., 3121 Hartsfield Road, Tallahassee, FL 32303**. NOTE: GTO products shipped without a Return Goods Authorization Number (RGA) or shipped freight collect *will not* be accepted at the factory.  
**Remember all returns must include a copy of receipt.**
4. *If GTO, Inc. determines that the warranty covers the repair or replacement of your gate operator:*  
GTO will pay shipping costs (equivalent to United Parcel Service ground rate) for return to owner of items repaired under warranty.

**GTO Hours of Operation: Mon. – Fri., 8:00 A.M. - 7:00 P.M. (ET)**

**Phone (800) 543-1236 • FAX (850) 575-8950**

**E-mail: techsupport@gtoinc.com • GTO Web site: www.gtopro.com**

## GTO/PRO AC Powered Gate Operator Limited Warranty

GTO/PRO AC powered gate operators are warranted by the manufacturer against defects in materials and manufacturer workmanship for a specific period of time beginning from the date of purchase, *provided recommended installation procedures have been followed.*

**The warranty period for residential installations is five (5) years for mechanical parts; three (3) years for electronic components. The warranty period for commercial installations is three (3) years for mechanical parts; two (2) years for electronic components.**

In the case of product failure due to defective material or manufacturer workmanship within the warranty period, the operator will be repaired or replaced (at manufacturer's option) at no charge to the customer, if returned freight prepaid to GTO, Inc., 3121 Hartsfield Road, Tallahassee, Florida 32303. **IMPORTANT: Call (850) 575-0176 or Fax (850) 575-8950 for a Return Goods Authorization (RGA) number before returning to factory.** Products received at the factory without an RGA number *will not* be accepted. Replacement or repaired parts are covered by this warranty for the remainder of the warranty period or six (6) months, whichever is greater. GTO will pay shipping charges (equivalent to United Parcel Service ground rate) for return to owner of items repaired under warranty.

The manufacturer will not be responsible for any charges or damages incurred in the removal of the defective parts for repair, or for the reinstallation of those parts after repair. This warranty shall be considered void if damage to the product(s) was the result of improper installation or use, tampering, connection to an improper power source, or if damage was caused by lightning, wind, fire, flood, insects or other natural agent. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. This warranty is issued in lieu of all other warranties, expressed or implied. **NOTE: Verification of the warranty period requires copies of receipts or other proof of purchase. Please retain these records.**

After the warranty period, GTO or one of its authorized service centers will make any necessary repairs for a nominal fee. Call GTO at (850) 575-0176 for more information.

GTO MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED.

### LIMITATION OF LIABILITY

The remedies of purchaser set forth herein are exclusive and the total liability of GTO with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall GTO be liable for consequential, incidental or special damages.

# Installation Checklist

The installation of this operator conforms to CLASS \_\_\_\_\_.

The installer verifies that (each item must be checked):

- \_\_\_ Required safety edges or photo beams were installed.
- \_\_\_ Roller guards were installed over gate rollers.
- \_\_\_ Fence was screened so that no one can reach through the gate to operate controls.
- \_\_\_ Customer was informed that this gate is for vehicular use **ONLY**. Pedestrians **MAY NOT** use this gate.
- \_\_\_ A separate gate or entrance was installed for pedestrian use.
- \_\_\_ All warning signs and labels were installed as specified in the **IMPORTANT SAFETY INSTRUCTIONS**.
- \_\_\_ Safety instructions were reviewed with the customer.
- \_\_\_ The **IMPORTANT SAFETY INSTRUCTIONS** manual was given to the customer.
- \_\_\_ Customer was instructed about proper use of the chain release pins.
- \_\_\_ Customer was asked to fill out customer support card and mail it to GTO, Inc.
- \_\_\_ Customer was asked to **retain all receipts** (receipts provide proof of warranty).
- \_\_\_ Customer was asked to retain **IMPORTANT SAFETY INSTRUCTIONS**, etc. for future reference.
- \_\_\_ The completed installation was photographed from both the front and back of the gate. Photo was dated.

\_\_\_\_\_  
Customer's Signature

\_\_\_\_\_  
Date

\_\_\_\_\_  
Installer's Signature

\_\_\_\_\_  
Date