

OZCO Project #311 - 12x12 Pergola Patio Shade Structure A


this project is the foundation of project #312 & #313 see OZCO website for further information











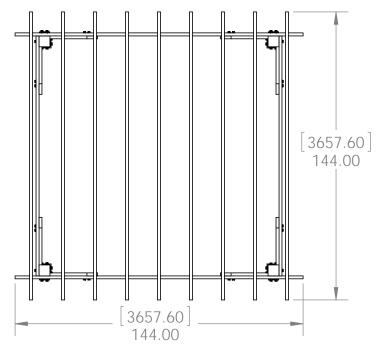

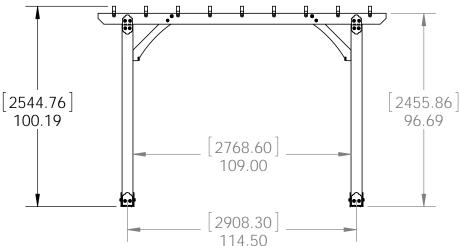


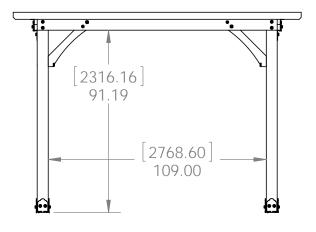

OZCO Project #311 - 12x12 Pergola Patio Shade Structure A





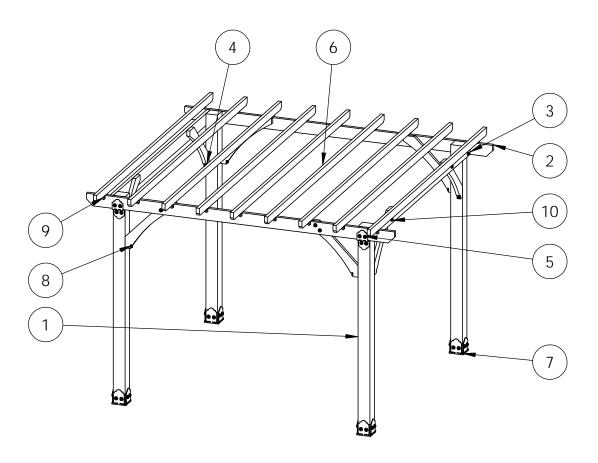


ITEM NO.	OZCO Project #311 - 12x12 Pergola Patio Shade Structure A/QTY.	PART NUMBER	DESCRIPTION
1	4	6x6 Post	8 feet
2	2	2x6 Board	2x6x144.00
3	2	2x6 Board	2x6x120.00
4	8	2x6 Board	2 <u>x6</u> x36.00
5	4	56635-10	6" Post to Beam
6	9	2x4 Board	2x4x144.00
7	4	56608	Assembly, 6x6 Post Base
8	1	56628	Screw, OWT 5- 3/4" (145mm) Timber with HCN
9	2	56617	2" Standard Rafter Clip
10	1	56626	Screw, OWT 2- 3/4" (70mm) Timber with HCN

OZCO Project #311 - 12x12 Pergola Patio Shade Structure A






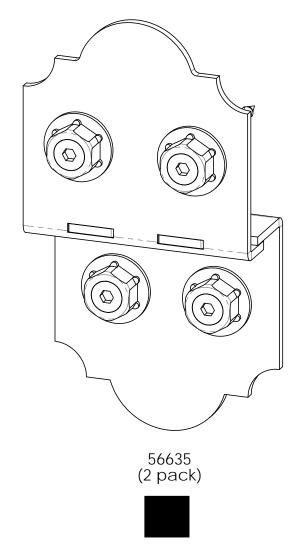







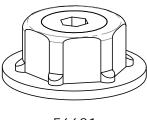

56621 (10 pack)













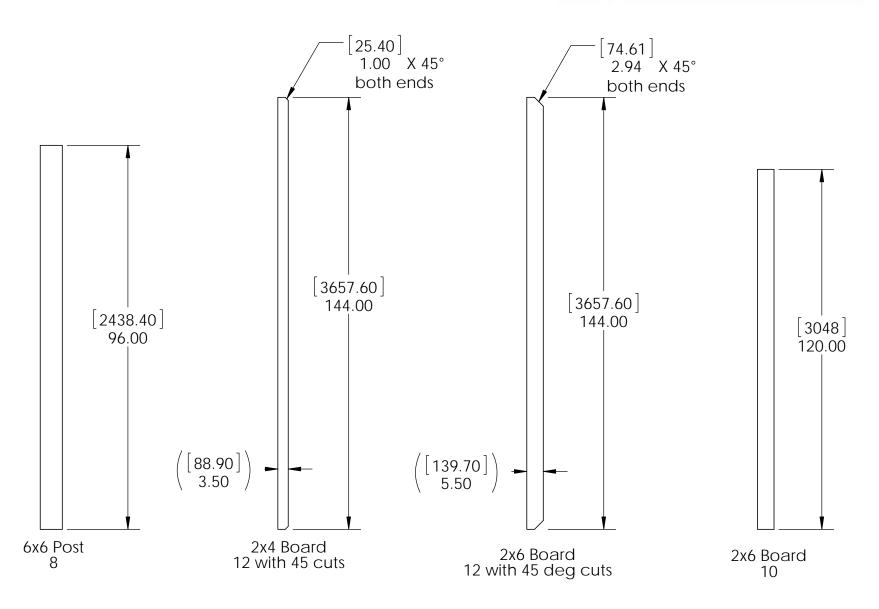

cutlist






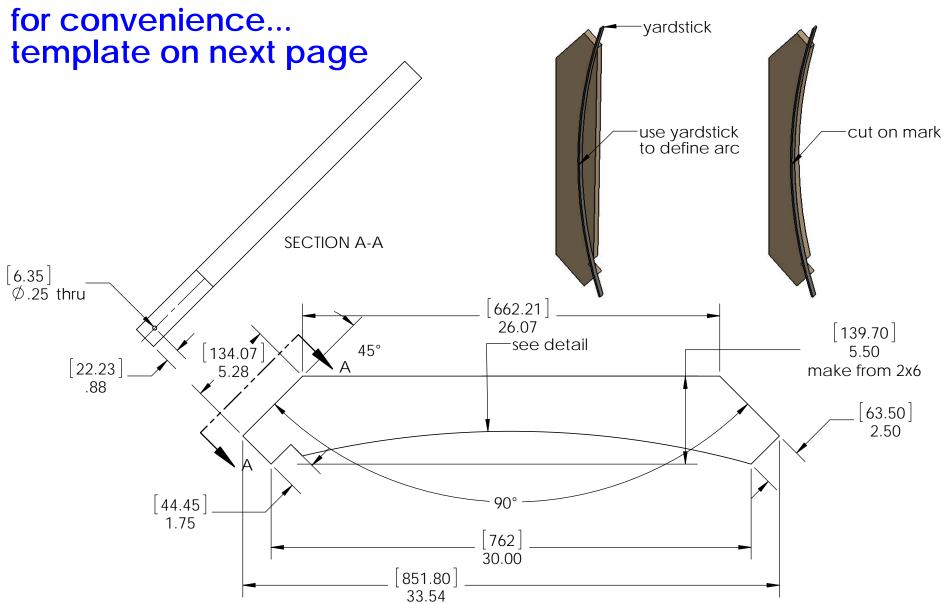

3 knee brace





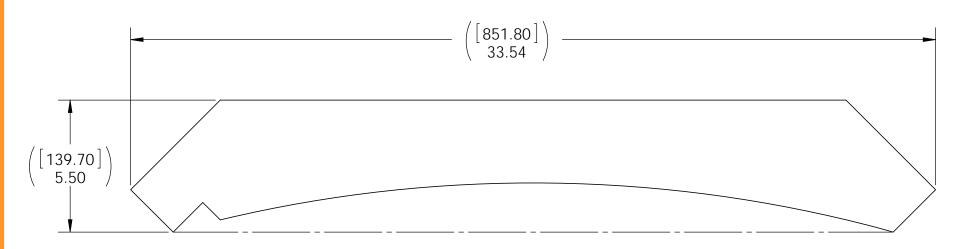

print 4x make from 2x6

3 knee brace Template


(scale 1:4)



Project 311 12x12 Pergola Patio Shade Structure A

V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information



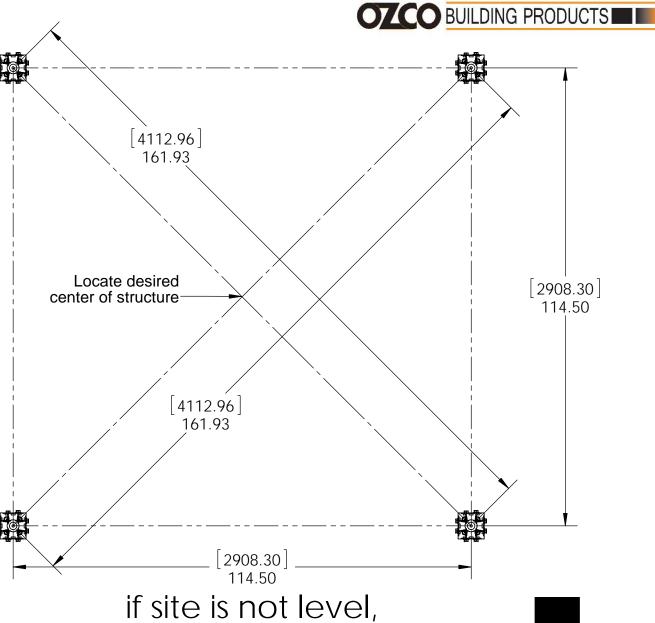



see Ozco Site Leveling instruction









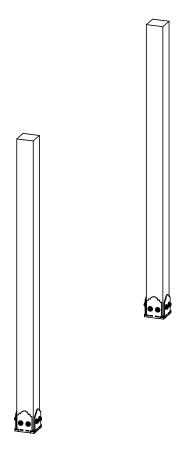

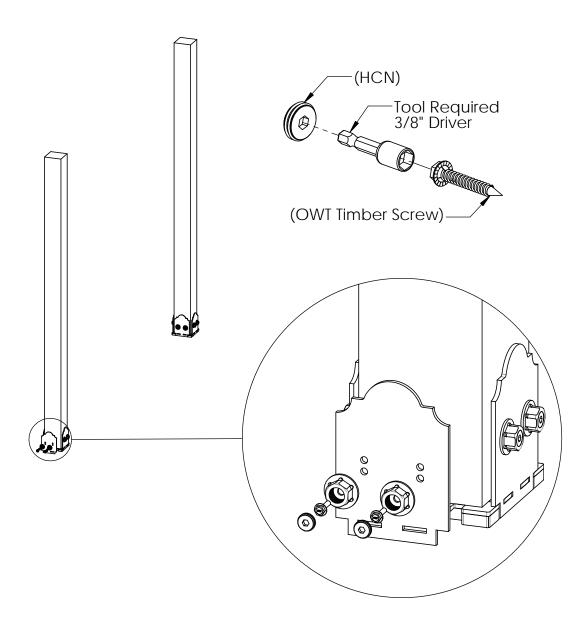

step 1

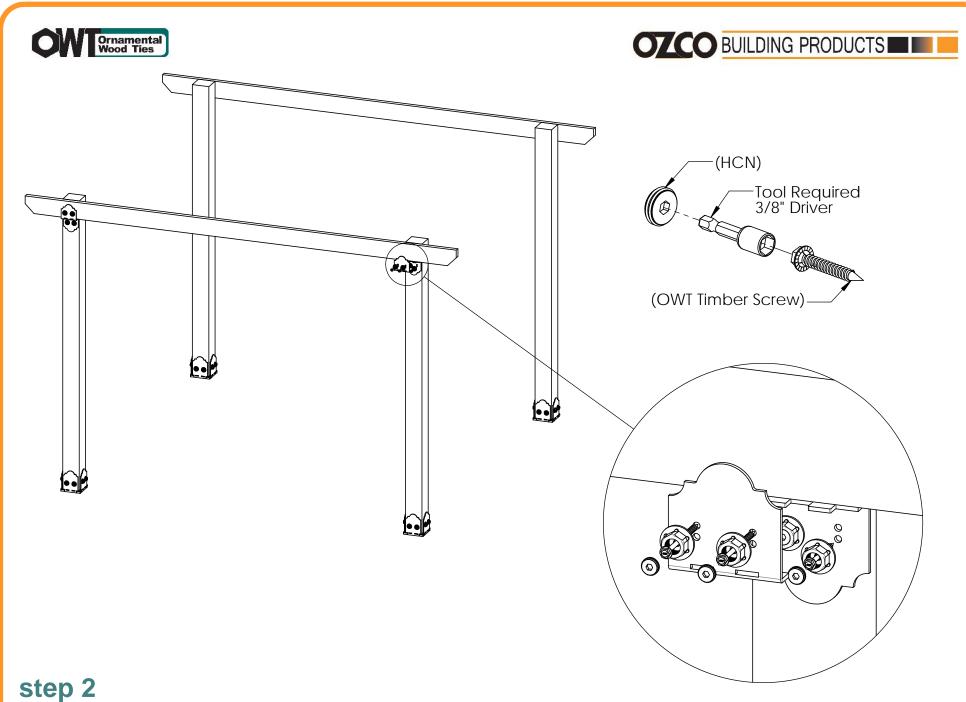

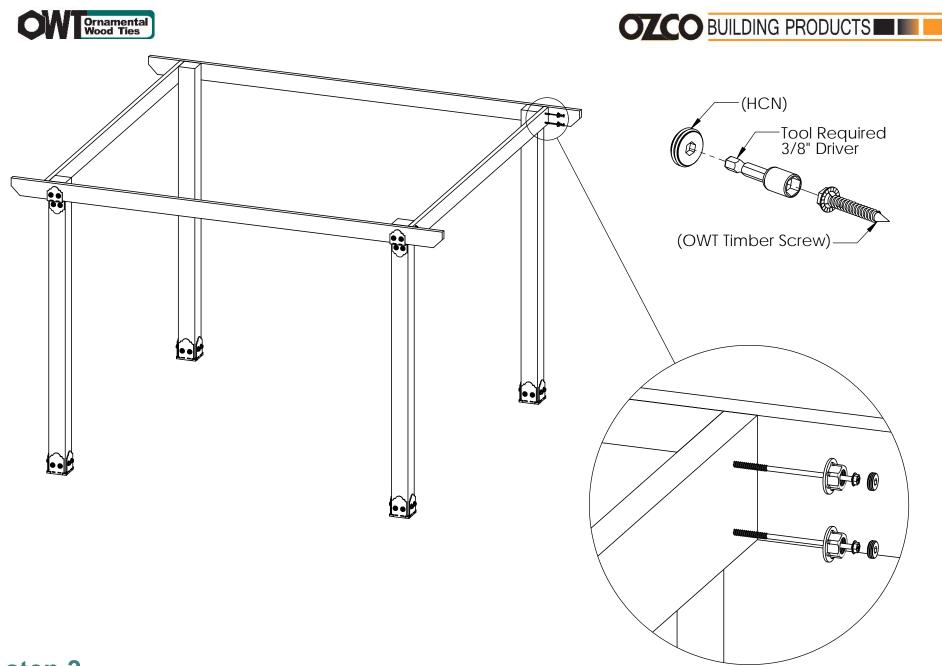


step 3

Project 311 12x12 Pergola Patio Shade Structure A

V1.00 - Installation Instructions effective May 1, 2015 and reflects information that available as of April 10, 2014. This information is updated periodically and should not be relied upon after May 1, 2015. Please visit www.OZCOBP.com to get current information





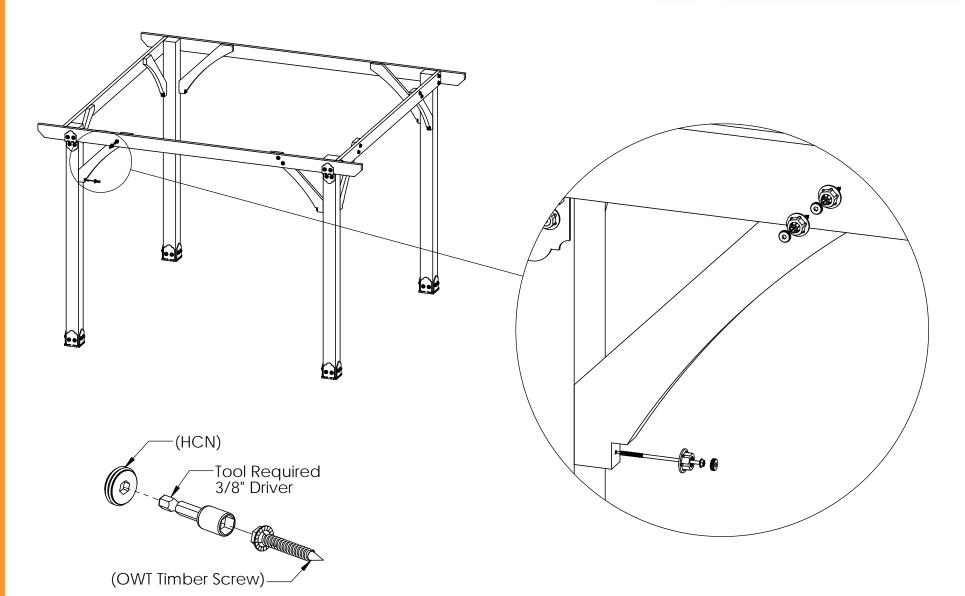

step 4





