

Project 520 Garden Bench-Buffet

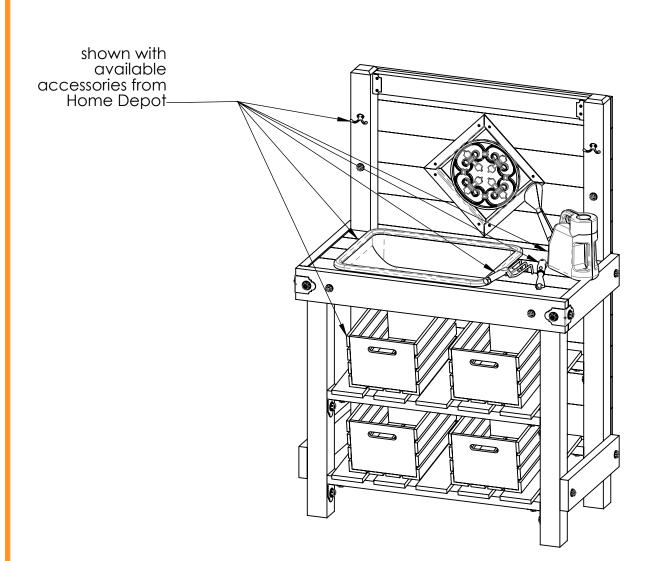


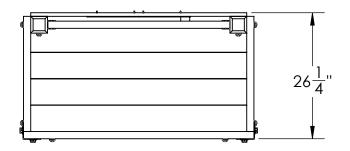








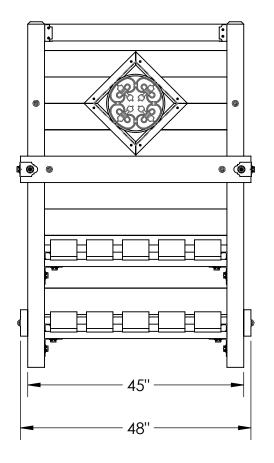


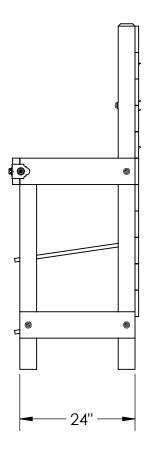

Overview





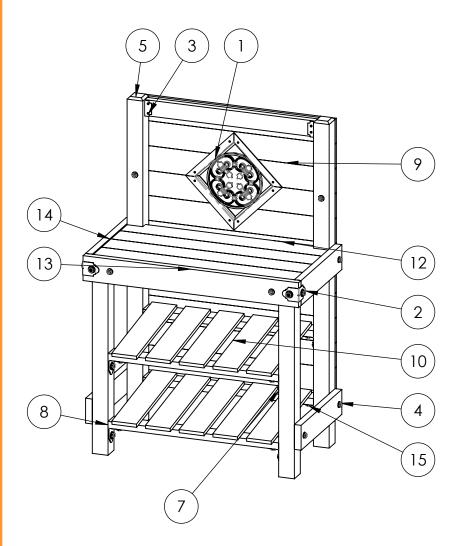

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	1	56658	Assembly, 15-1/4" x 15-1/4" Scroll Accent
2	1	56618	Assembly, 4" Standard Rafter Clips
3	1	56641	Assembly, 2x4 Top Rail Saddle
4	1	56622	Assembly, 1-1/4" Hammered Dome Cap Nut
5	2	4x4 Post	4x4x72"
6	1	56626	OWT Timber Screws, 2-3/4" (70mm)
7	2	4x4 Post	4x4x43"
8	5	2x4 Board	2x4x48"
9	15	1x6 Board	1x6x48"
10	10	1x6 Board	1x6x24"
11	2	2x2 Board	2x2x17"
12	1	2x2 Board	2x2x24"
13	1	2x6 Board	2x6x48"
14	4	2x6 Board	2x6x24"

Bill of Material











56622 (10 pack)



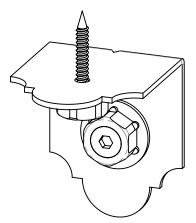


56618 (10 pack)






56626 (25 pack) 4 screws required for each connector



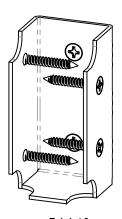

56641 (2 pack)




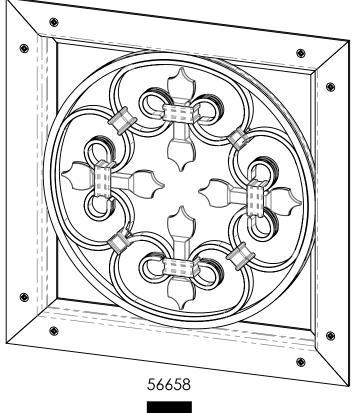








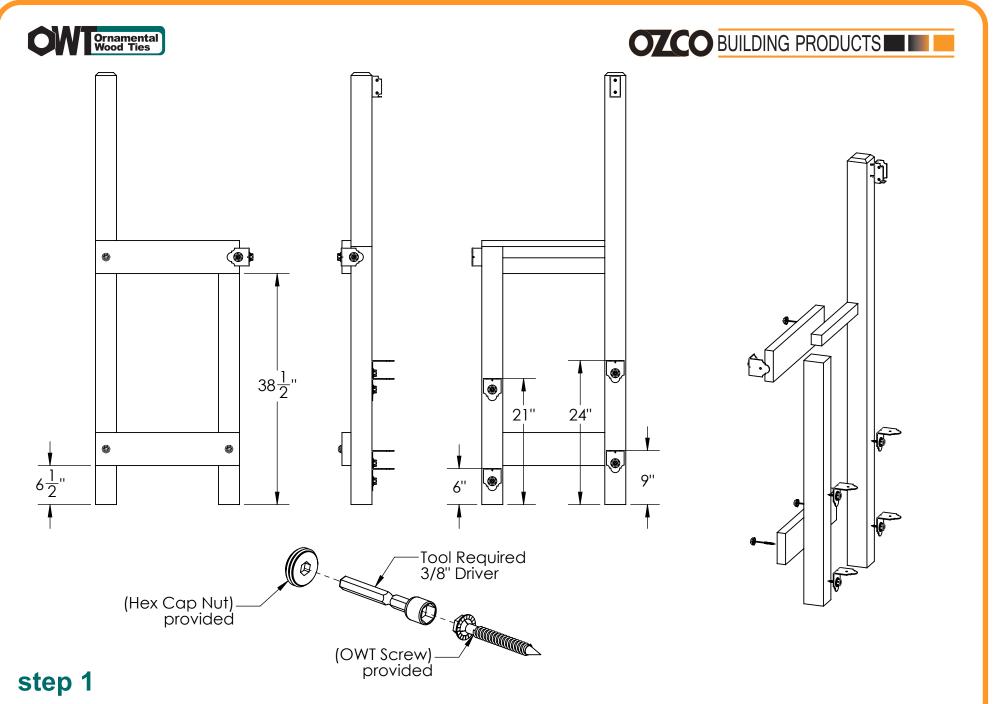






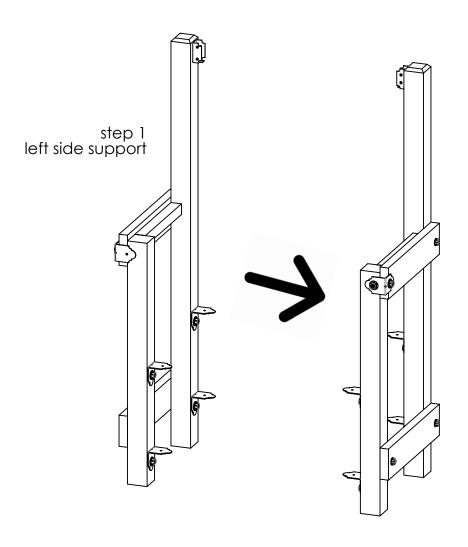


step 2-repeat step 1 for opposite side





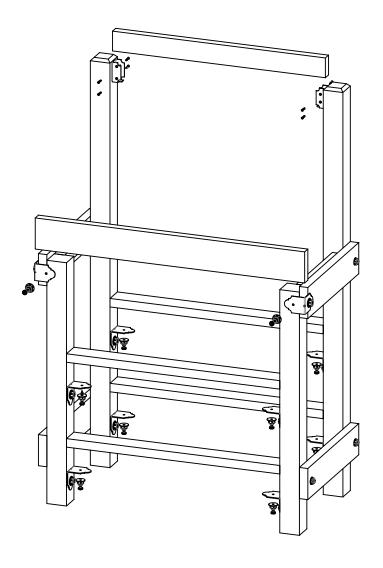


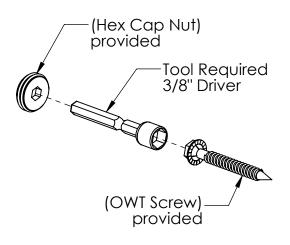

15







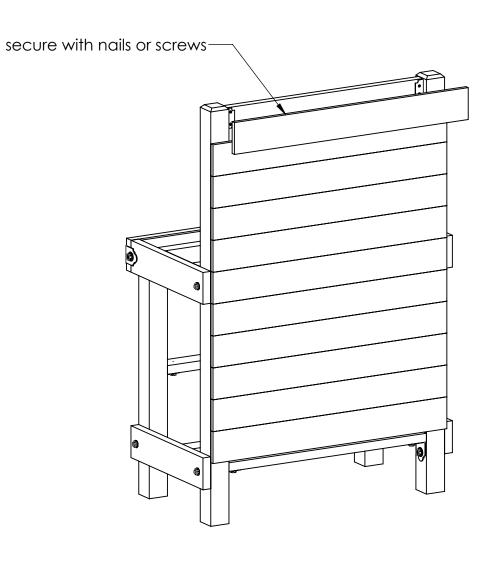





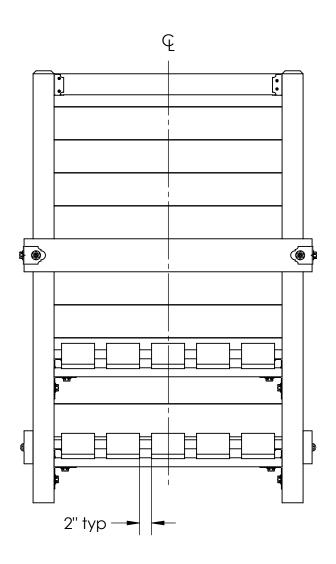


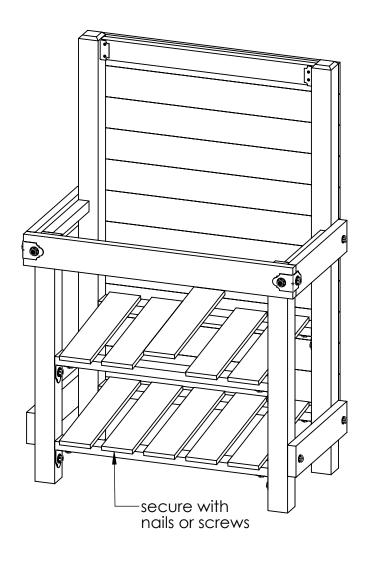

step 5






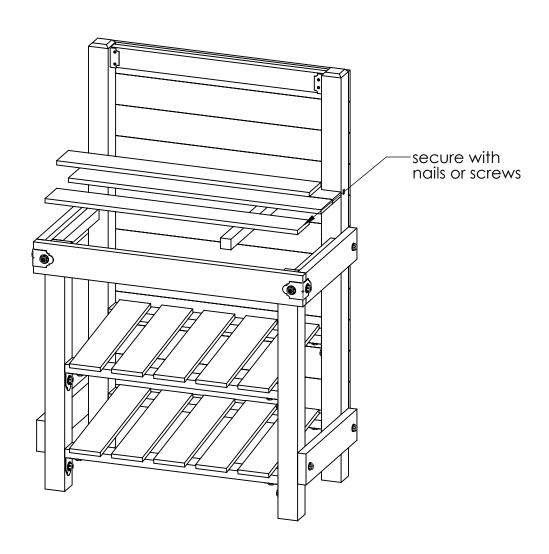






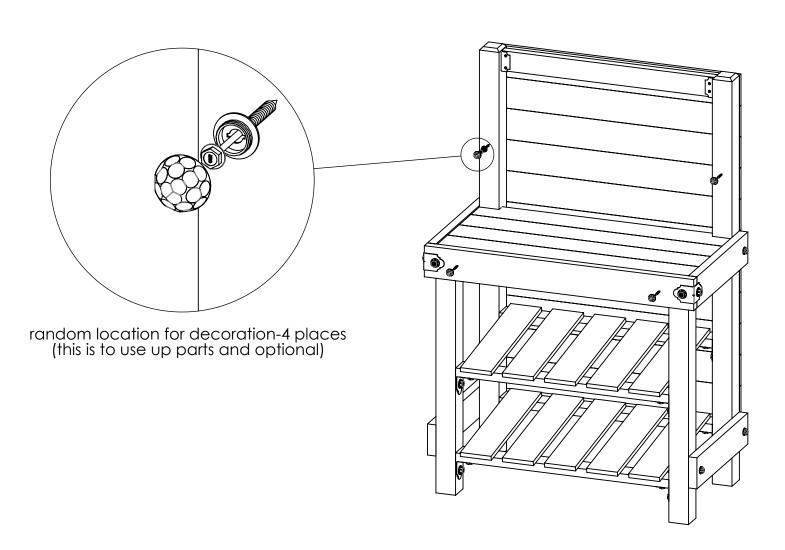





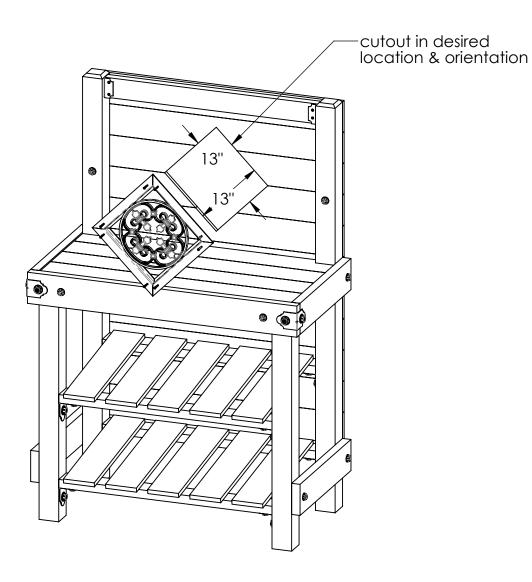

step 8





-sink cutout

Note: add additional bracing to opposite side before cutting

