

Mailbox/Flowerbox/Signpost

Configurations & Ground Mounting Instructions

Colebrook

Signature

Dover

Rockport

Woodhaven



Step #1



Slip smaller 24" 4x4 wood post up through hole at bottom of decorative vinyl post. Follow with longer 56" wood post. Make sure wood posts bottom out inside vinyl post.

Step #2




Using a 3" screw and CapWasher Assembly, (fig.1) anchor arm were indicated by dotted lines in above configurations.

Step #3



Using two 3" screws and Cap Washer Assembly (fig.1), anchor flower box inside were indicated by dotted lines in diagram above.

Step #4

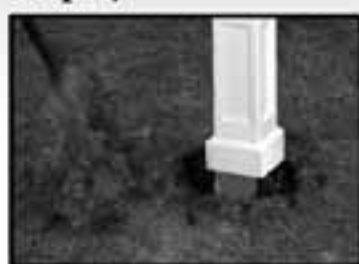

Dig a 12" diameter, 24" deep hole to accommodate wood post, level post, fill or cement in place. (Cement not included)


Standard Material list

- 1 - 8" Decorative Vinyl Post
- 1 - 4"x 4"x 24" Wood Post
- 1 - 4"x 4" x 56" Wood Post
- 1 - Hardware kit
 - 6 - 3" screws
 - 6 - Snap Cap Washer Assemblies
 - 1 - Mailbox Bracket Kit (not included in Colebrook or Woodhaven)

Tools Required

- Cordless drill with #2 Phillips or Robertson bit
- Shovel
- level

(fig.1)

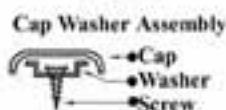

Mailbox and flowerbox arms included as shown in configurations above.

* MAILBOX MOUNTING ON OPPOSITE SIDE.

STOP!

Please Do Not Return To The Store!

We regret that although great care and effort has been taken, occasionally problems may occur. To insure prompt and correct handling of any problems, such as missing parts or assembly, please contact our Toll-Free Customer Service Number listed below. Service will be quicker if you have your assembly instructions ready when you call.

**TOLL-FREE CUSTOMER SERVICE NUMBER
1-800-282-9346 ext. 10**

(Weekdays from 8:00 am - 4:00 pm EST)