
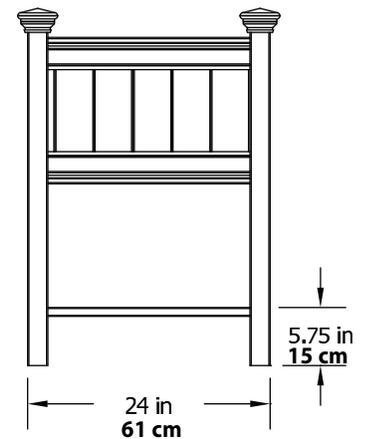
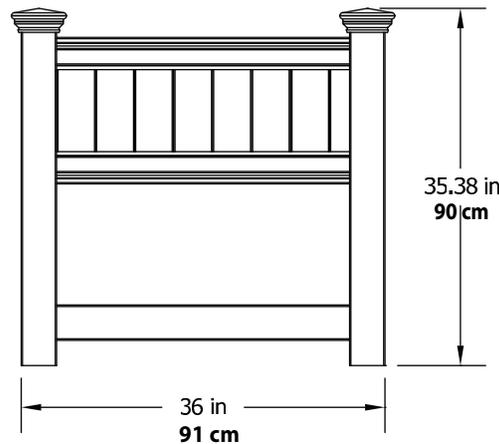


ASSEMBLY INSTRUCTIONS

The Cambridge Raised Planter Box

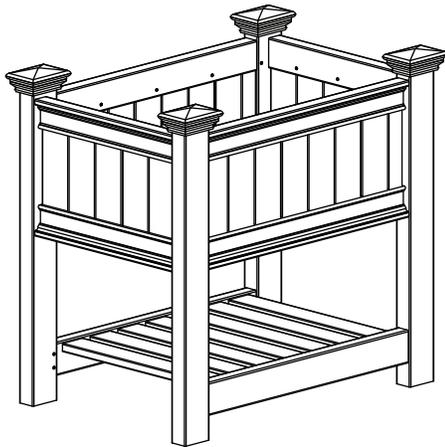


Please read through before starting assembly.

**Planter Box Dimensions are 32"L x 20"W x 10"D (81 cm L x 51 cm W x 25 cm D)
(± 3.7 cubic feet (0.1 cubic Meter) / 0.14 cubic yards / 105 litres)**

Check Box for These Contents

In the event of missing or defective parts please call our customer service dept. at **1 800 282 9346** (Mon. to Fri. 8:00 AM to 5:00 PM EST).

1. Pre-Assembled Side Wall Panels with Posts Connected (2) - 10873
2. Floor Panels (4) - 10871
3. Floor Support (1) - 10872
4. Front and Back Wall Panels (2) - 10870
5. Pre-assembled Shelf (1) - 10874
6. Post Caps (4) - 10611
7. 5/8" (1.6 cm) Stainless Steel Screws (12) - 20016
8. 1 1/2" (4 cm) Stainless Steel Screws (8) - 20005

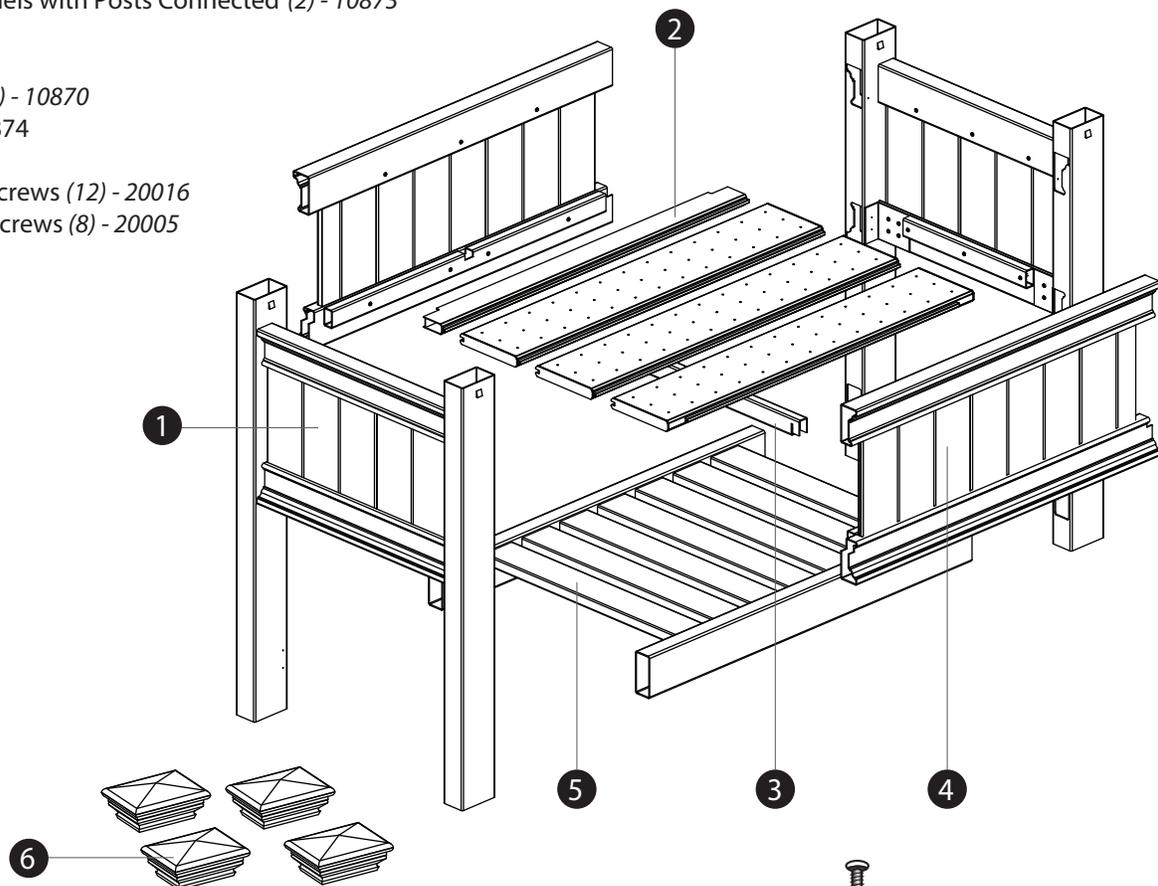

General Information

- **Read Instructions through carefully before beginning assembly.**
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 4'x 8' (1.2 m x 2.4 m) for unobstructed assembling.
- You should not need to use excessive force when assembling components.



The Cambridge Raised Planter Box

STEP ONE

1

Lay the Pre-Assembled Side Wall Panel on the floor as shown and align and insert the pre-assembled shelf into the routed hole.

Do the same for the Front and Back Wall Panels as shown.

This is designed to accommodate the attachment of an extension kit (sold separately).




2

Align and insert the second Pre-Assembled Side Wall Panel as shown.

3

Stand the planter box up. Center the shelf within the side panel posts and fasten the shelf rails to the posts using 8 of the 5/8" (1.6 cm) screws provided through the pre-drilled holes as shown.

Note Position of Bottom Rails

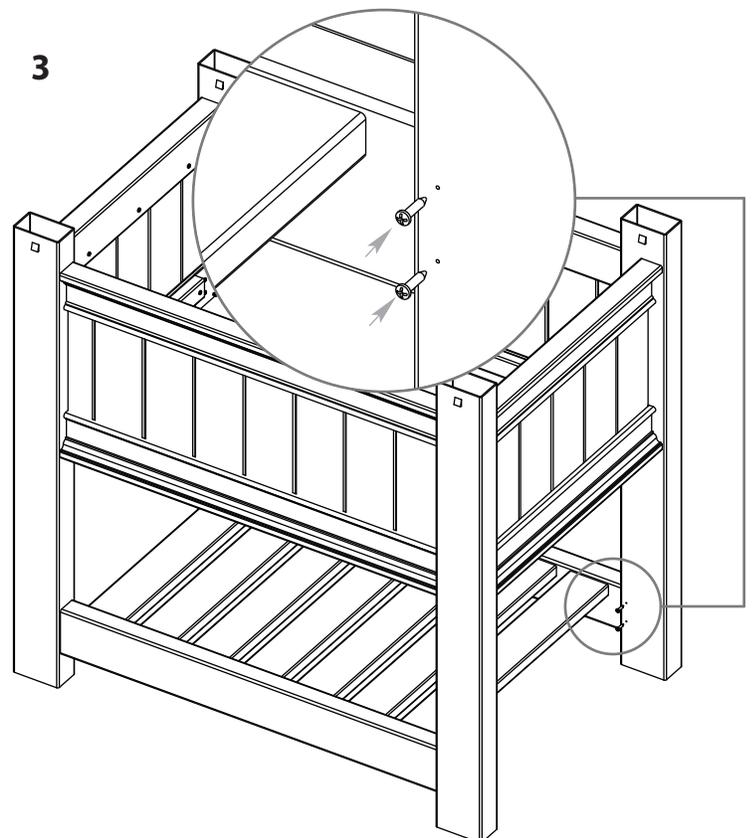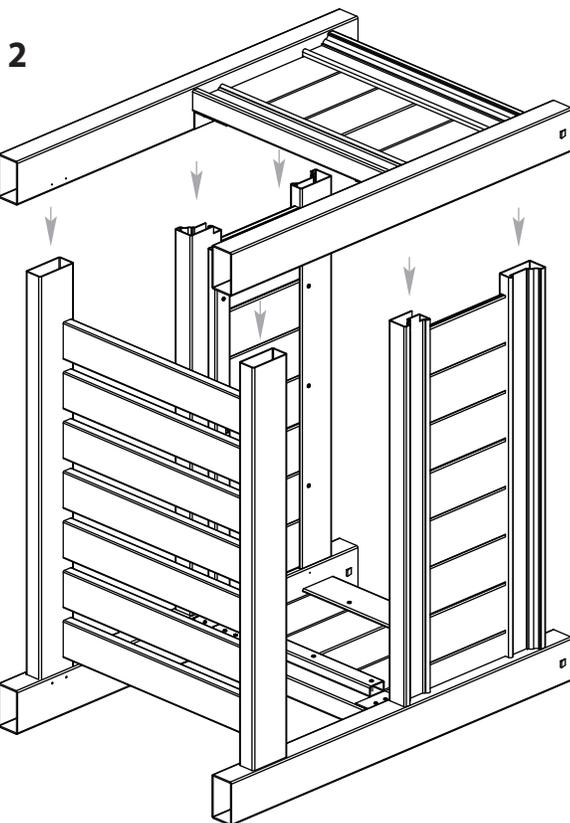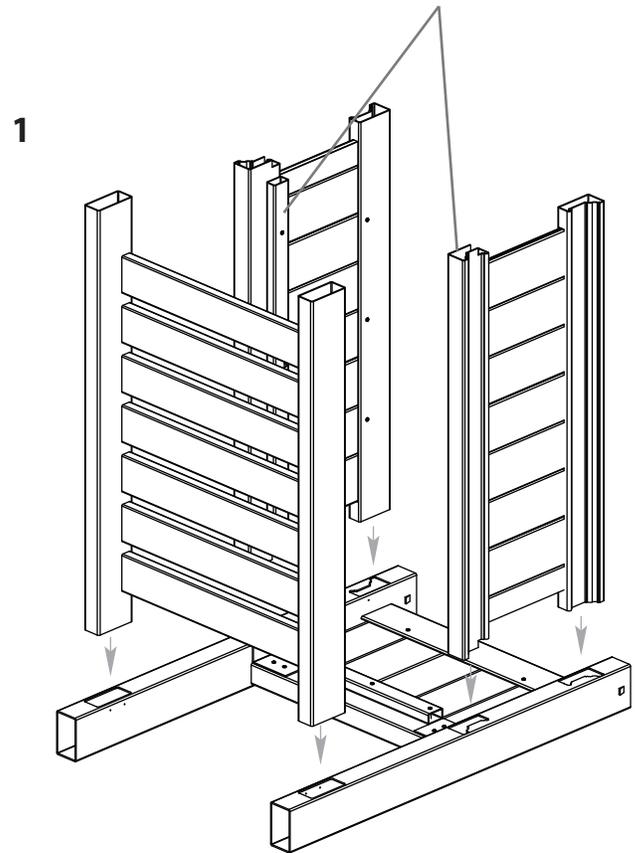


STEP ONE (CONT'D)

4


Fasten the wall panels together using 4 of the 5/8" (1.6 cm) screws provided through the pre-drilled holes on the posts as shown.

5


Fasten the corner brackets to the posts using 8 of the 1 1/2" (4 cm) screws provided through the pre-drilled holes on the brackets as shown.

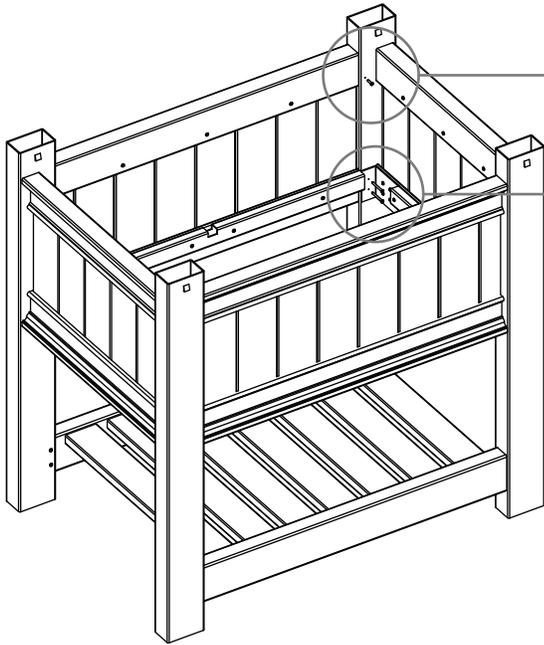

4

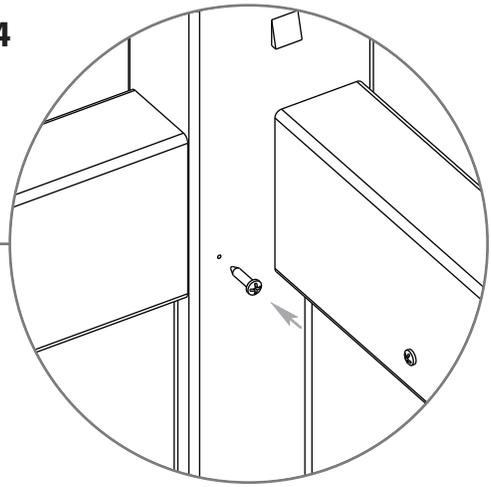

5


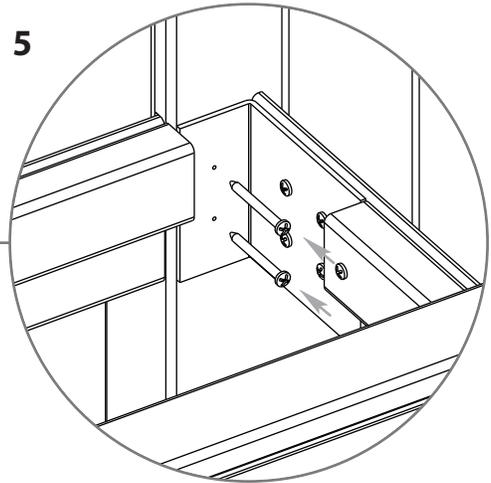


STEP TWO

6

Insert the floor support rail into the front and rear walls as shown. **Note** the notch at the ends of the floor support rail.

6

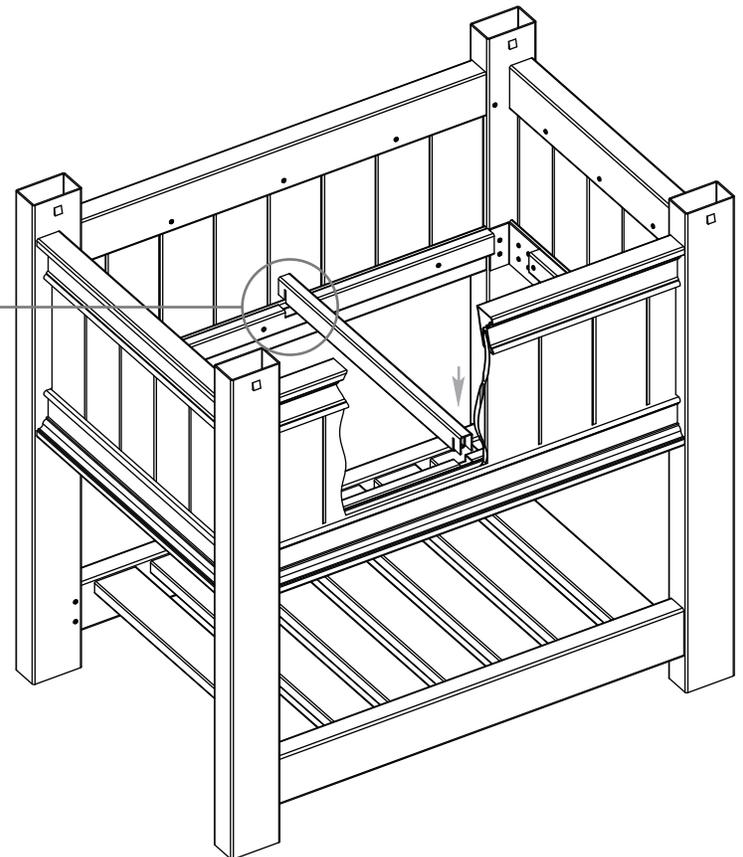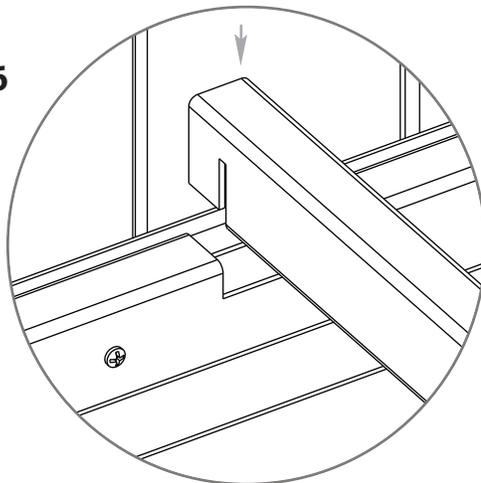

The Cambridge Raised Planter Box

STEP TWO (CONT'D)





7

Place the four floor panels onto the floor supports as shown. Note the notches on the one side of the end panels. The notches are to wrap around the posts.

8


Pressure fit the Post Caps into place. Push firmly until they snap into place.

NOTE: If you purchased the Kingsrow Trellis, leave 2 Post Caps off one of the 36" (91 cm) sides to allow the trellis to be mounted.

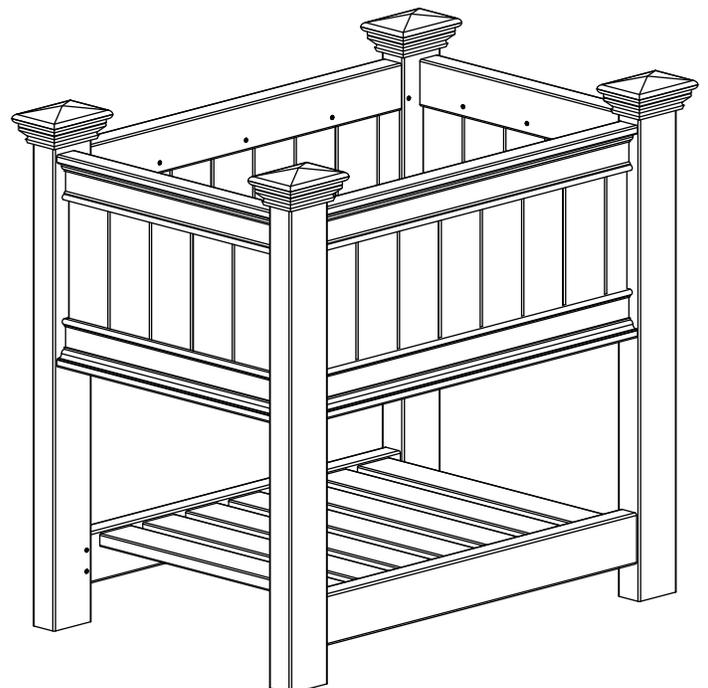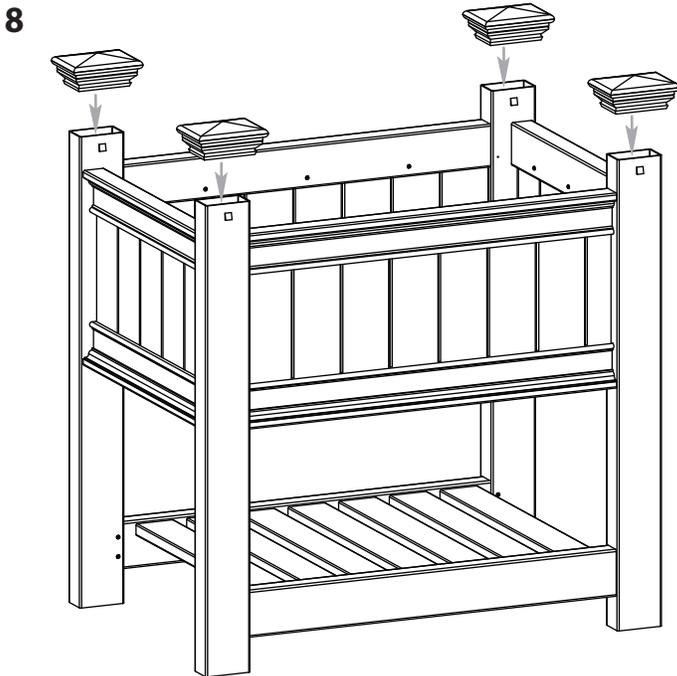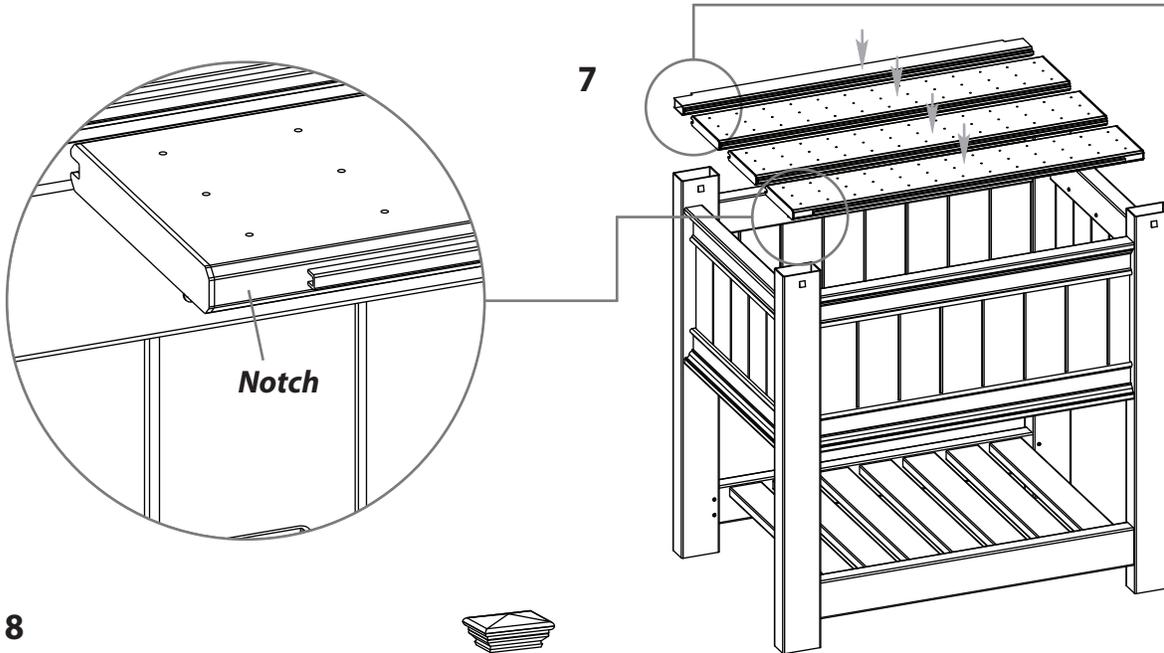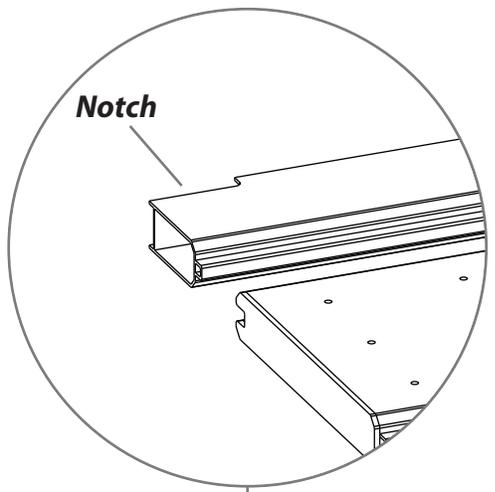

ASSEMBLY INSTRUCTIONS

The Raised Planter Trellis*

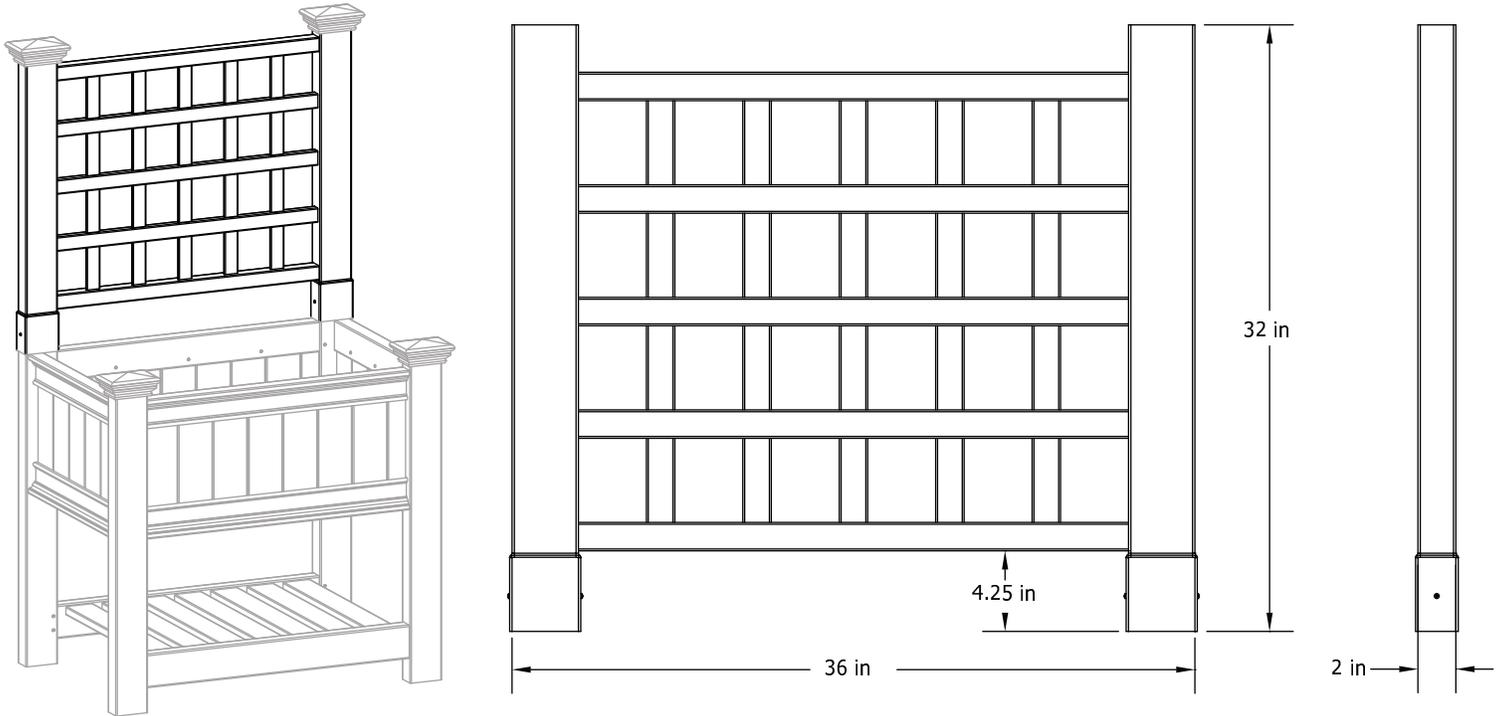

*The Raised Planter Trellis is designed to mount on to our 24" x 36" White Raised Planter Box (sold separately) as shown above.

Please read through before starting assembly.

IMPORTANT: CHECK THE INSIDE OF YOUR POSTS FOR ALL MATERIALS.

Check Box for These Contents

In the event of missing or defective parts please call our customer service department at **1 800 282 9346**
(Mon. to Fri. 8:00 AM to 5:00 PM EST).


1. Posts (2) - 10941
2. Top and Bottom Rails (2) - 1.5" x 1.5" x 35.75" - 10942
3. Horizontal Spindles (3) - 1.5" x .875" x 31" - 10944
4. Vertical Spindles (5) - 1.5" x .25" x 21" - 10943
5. 1" Self-Auguring Stainless Steel Screw (4) - 20016

Tools You Will Need

- Cordless Drill



Not to Scale

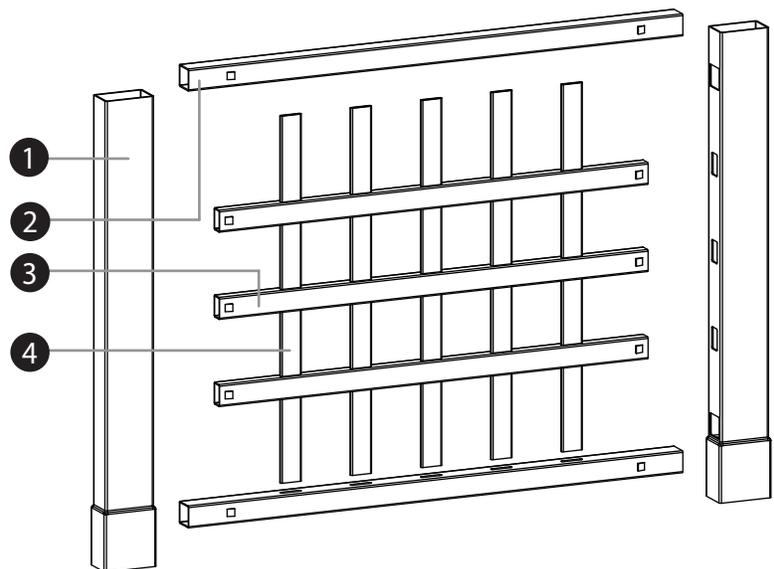

General Information

- Read Instructions through carefully before beginning assembly.
- When assembling components, place on a non-abrasive surface (i.e. shipping box) to avoid scratching.
- We recommend an area approx 5'x 8' for unobstructed assembling.
- You should not need to use excessive force when assembling component.

STEP ONE

1

Align and insert the five vertical spindles into the horizontal spindle as shown. Note the spacing between the horizontal rails are to match that of the posts.


2

Align and insert the top and bottom rails as shown.


3

Insert the lattice from step 2 into the routed holes on the posts as shown. Press down on each of the horizontal rails to lock them into place.


2

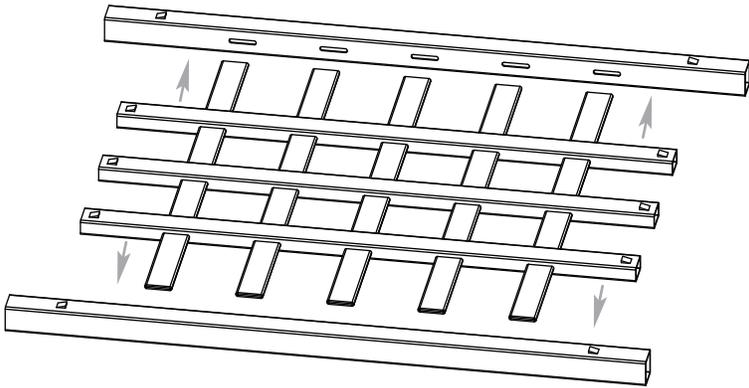

1

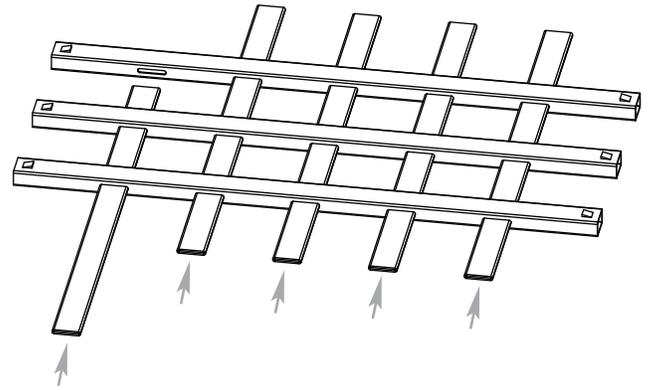

3 **NOTE:** There are locking tabs located at the ends of the horizontal rails. Once inserted and pushed into the routed holes, they will lock into place.

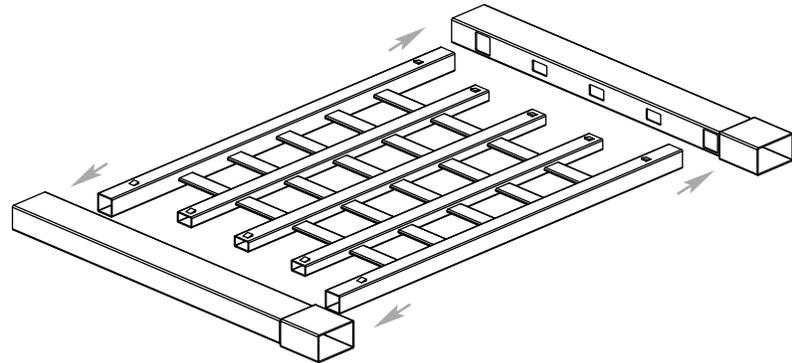


STEP TWO

4

Insert the trellis from Step One above onto the 24" x 36" White Raised Planter as shown. Place the post caps from the planter box onto the top of the trellis.

4

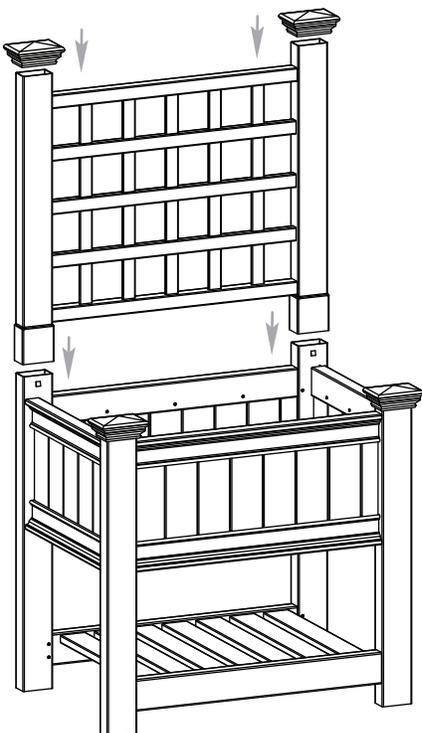

5

Secure the trellis into place using the four provided screws at locations shown below:

5

