
## Installation Instructions,

**Ornamental Post Anchors** 

30320 (I2-600) 24" 2"x2" 30300 (I2-850) 34" 2"x2" 30340 (I25-850) 26" 2-1/2"x2-1/2" 30360 (I3-850) 34" 3"x3"

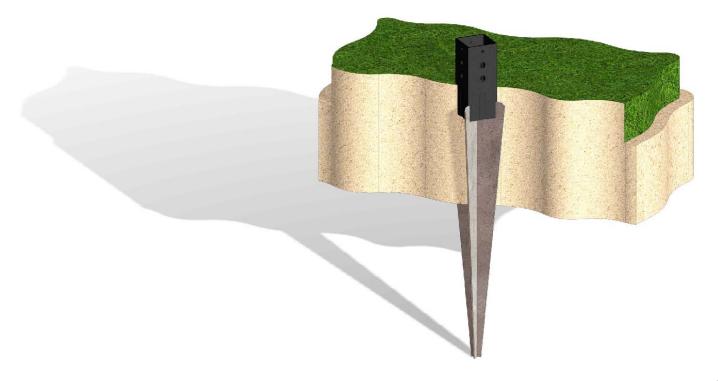



Weight: LBS Scale: 1:1

Last updated: 3/28/2016


Installation Instructions, Ornamental Post Anchors




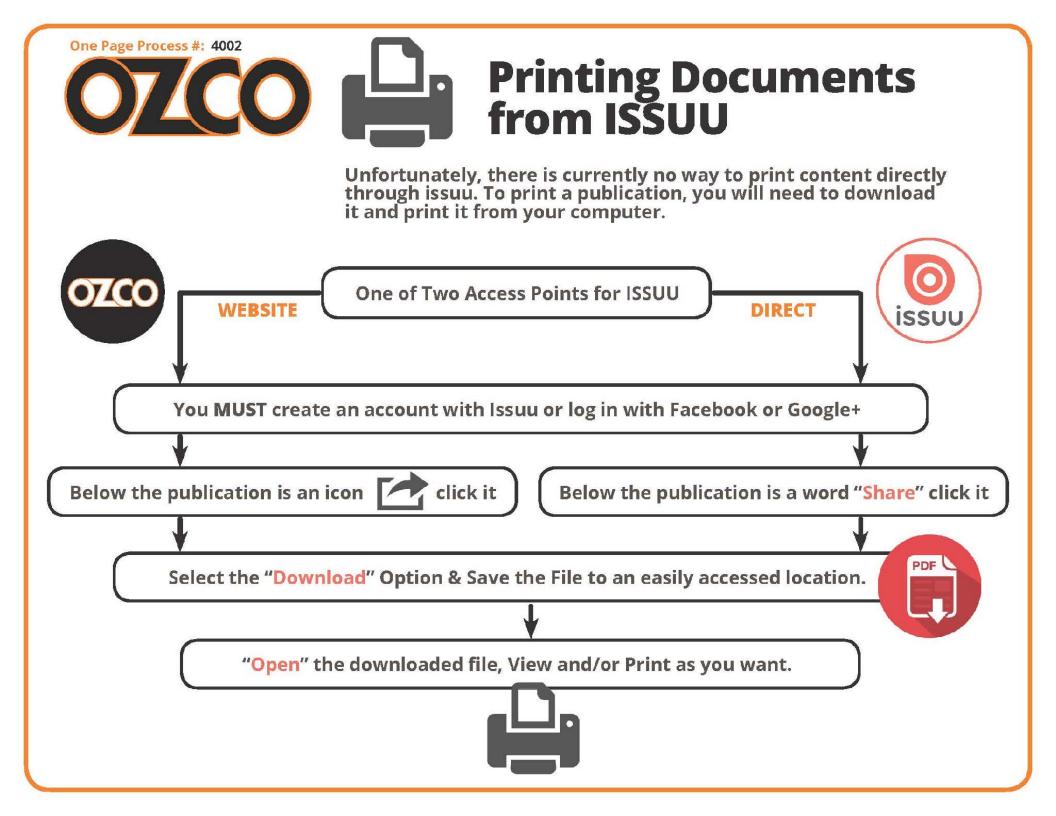


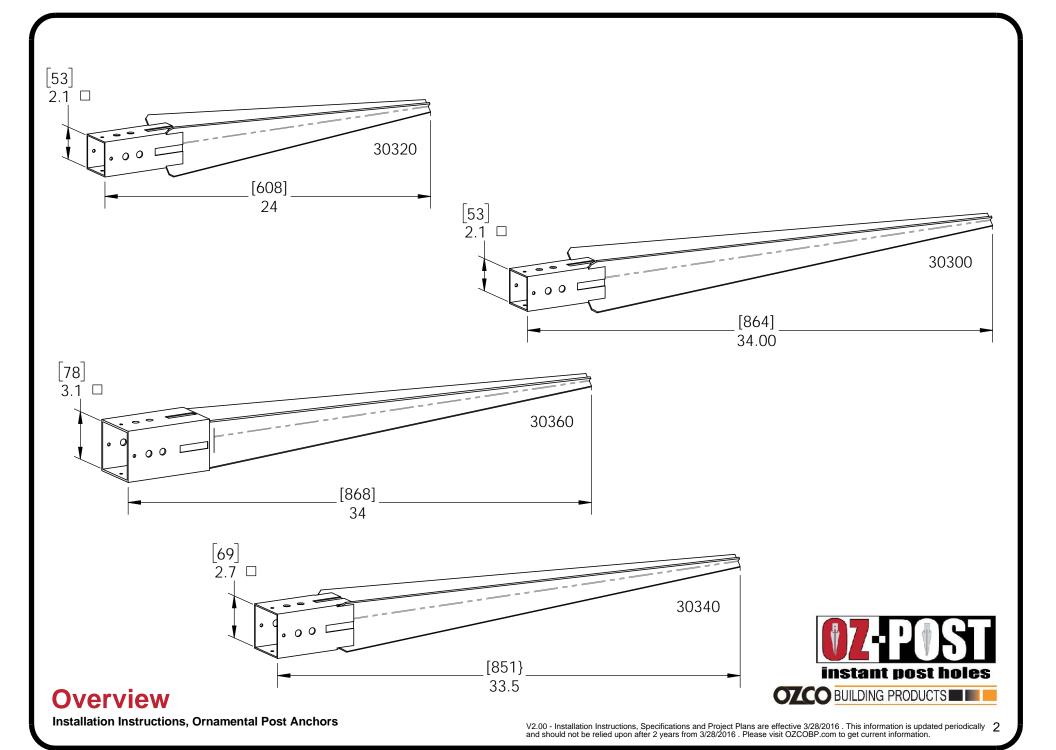

Ornamental Post	Installation choice	
Anchor	MDK	JDK
12-600 (30320)	without spacer	OH-01 Driver; without Spacer
12-850 (30300)	without spacer	OH-01 Driver; without Spacer
125-850 (30340)	without spacer	OH-01 Driver; with HSP-I25 Spacer
13-850 (30360)	without spacer	OH-01 Driver; with HSP-I3 Spacer

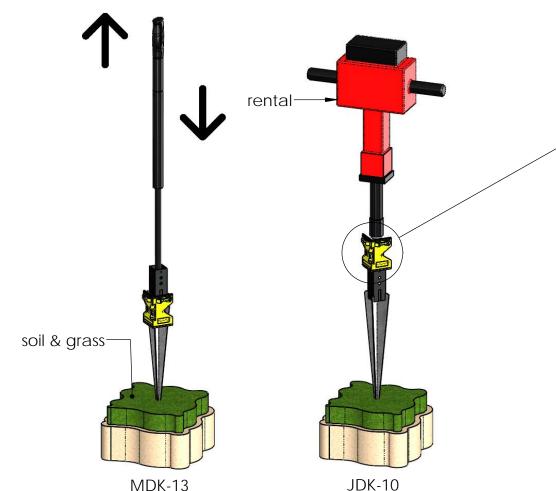



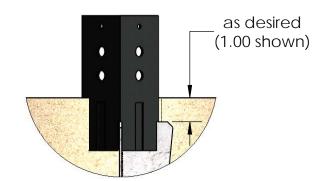

JDK-10 Jackhammer Driver Kit (20480)



## OTCO BUILDING PRODUCTS

step 1 choose your installation method


**Installation Instructions, Ornamental Post Anchors** 

Manual Driver Kit (20500)





install provided screws while keeping an eye on level condition; adjust as required

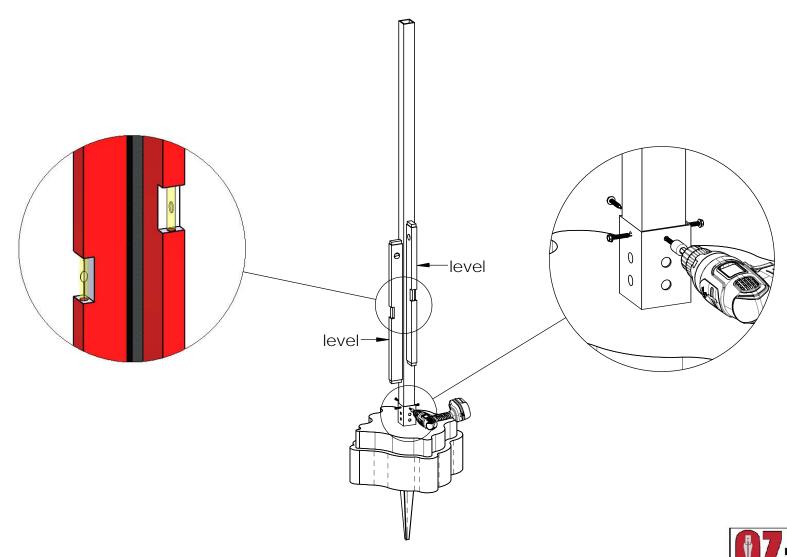


<u>after this step</u> follow fence supplier installation instructions

step 3 leveling

**Installation Instructions, Ornamental Post Anchors** 

OVCO BUILDING PRODUCTS■■■

install bolts & nuts while keeping an eye on level condition; adjust as required

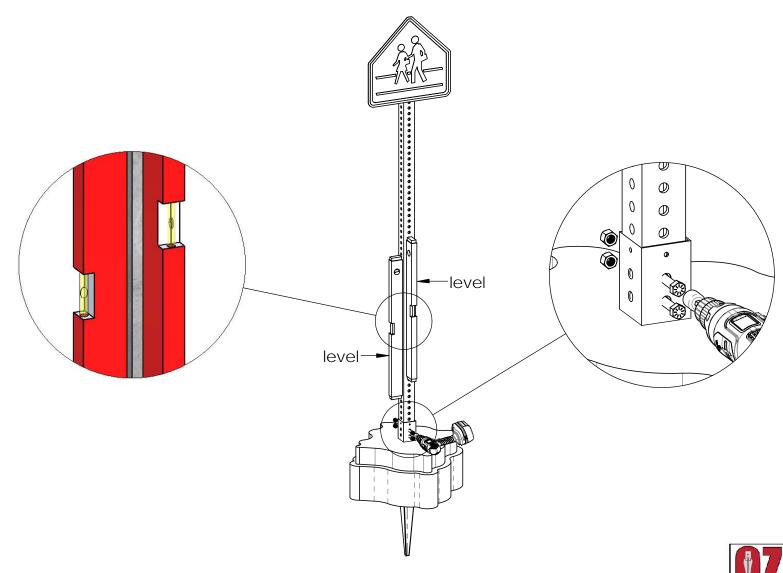

<u>after this step</u> follow fence supplier installation instructions

## perforated tubing leveling

**Installation Instructions, Ornamental Post Anchors** 

instant post holes

OZCO BUILDING PRODUCTS

V2.00 - Installation Instructions, Specifications and Project Plans are effective 3/28/2016 . This information is updated periodically and should not be relied upon after 2 years from 3/28/2016 . Please visit OZCOBP.com to get current information.