


Installation Instructions, 56636

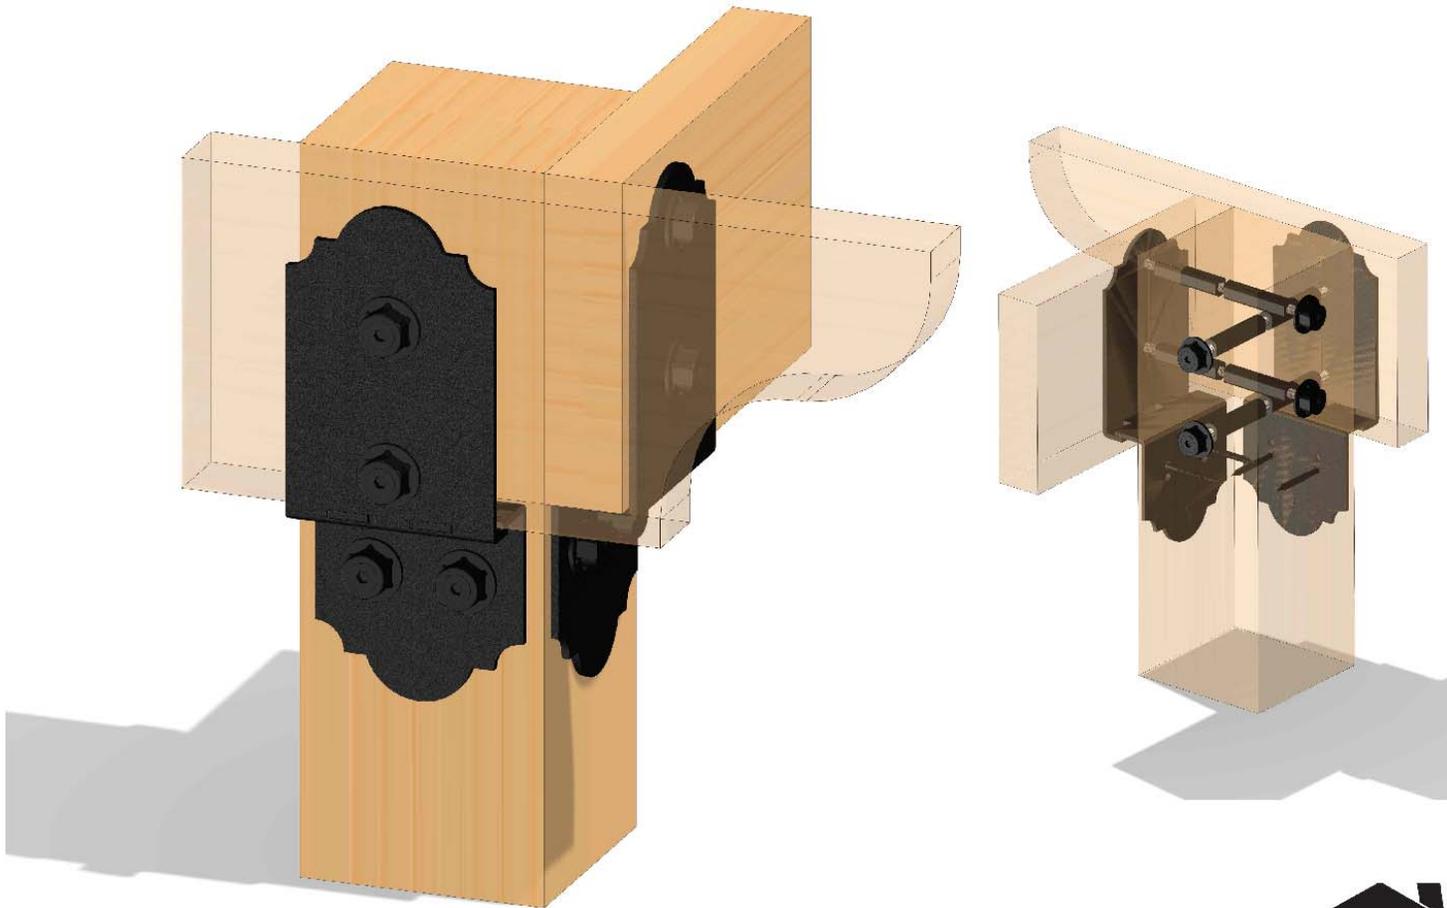


Post to Beam shown
assembled with
OWT Timber Bolts
(sold separately)

OWT Timber Bolts
come in 4
adjustable length to
suit your application




OZCO BUILDING PRODUCTS ■■■

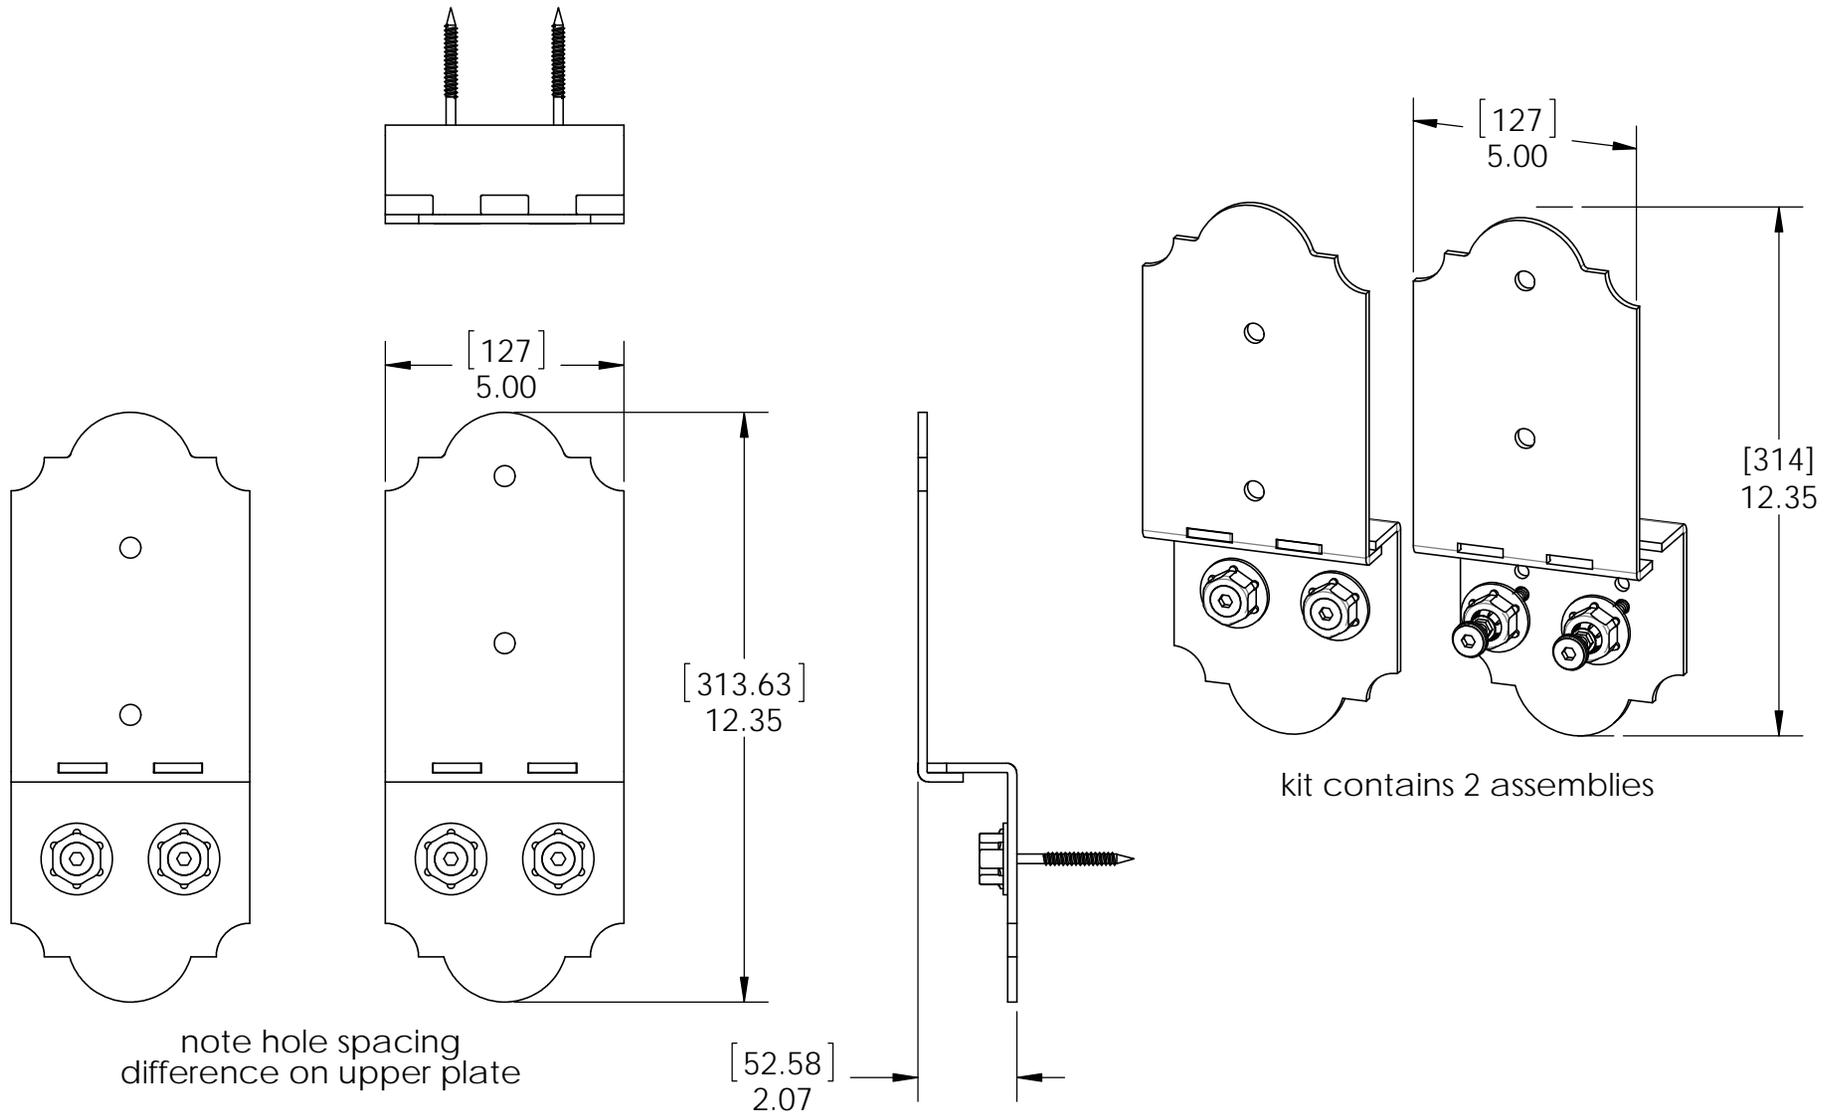

56636

Installation Instructions, 56636

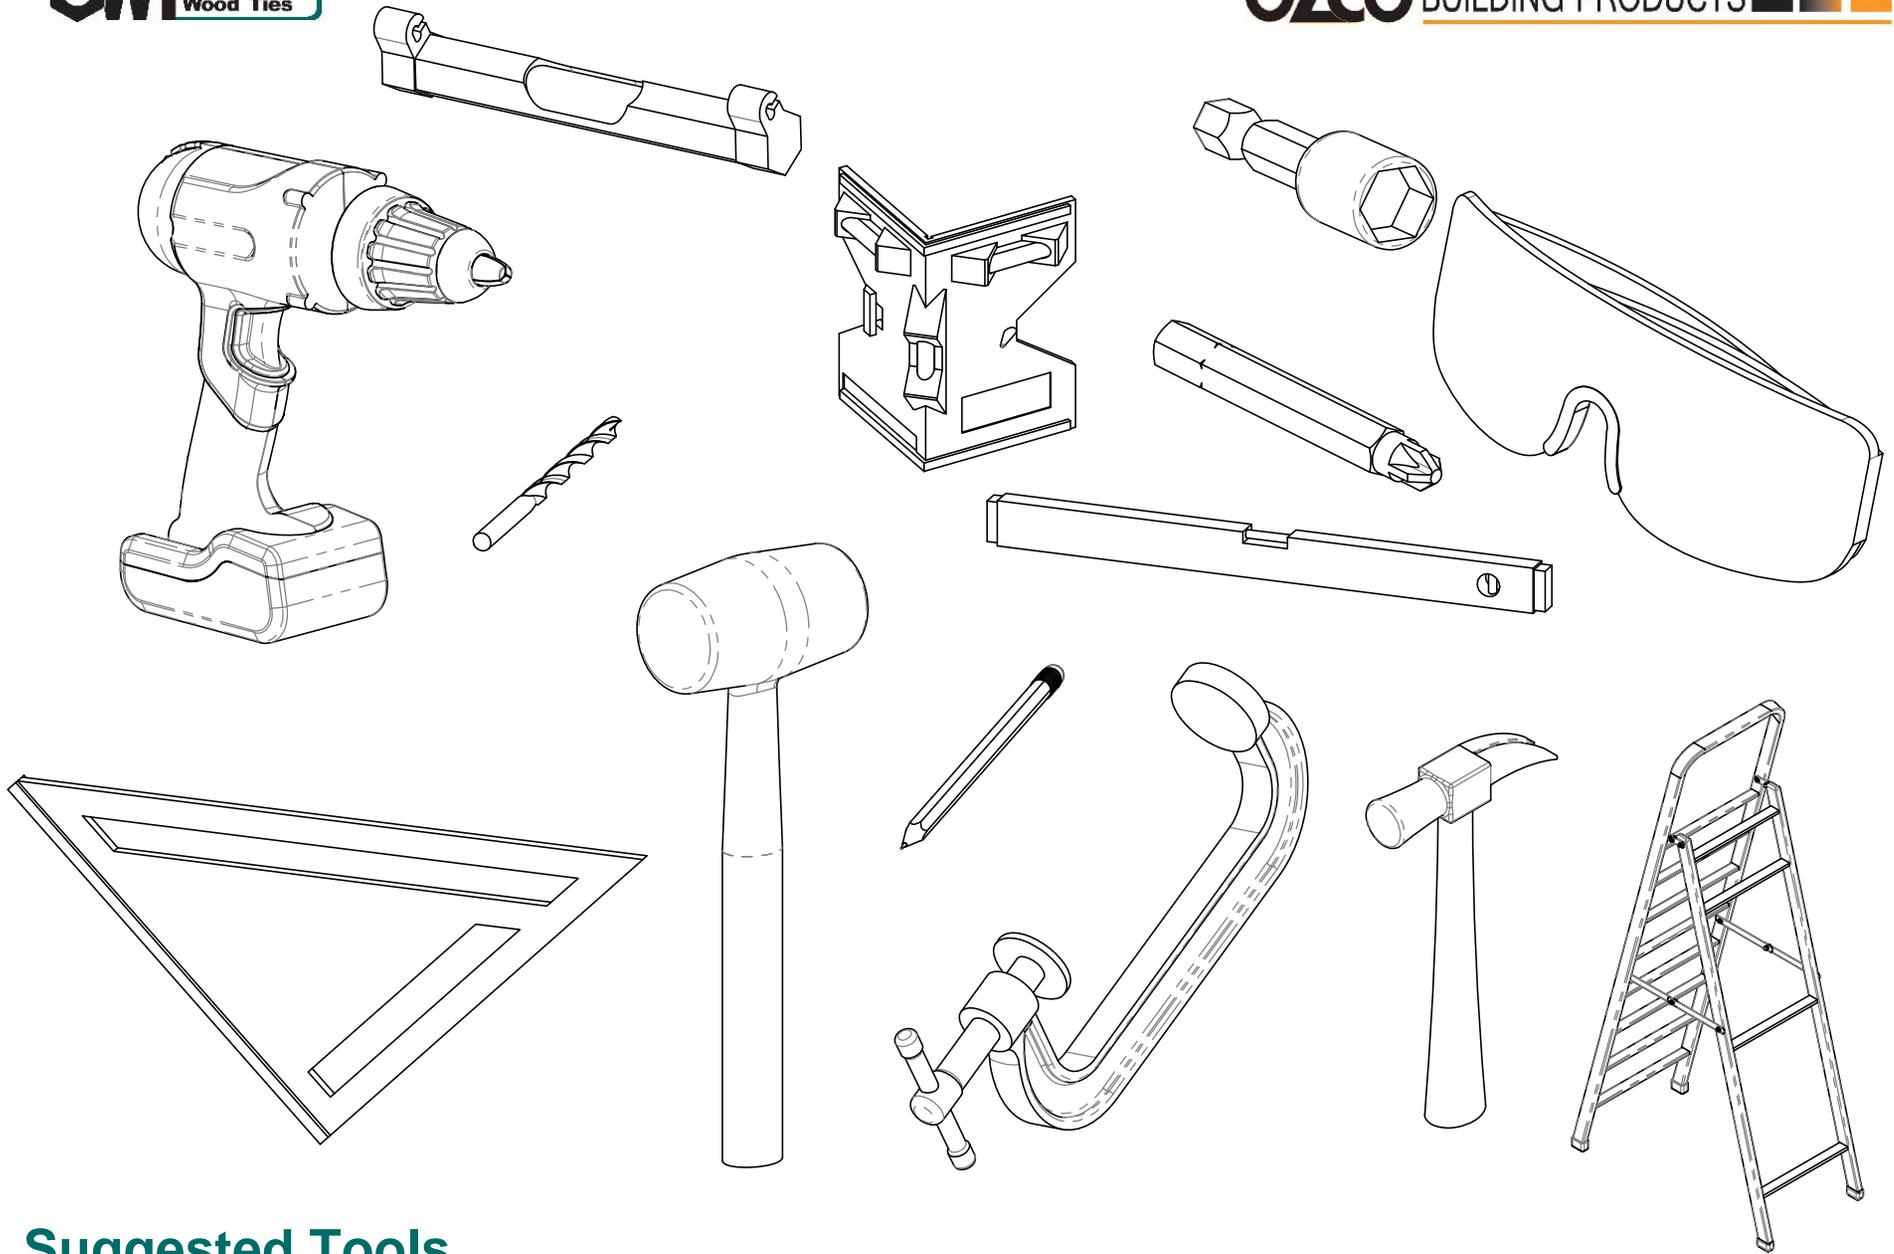


Suggested Tools
(others may be required)

Installation Instructions, 56636






drill out dimple per 56623
installation instructions
note: drill hole BEFORE step 1

56623 option
(sold separately)

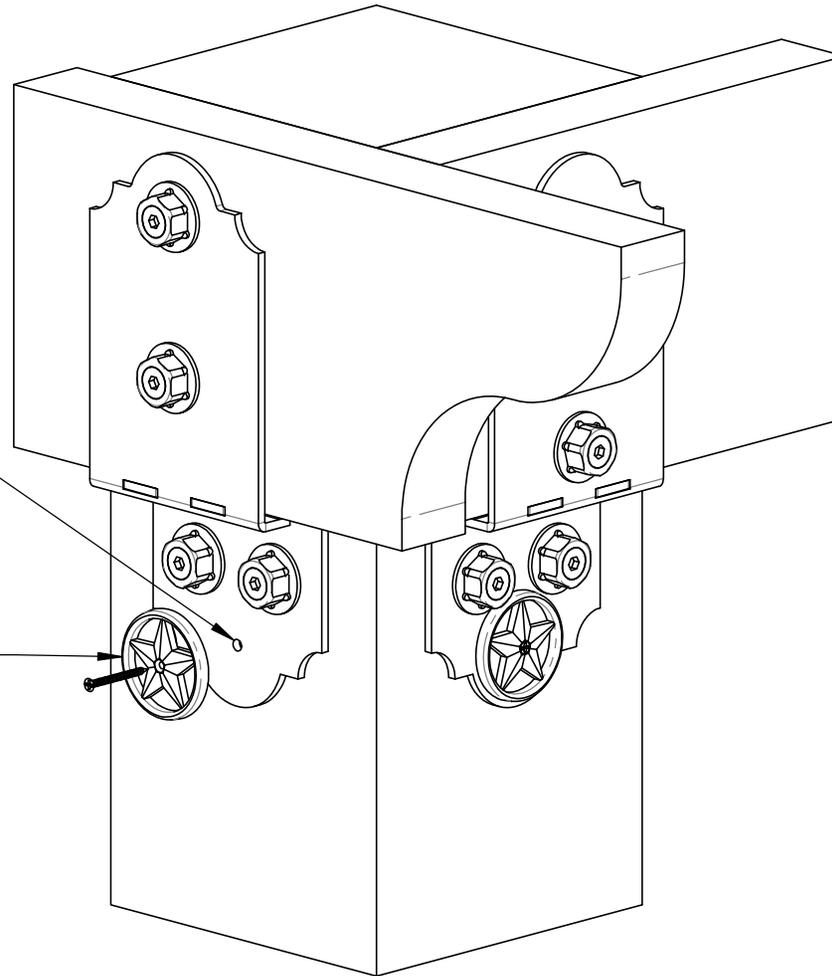




optional accessory

Installation Instructions, 56636

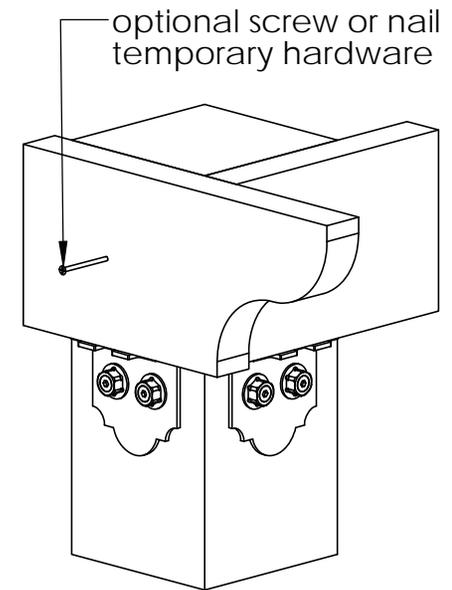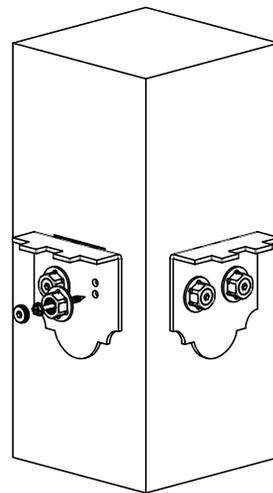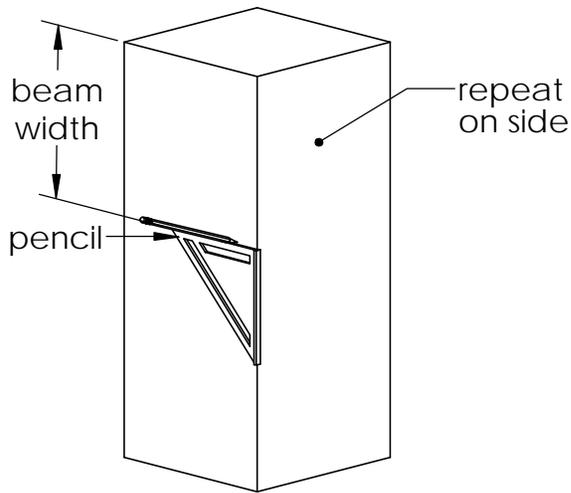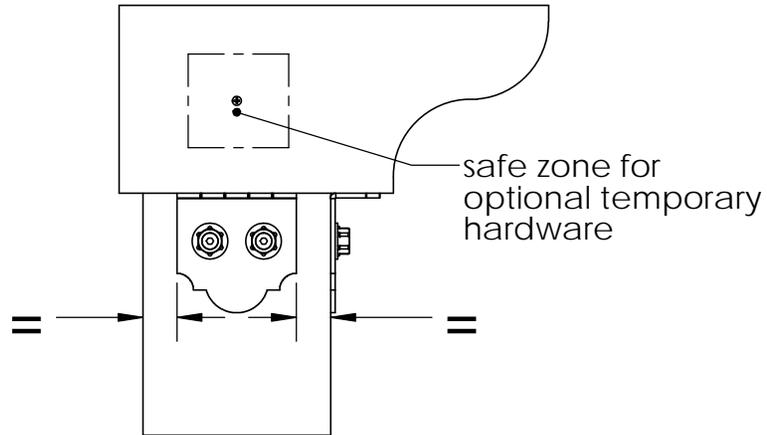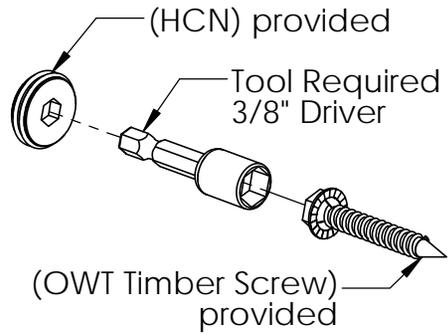

step 1


Installation Instructions, 56636

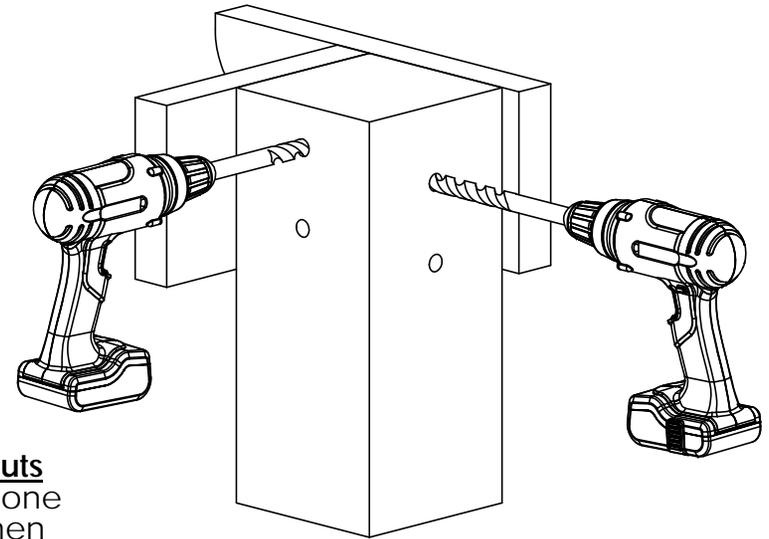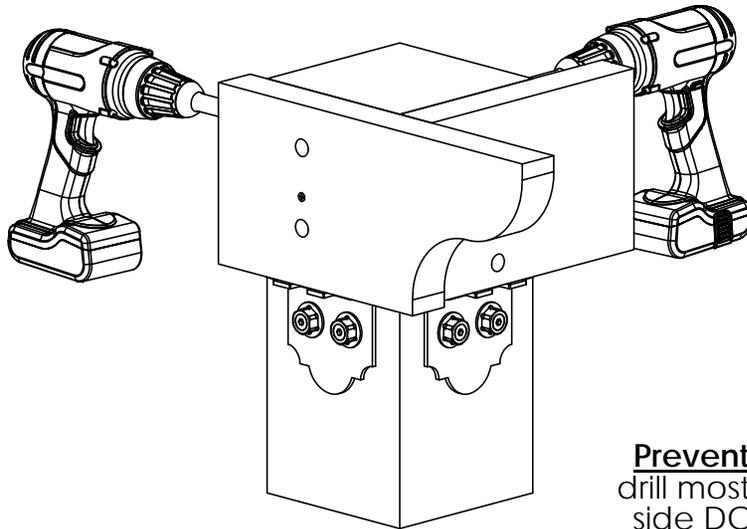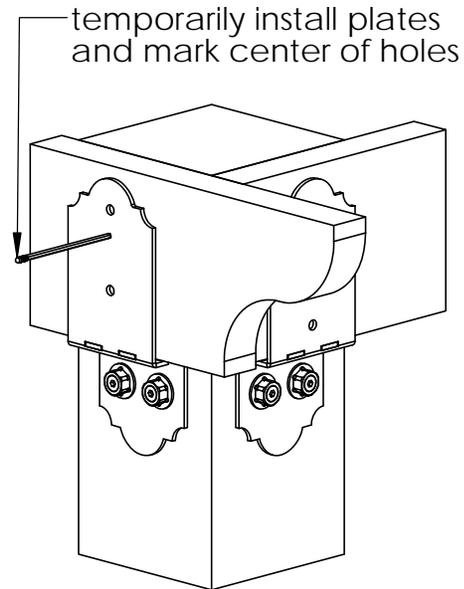

Prevent Unsightly Breakouts
drill most of the way from one
side DO NOT breakout then
repeat from opposite side

step 2

Installation Instructions, 56636

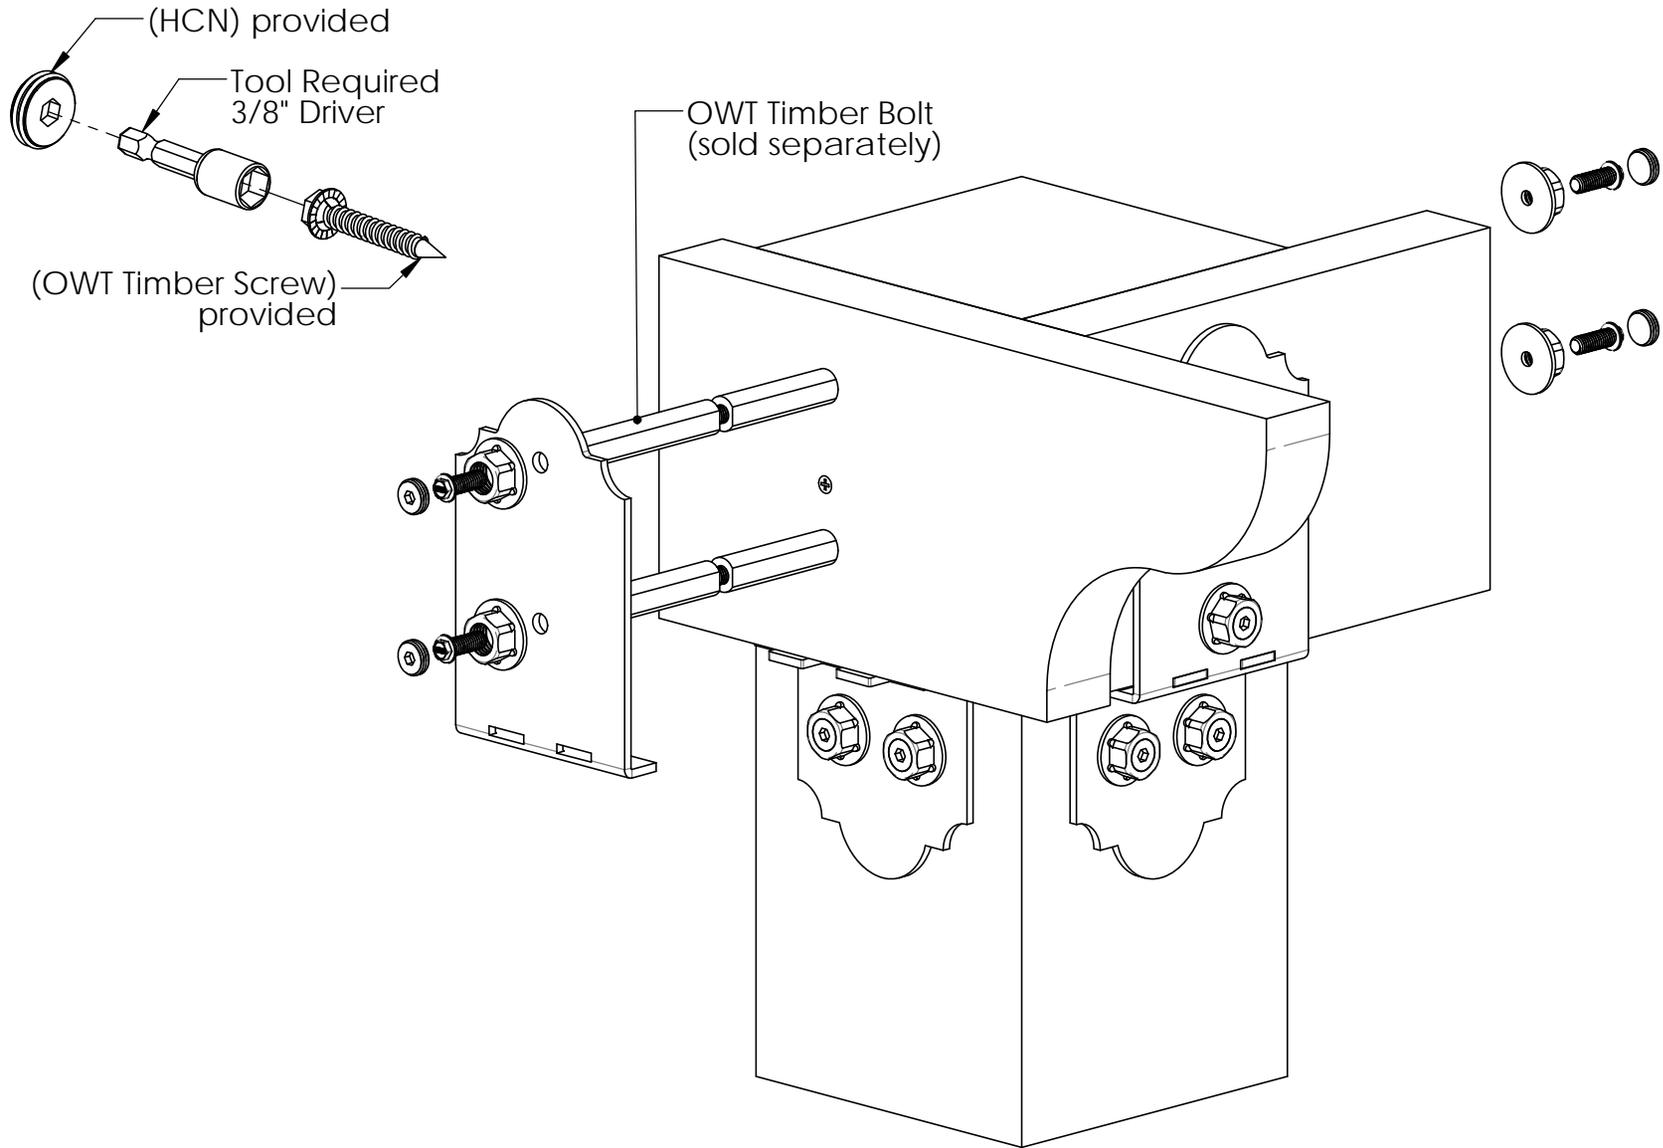

step 3

Installation Instructions, 56636