


Part #6100 Outside Trim Handle For Detex Bar



Install adjustable mounting plate onto gate. Attach lock box onto mounting plate using two countersunk screws.

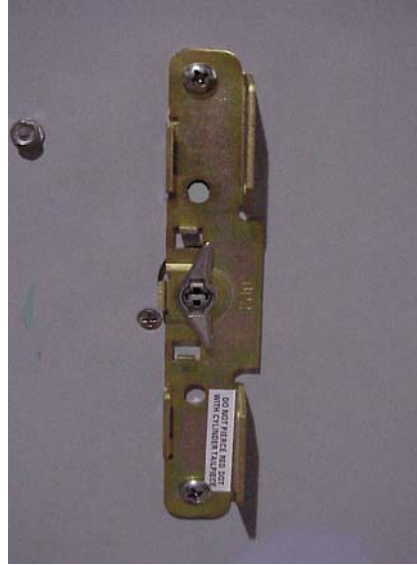

Install Detex subassembly on inside of gate using two 1/4" x 1" long screws, into lever handle assembly.

NOTE: Cylinder tailpiece must *not* extend past movable cam piece on subassembly.



Lever handle is field reversible. Install exit bar as shown in other instruction sheet.