


DESIGN

PURCHASE

CONSTRUCT

ENJOY




Project #310

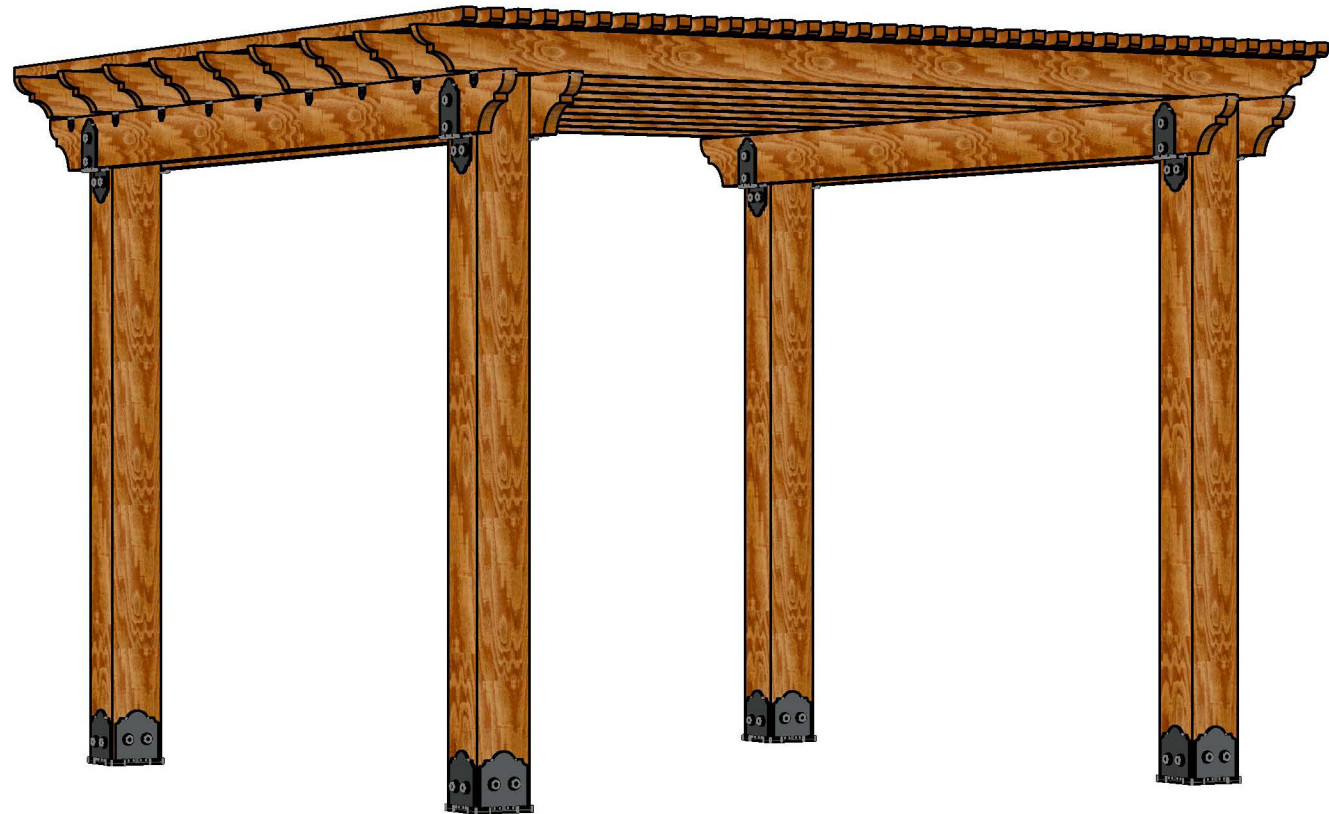


Pergola Cedar Wood Patio Shade Structure – Free Standing




Overview

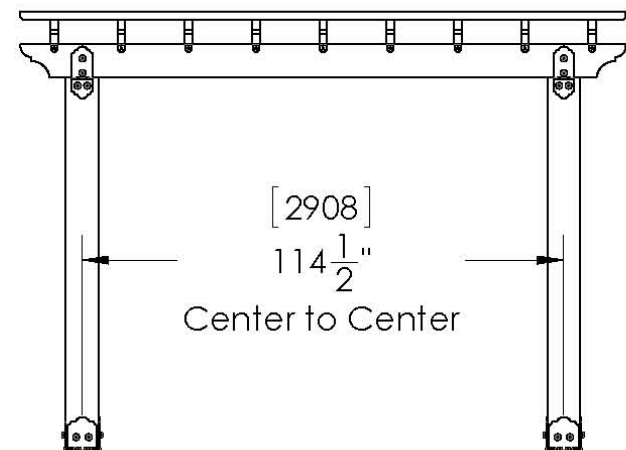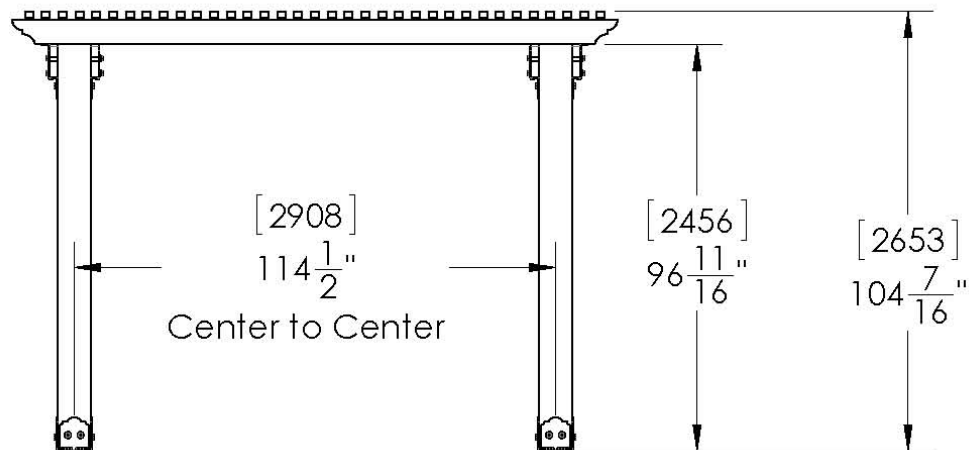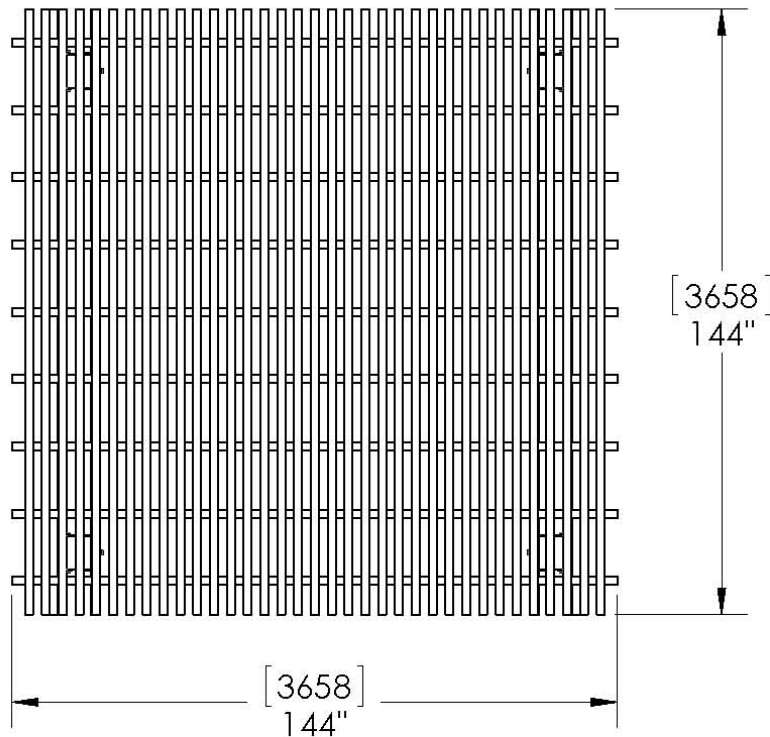


Bill of Materials

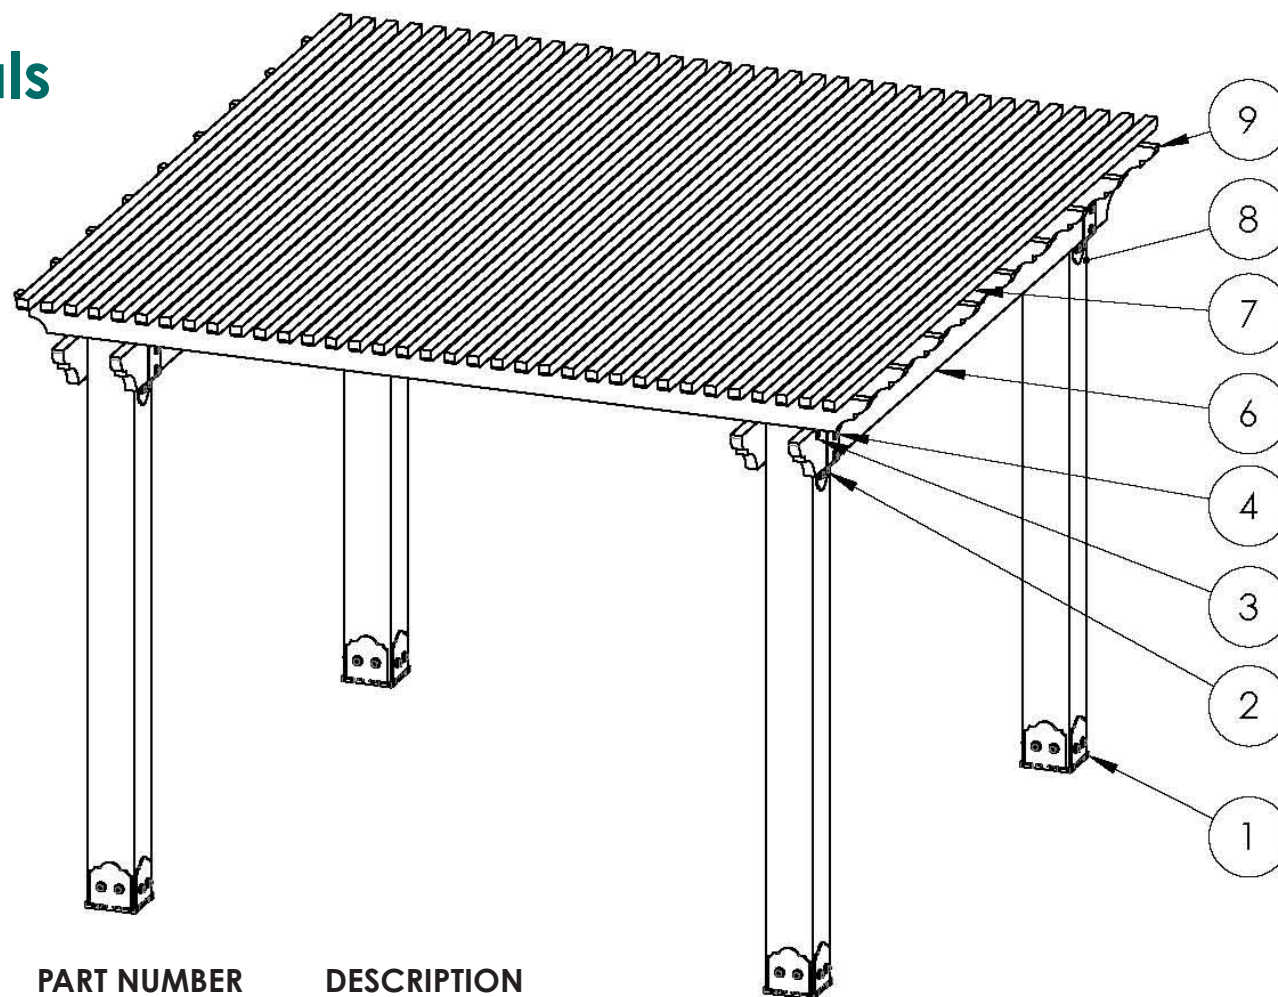


ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
1	4	56609	Assembly, 8x8 Post Base
2	4	56637	Post to Beam Bolt Inline
3	2	56617	Assembly, 2" Rafter Clip
4	4	56652	Assembly, OWT Timber Bolt 10-12"
5	105(min)	N/A	3" Screws or Nails (not shown)
6	4	2x8x12	Cedar Board Beam
7	35	2x2x12	Cedar Board Purlin
8	4	8x8x8	Cedar Post Post
9	9	2x6x12	Cedar Board Rafter

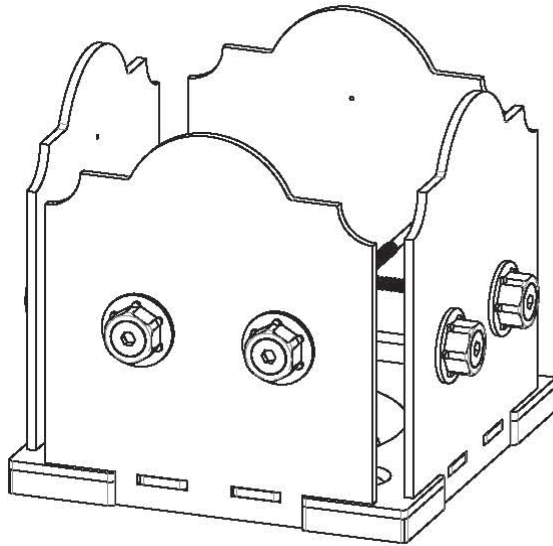


56609

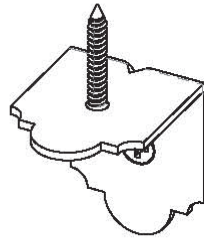

56617

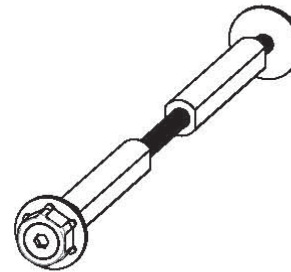

56652

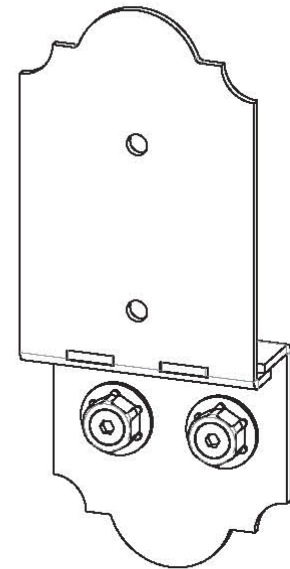


56637


**Installation Instructions of Ornamental
Wood Ties are Provided With Product**

Recommended Tools

(additional tools may be required)

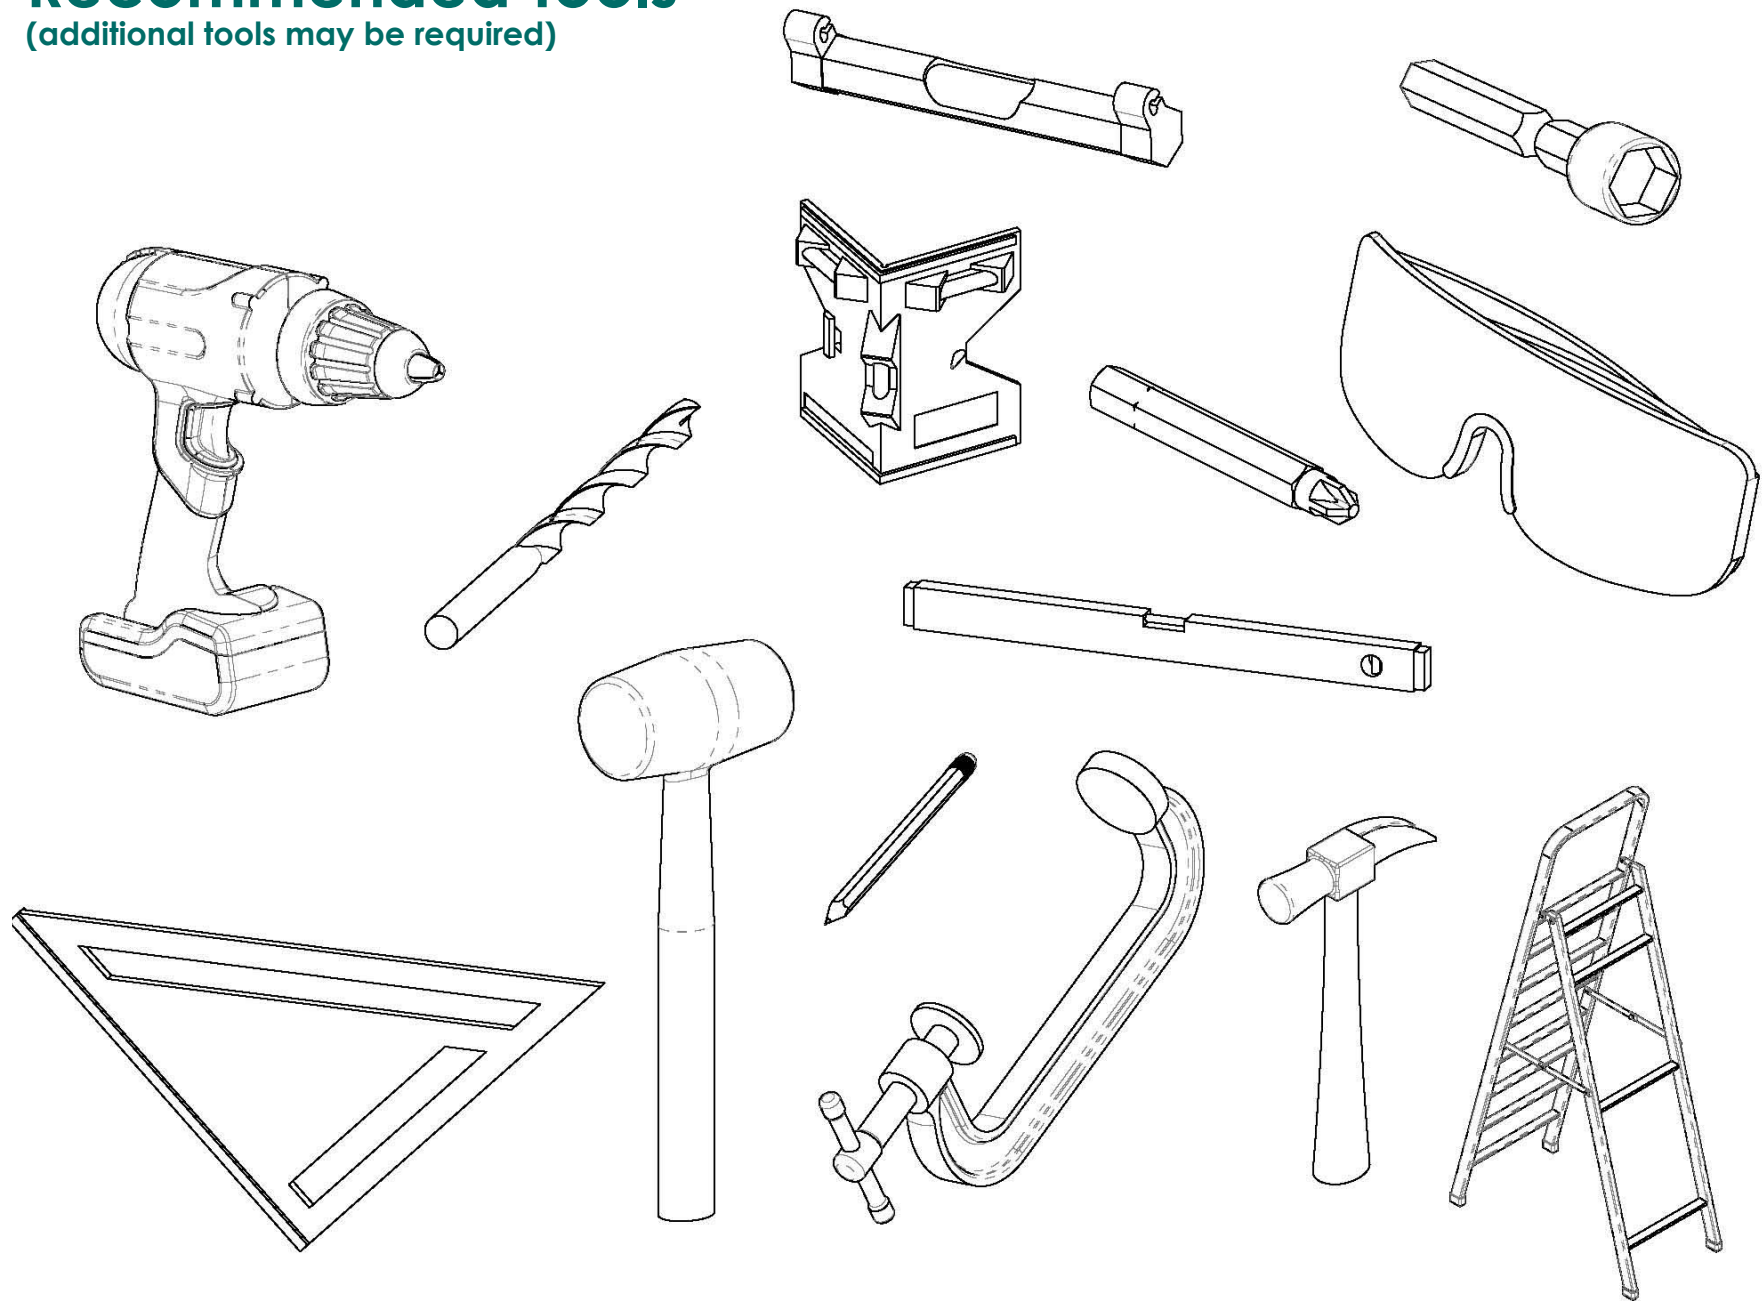


Cut List

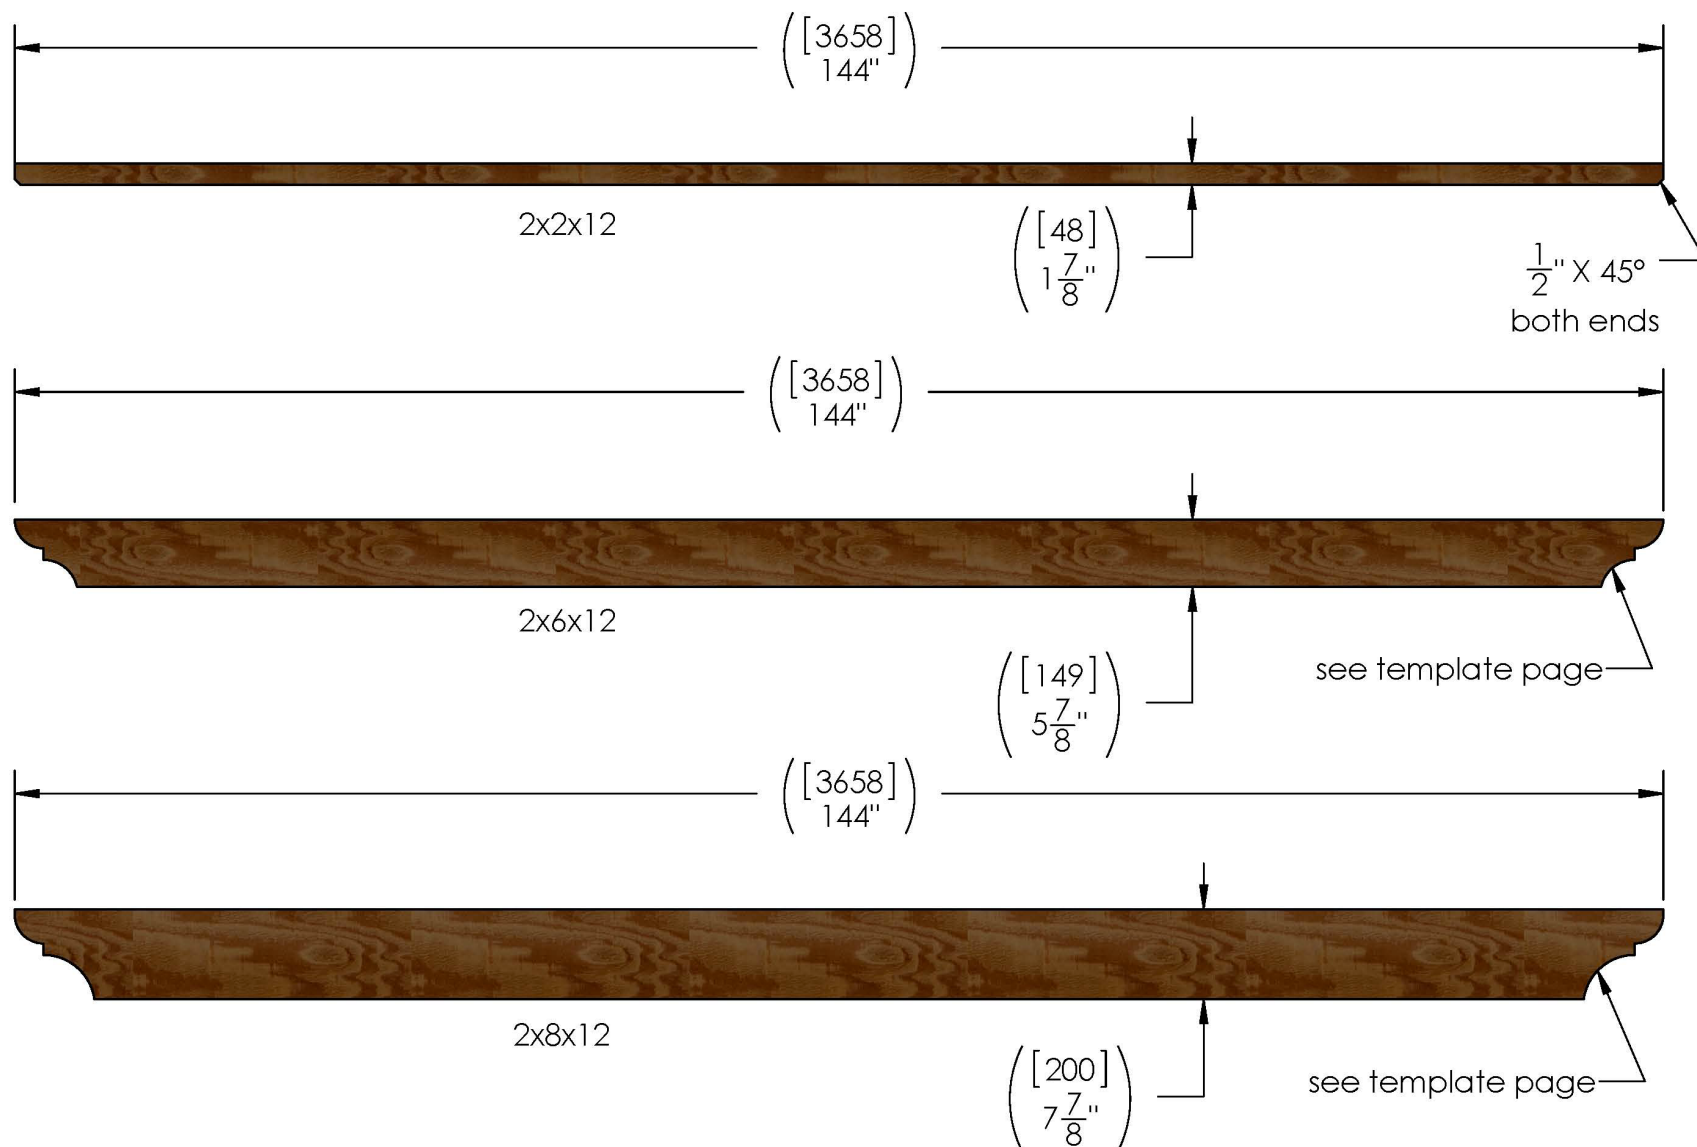

For Cut Templates Go To Page 7 or For Additional Templates Online www.OZCObp.com


Template

(2x6x12 Board) Scale: 1:1 print 1x

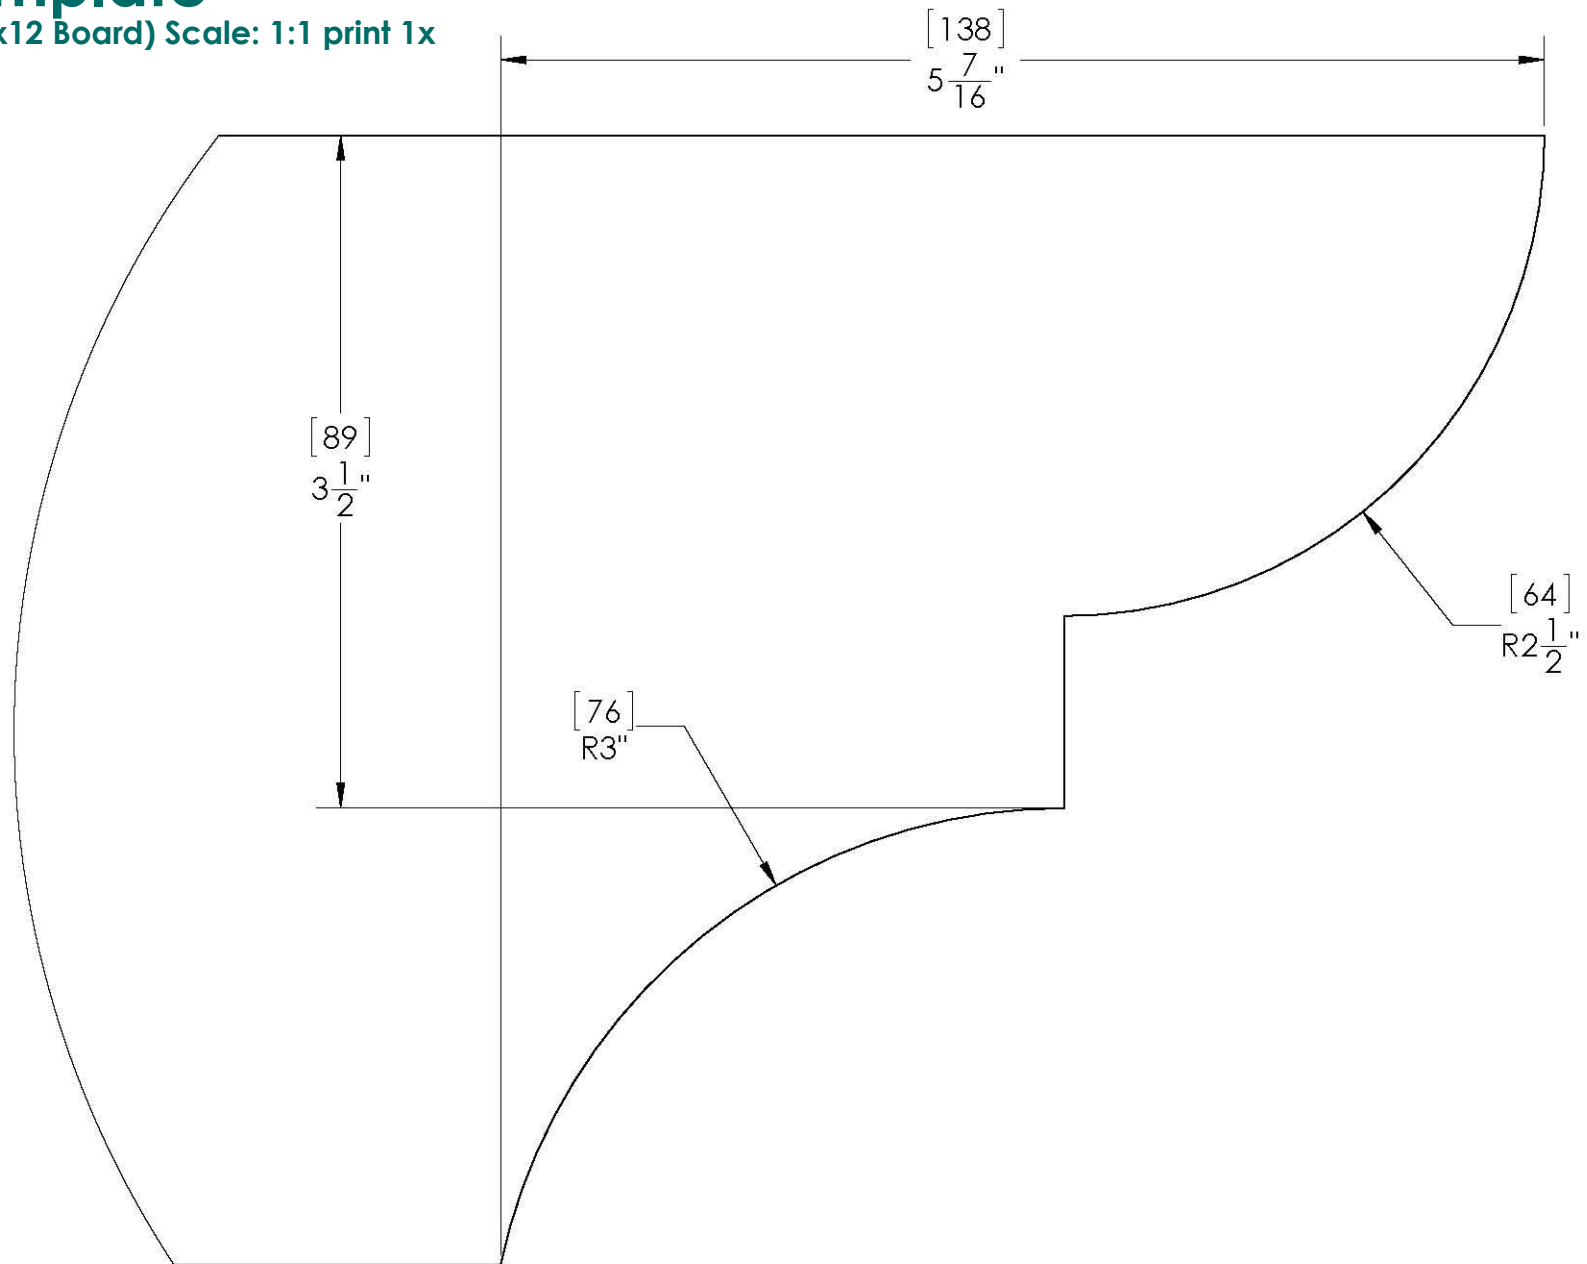


Template

(2x8x12 Board) Scale: 1:2 print 2x

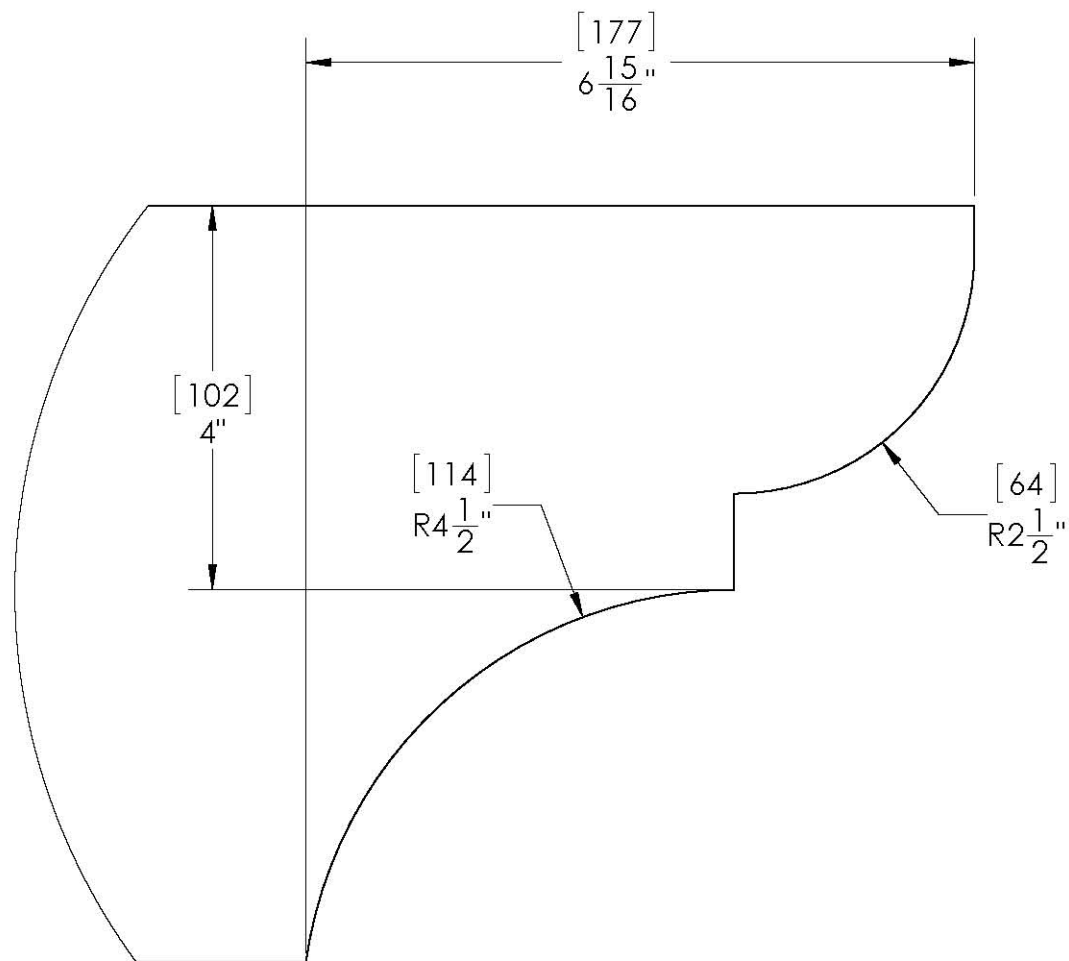


Site Plan

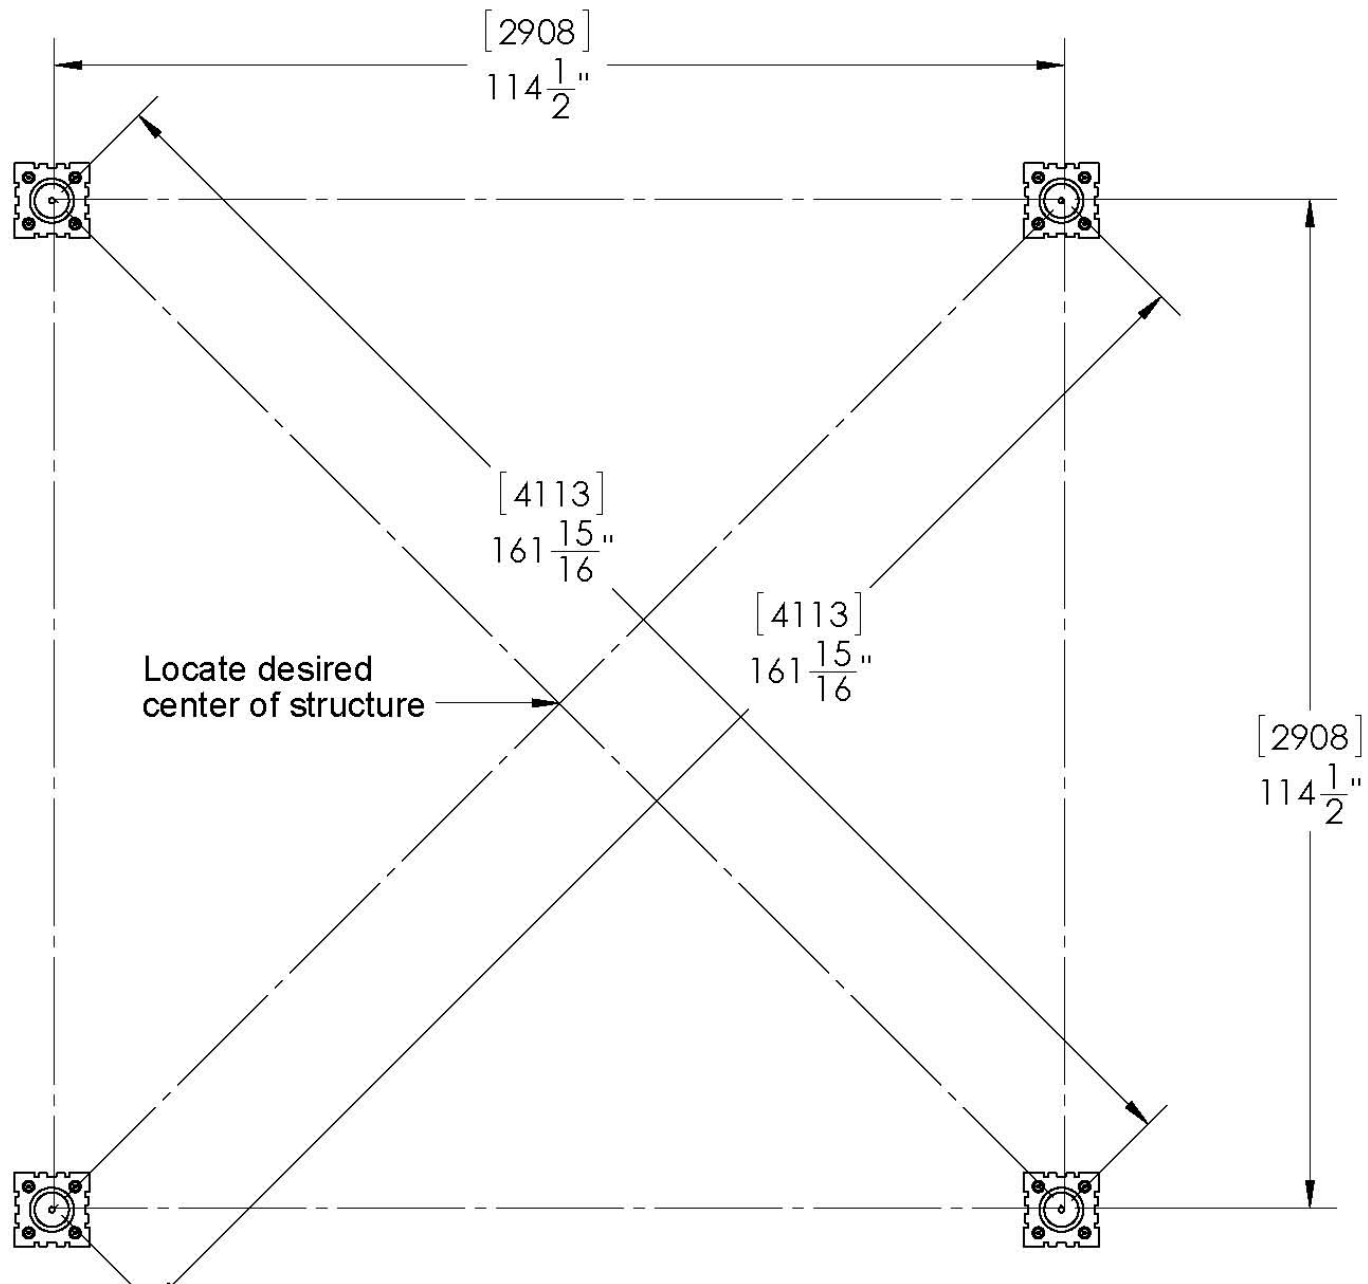


If Site is not Level See The Site Leveling Instructions Online www.OZCObp.com

Step 1

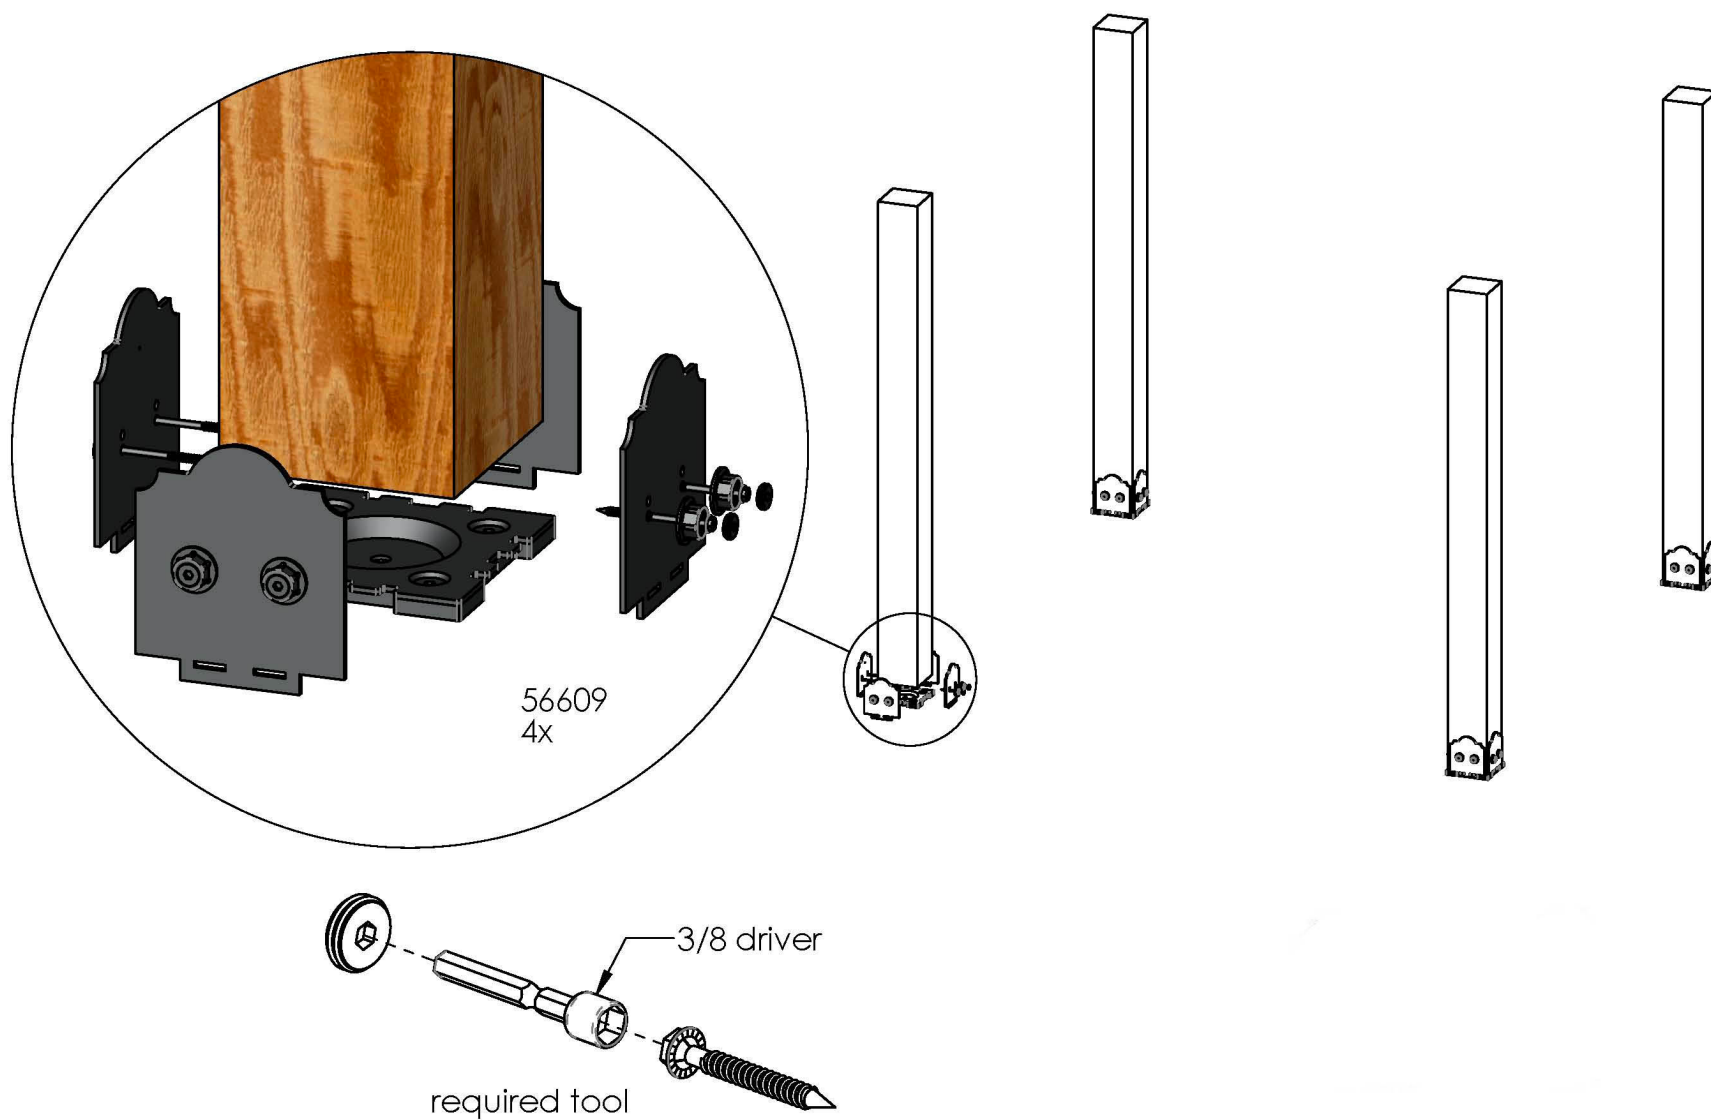


If Site is not Level See The Site Leveling Instructions Online www.OZCObp.com

Step 2

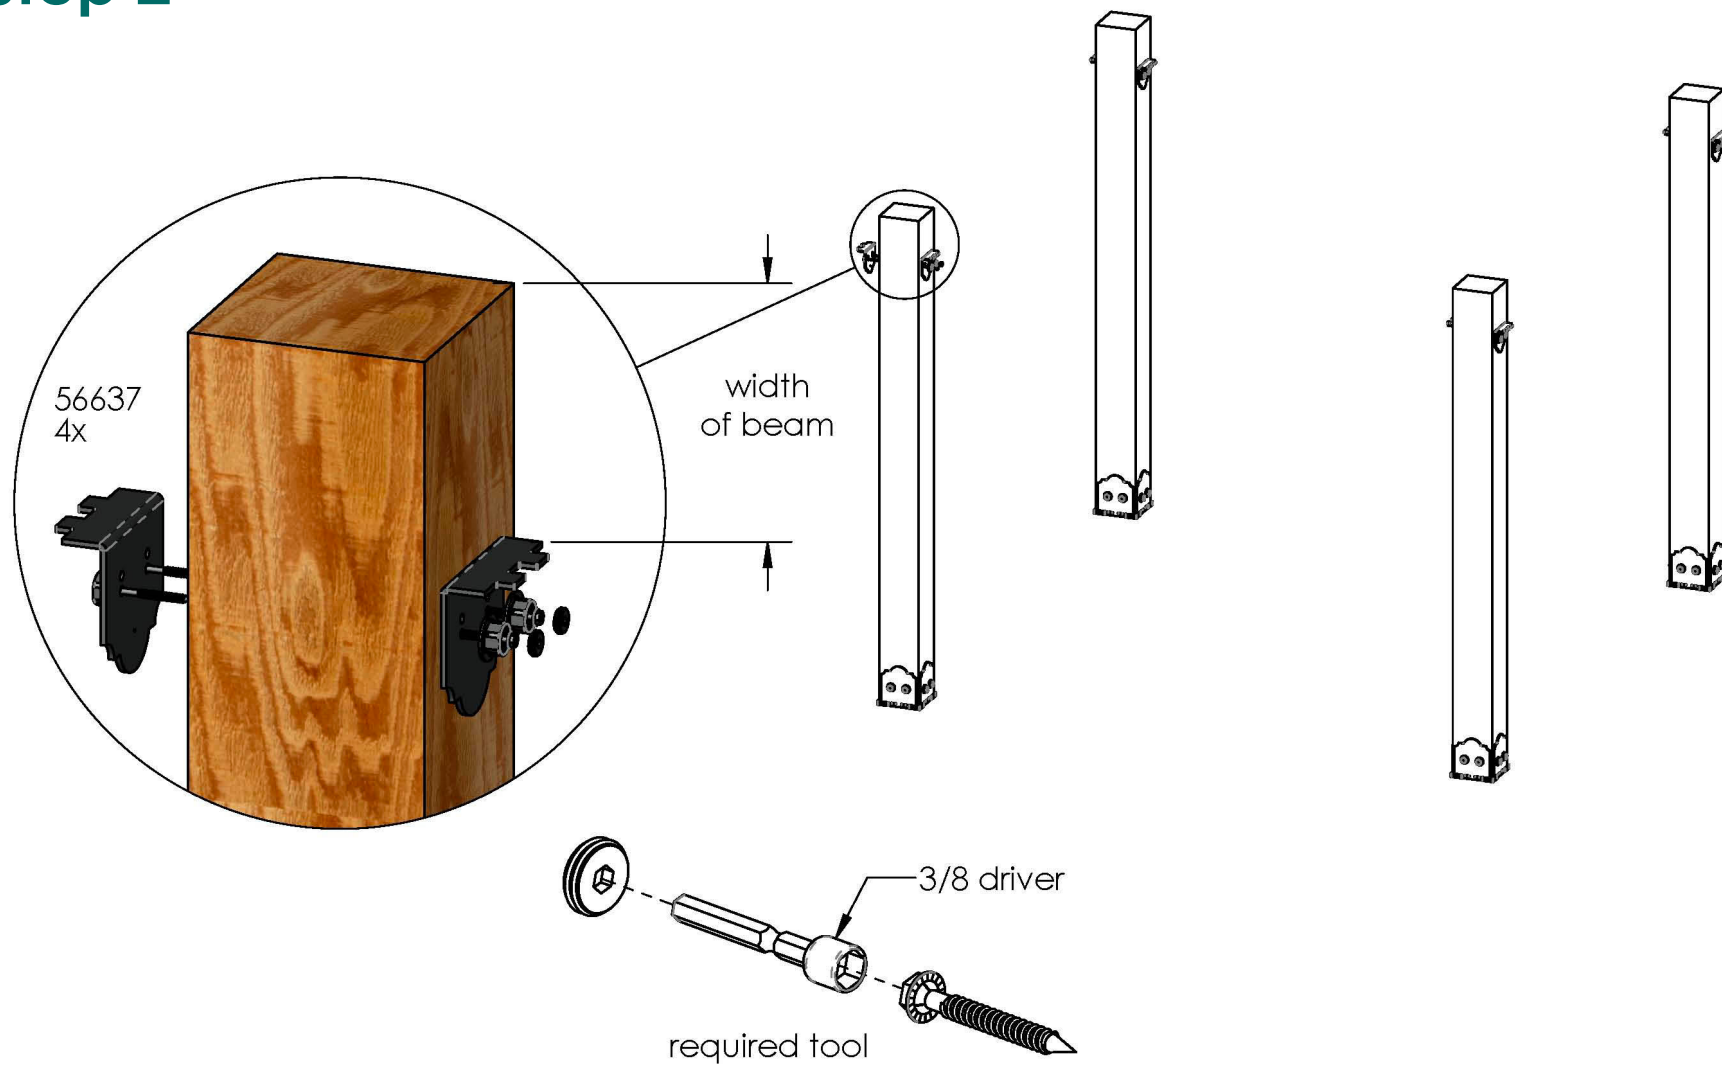





If Site is not Level See The Site Leveling Instructions Online www.OZCObp.com

Step 3

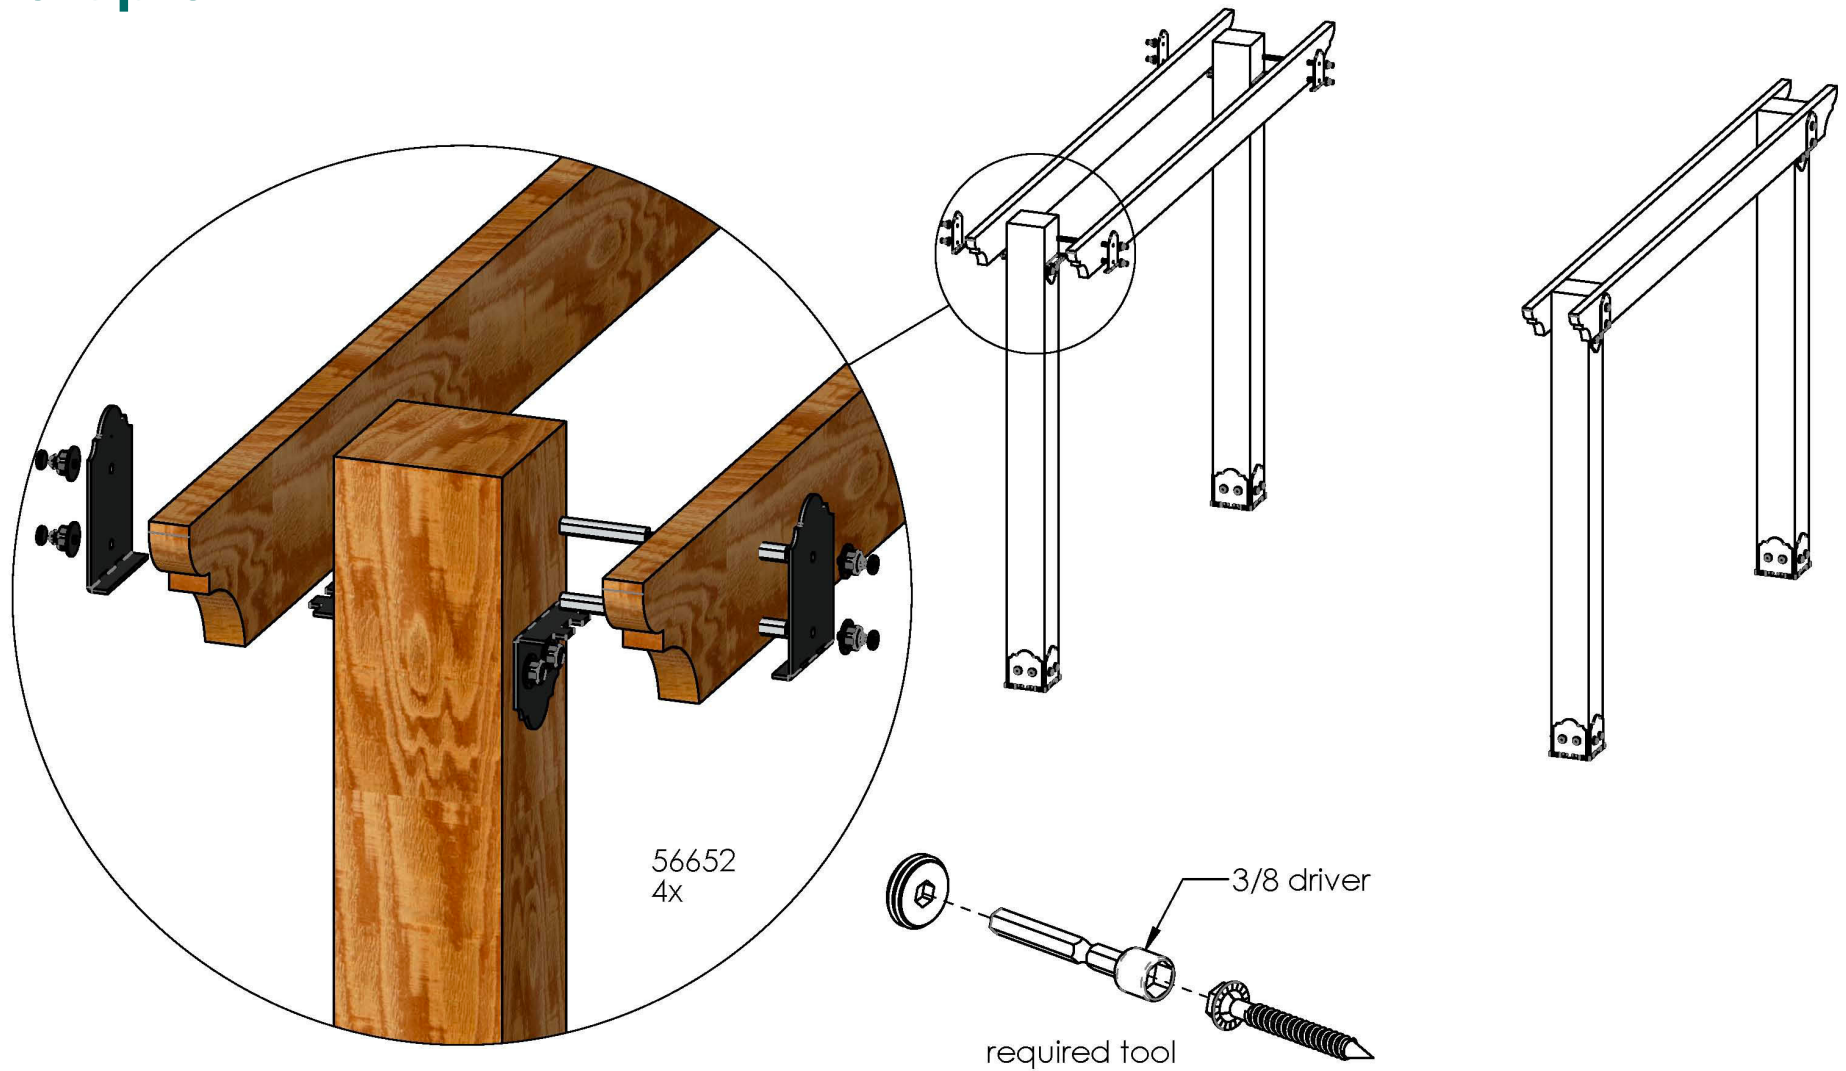


If Site is not Level See The Site Leveling Instructions Online www.OZCObp.com

Step 4

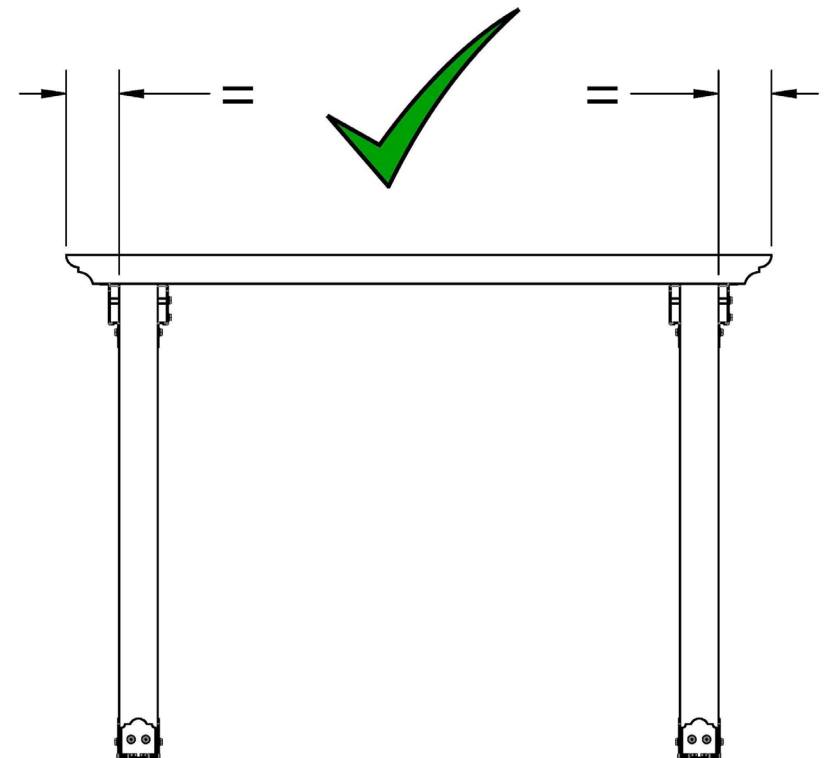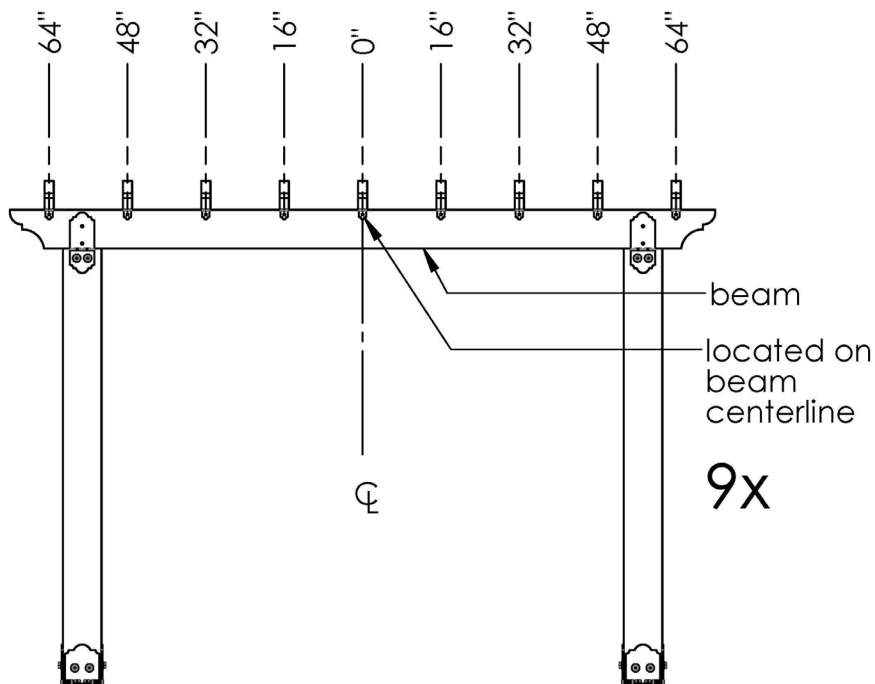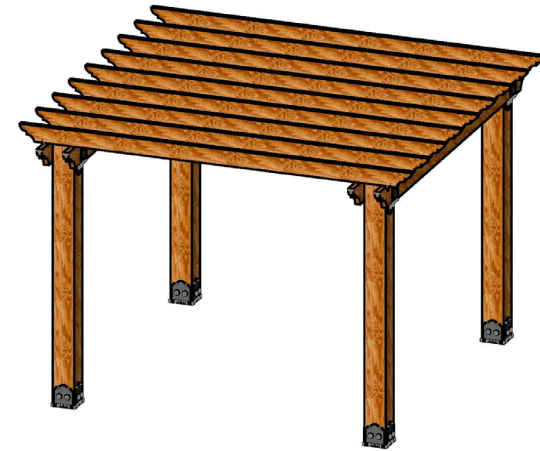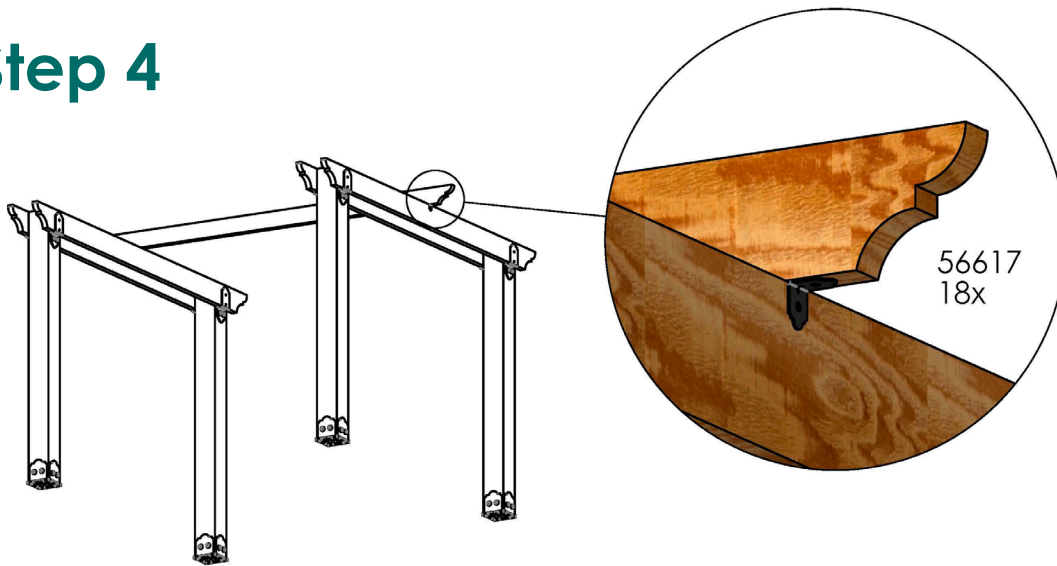


If Site is not Level See The Site Leveling Instructions Online www.OZCObp.com



Step 5

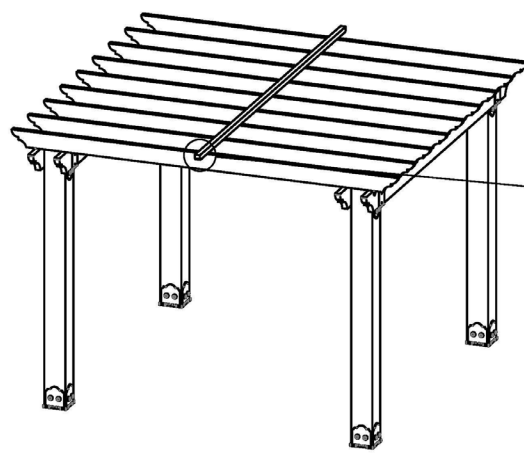


secure with
nails or screws

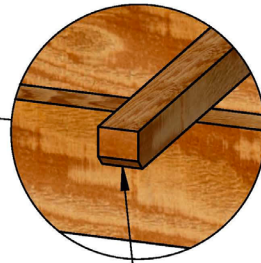

note
bevel
edge

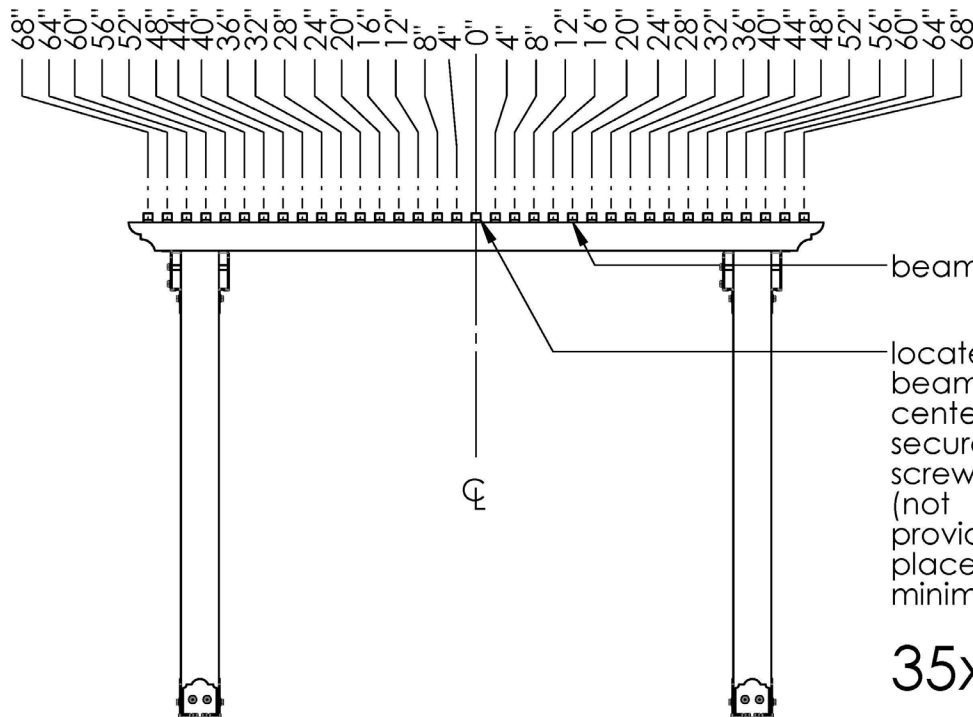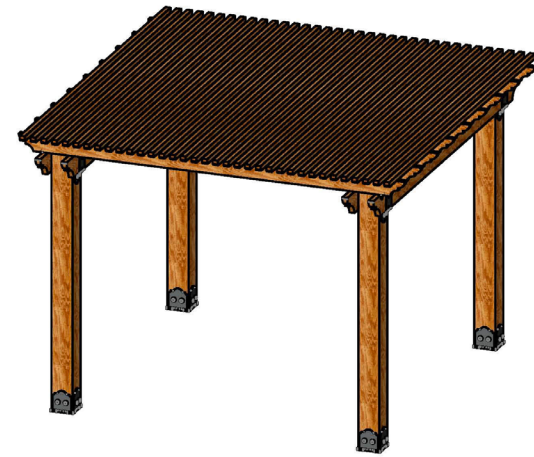

35x

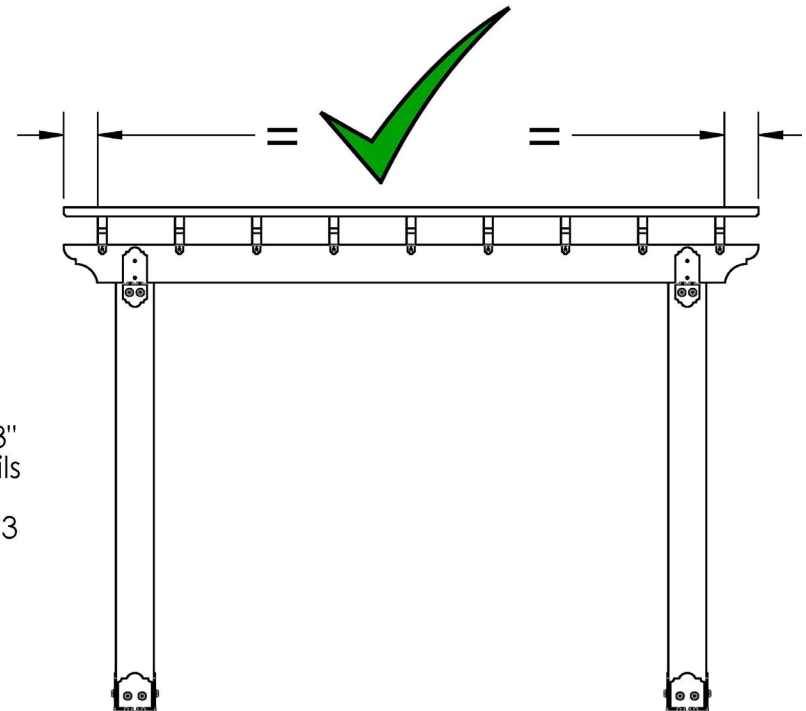

If Site is not Level See The Site Leveling Instructions Online www.OZCObp.com