




CHAN LINK SLIDE GATE WHEEL INSTALLATION GUIDE



Step 1: Align and tack weld our SHUT IT HardCORE Carriage Cap (CI2340 or CI2360) on top of your bottom rail.

Step 2: After HardCORE Carriage Cap is in place, cut rail off INSIDE of the carriage cap and then complete a full weld on both ends of the carriage cap.

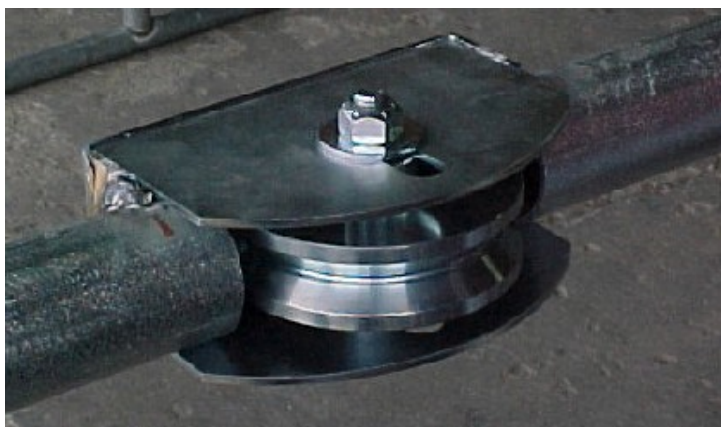

Step 3: Slide either the 4" or 6" of HardCORE Wheel w/ Carriage Plates for 2" Gate Frame (CI2520 or CI2720) into the HardCORE Carriage Cap and weld into position.