



# Hotbed Assembly Instructions




- 1 Lid
- 2 2" x 6" x 32" Side Boards
- 2 2" x 6" x 32" Side Boards w/ Slant Top
- 1 Pole w/ Chain
- 1 Handle
- 22 1" Screws (White)
- 12 1" Screws (Black) (8' Hotbed Model)
- 9 1" Screws (Black) (6' Hotbed Model)
- 1 Instruction Sheet






Hotbed Assembly Instructions

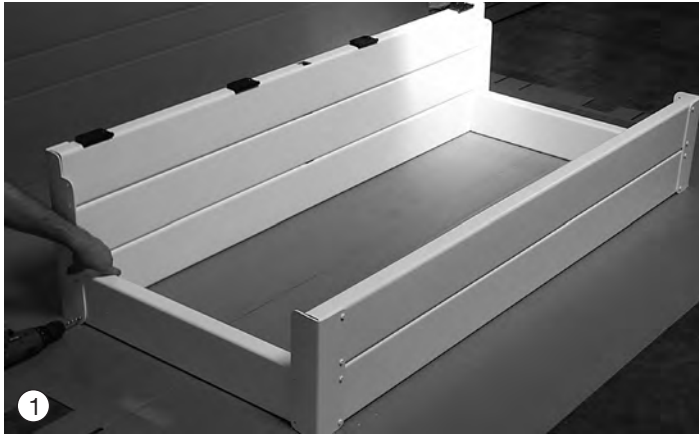


On a clean flat surface position front and back bed walls so that end boards can be put in place as shown. Predrill and screw each board through the corner posts with two screws evenly spaced.



Stack end wall boards in place with the slanted board on top.

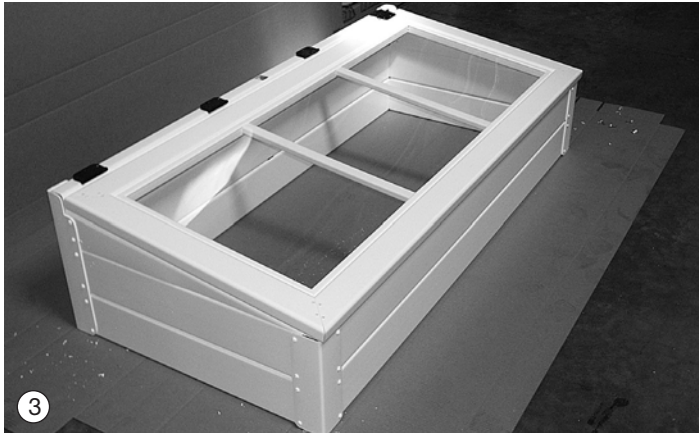

With the base of the hot bed complete, position the lid as shown.

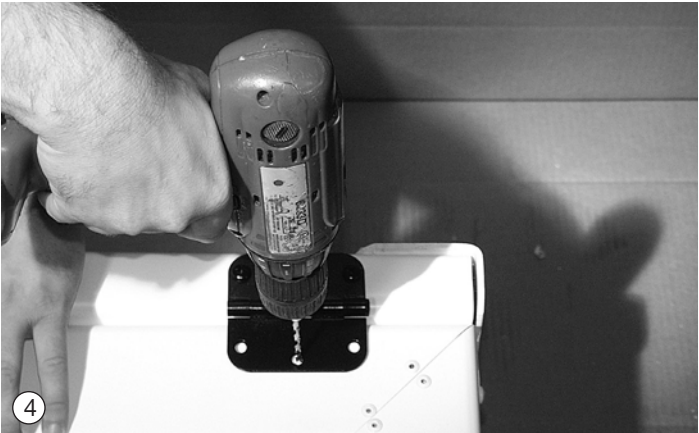

Holding the lid tight to the back wall of the bed predrill and fasten each hinge with screws.



Slide lid post into it's socket with the bottom of the post resting firmly on the floor of the back wall.



Post is ready for latch to be installed.



Determine the center of the box and make a mark for position on the top front of the lid.



Position the lid latch at the center of the front of the lid, predrill and screw in place.



Lid can be adjusted to the opening of your choice.