



Installation Instructions, Osco Truss System

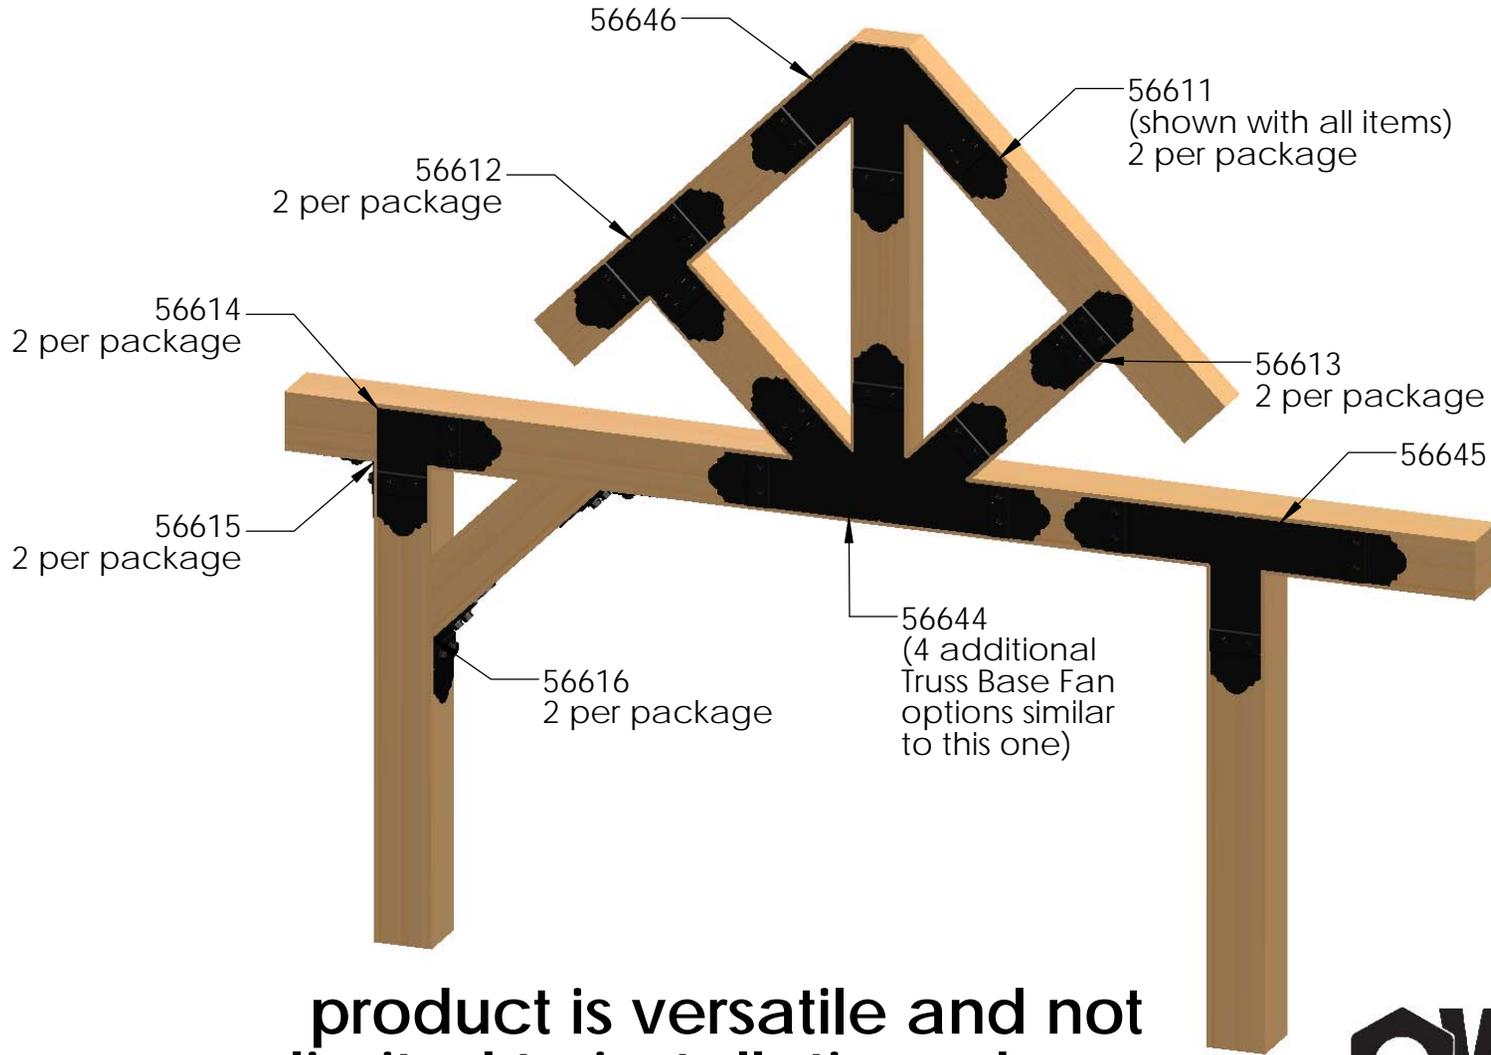


product is versatile and not limited to installations shown



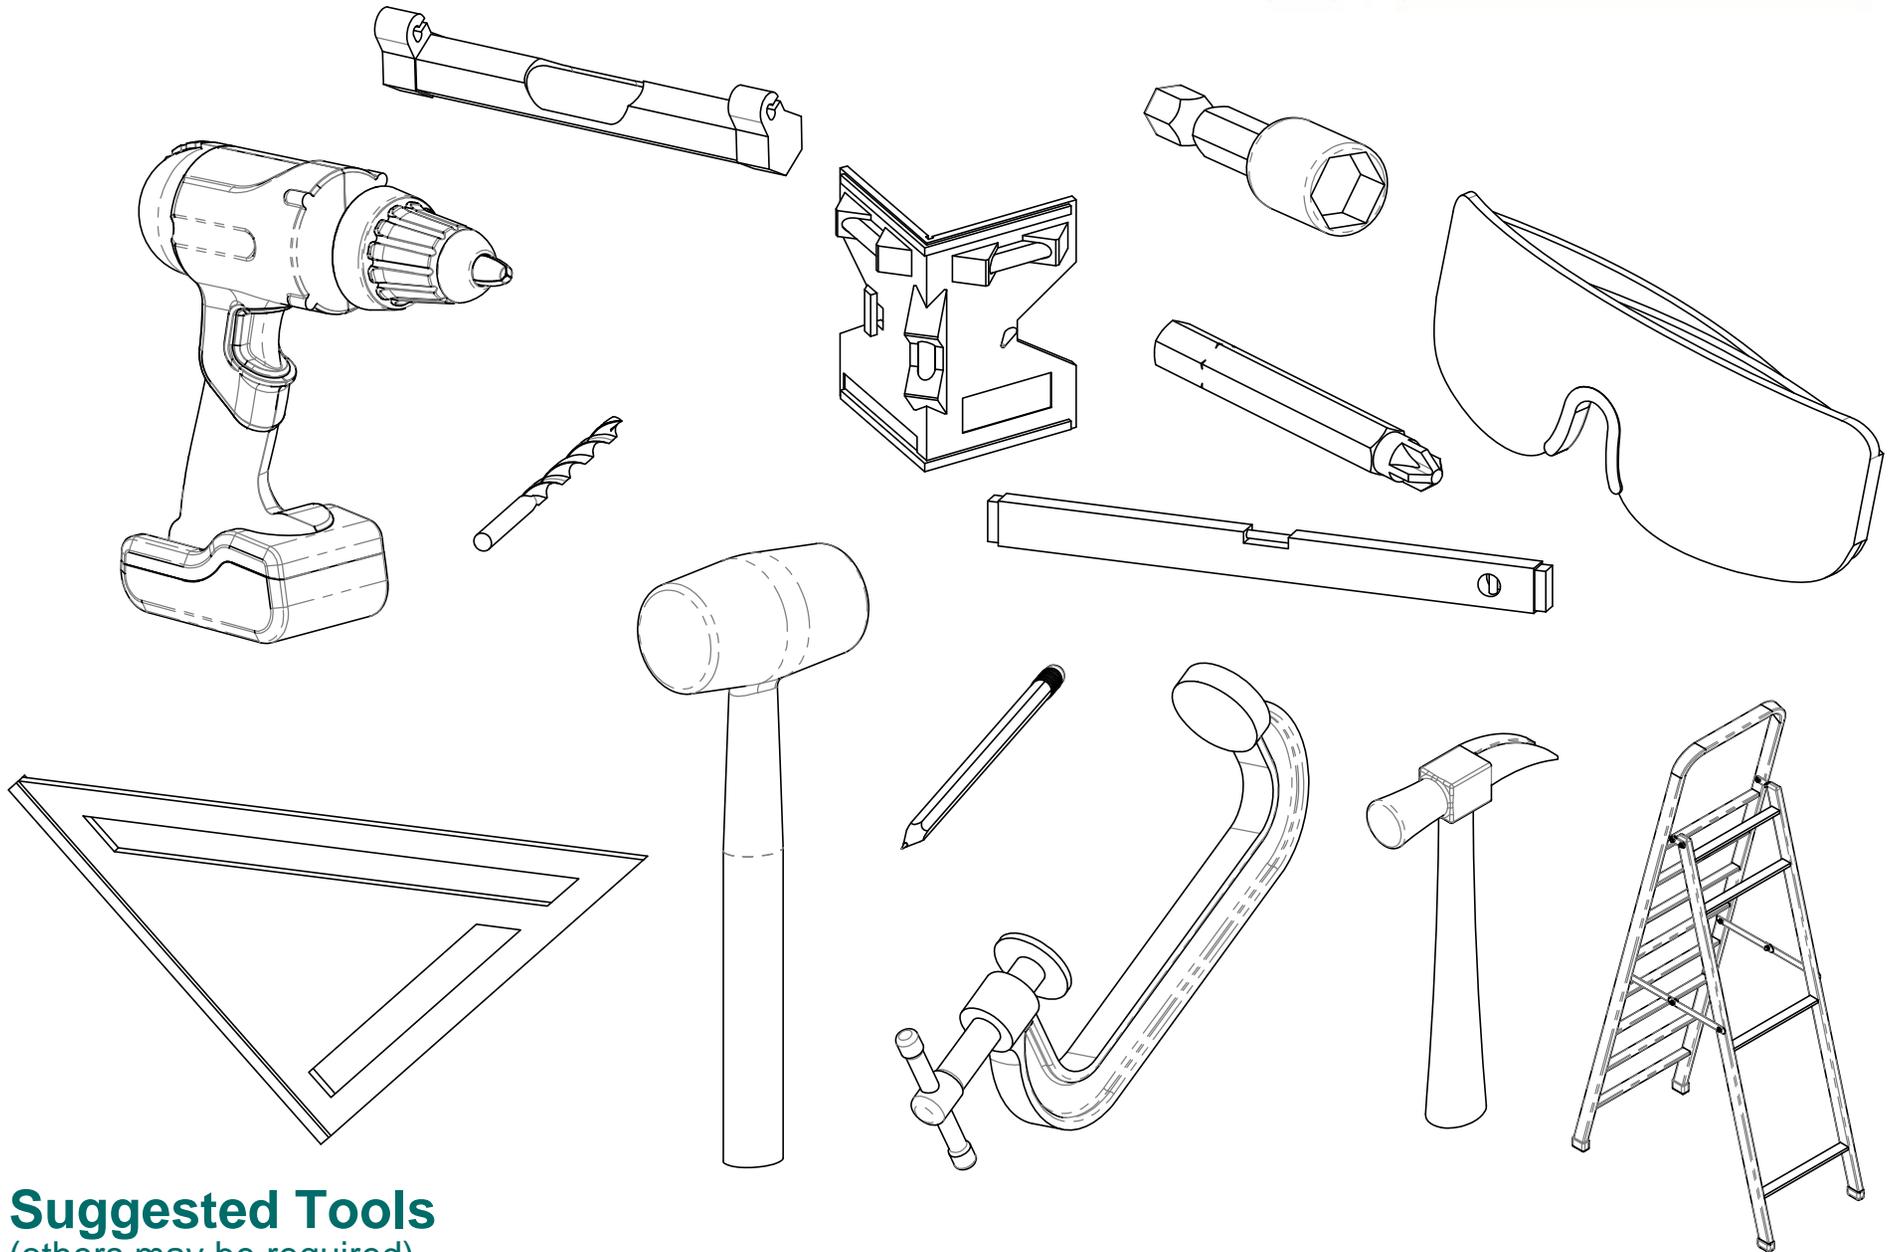


Suggested Tools (others may be required)

Installation Instructions, Osco Truss System

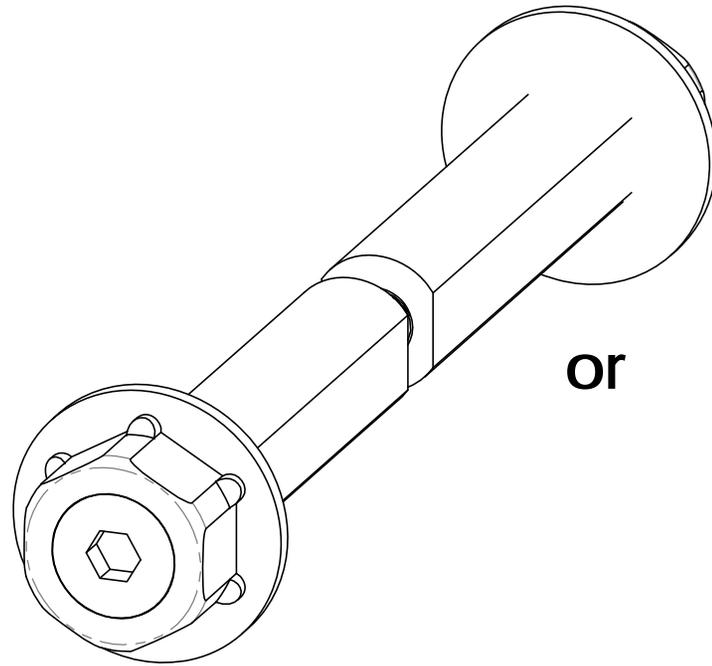


OWT Timber Bolt

or

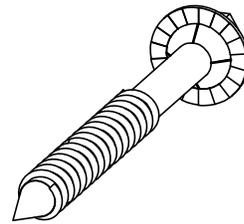

OWT Timber Screw

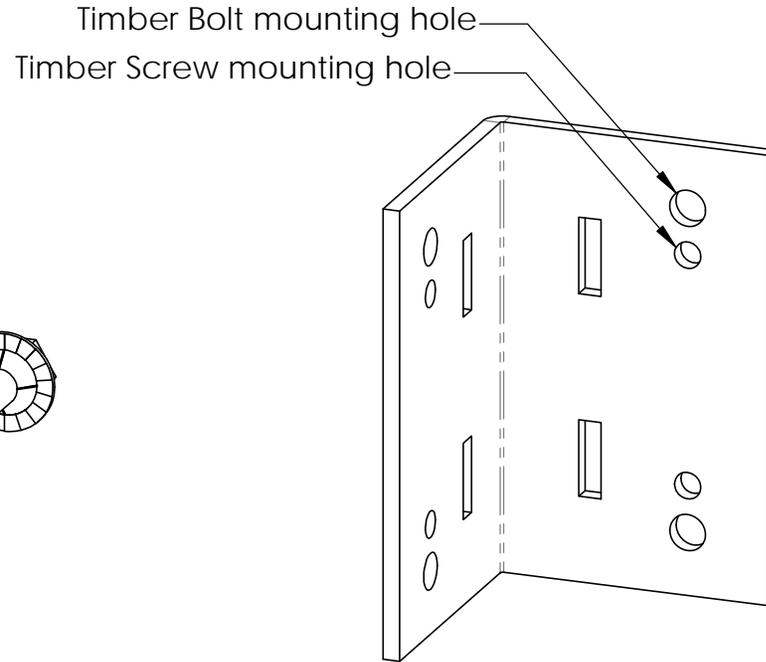


Reference 56615
(all Truss product has both mounting holes)

Fasteners purchased separately.


Must be selected based on length and strength requirements
product pages will show both options to assist with selection

Fasteners


Installation Instructions, Osco Truss System

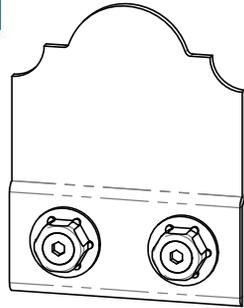


56611
(accessory)
2 per package
to be used with all Truss brackets

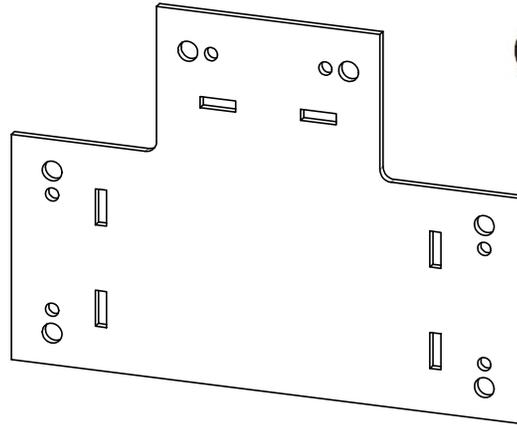


56612
2 per package

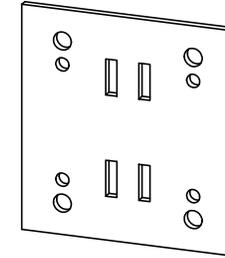


56613
2 per package

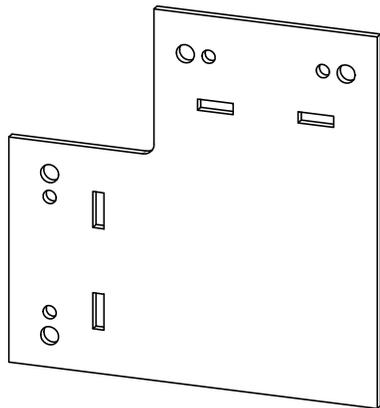


56614
2 per package

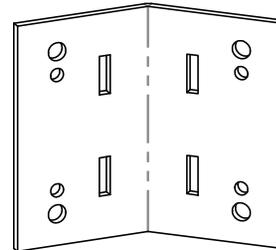


56616
2 per package

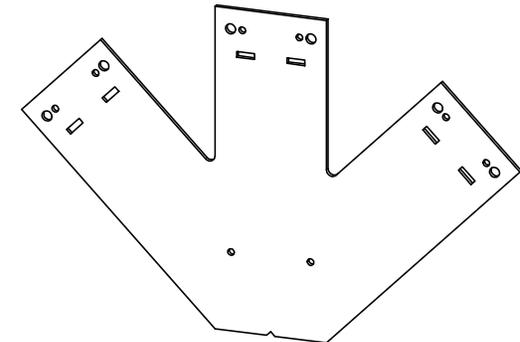

56646

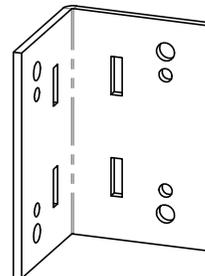

56615
2 per package

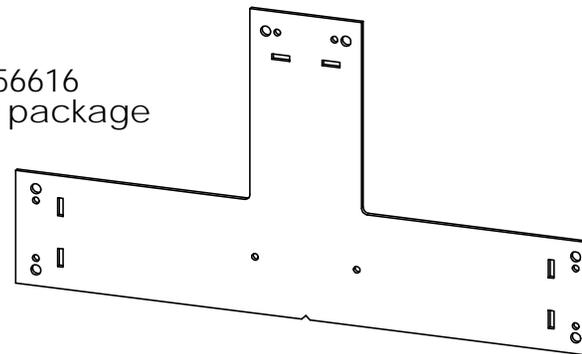


56645


Truss Ties & Accent

Installation Instructions, Osco Truss System


56619
8:12 Truss Base Fan

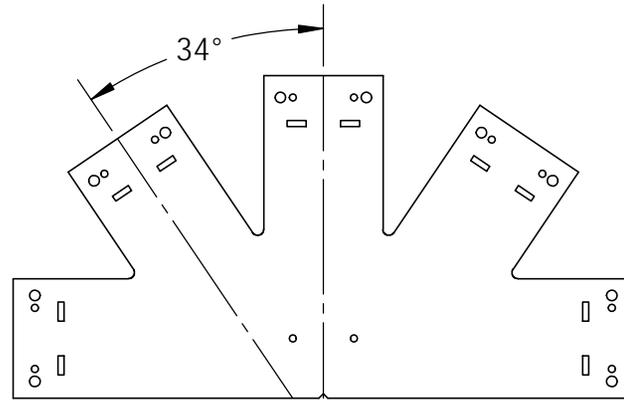


56620
10:12 Truss Base Fan

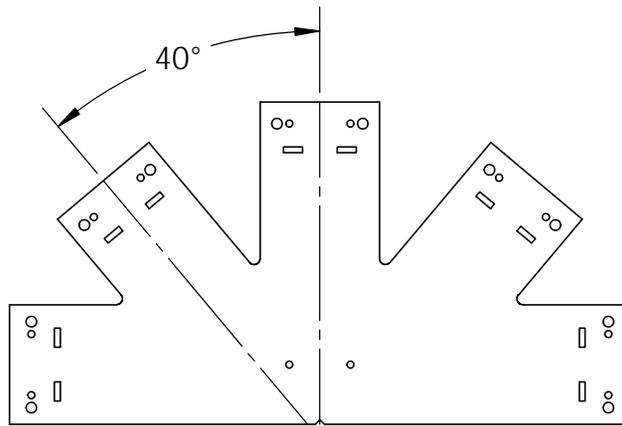


56642
4:12 Truss Base Fan

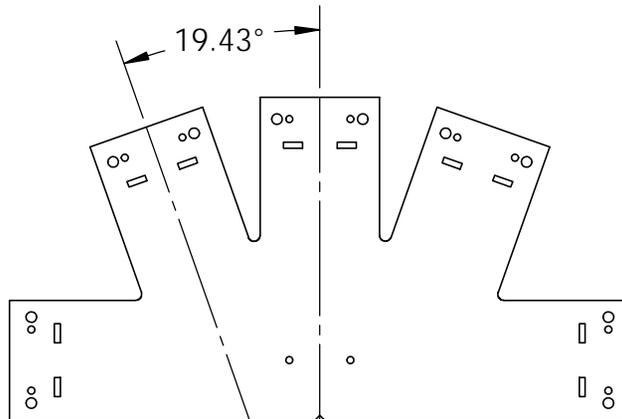

56643
6:12 Truss Base Fan


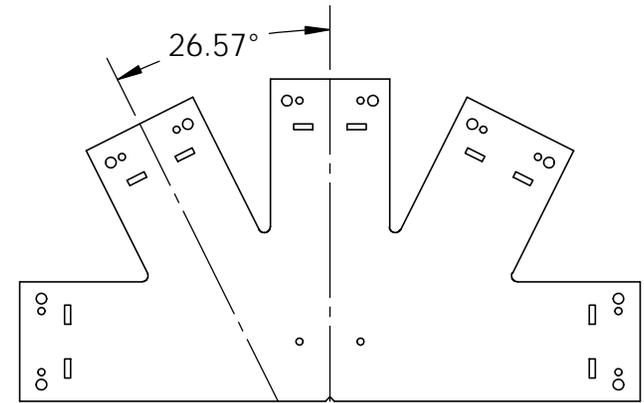


56644
12:12 Truss Base Fan

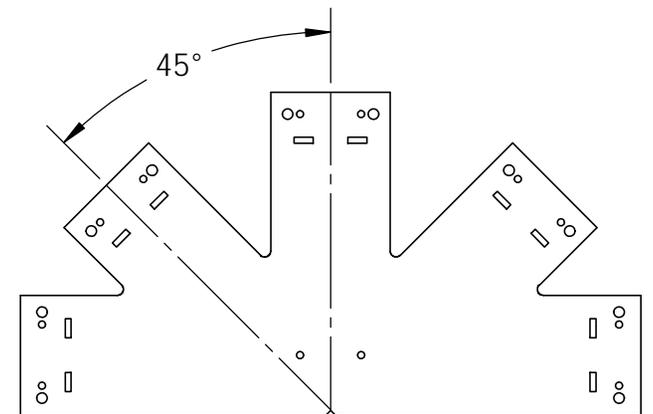

Truss Base Fan


Installation Instructions, Osco Truss System

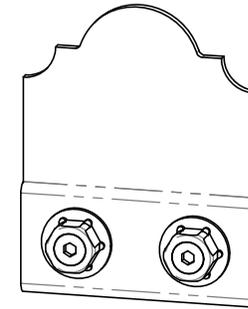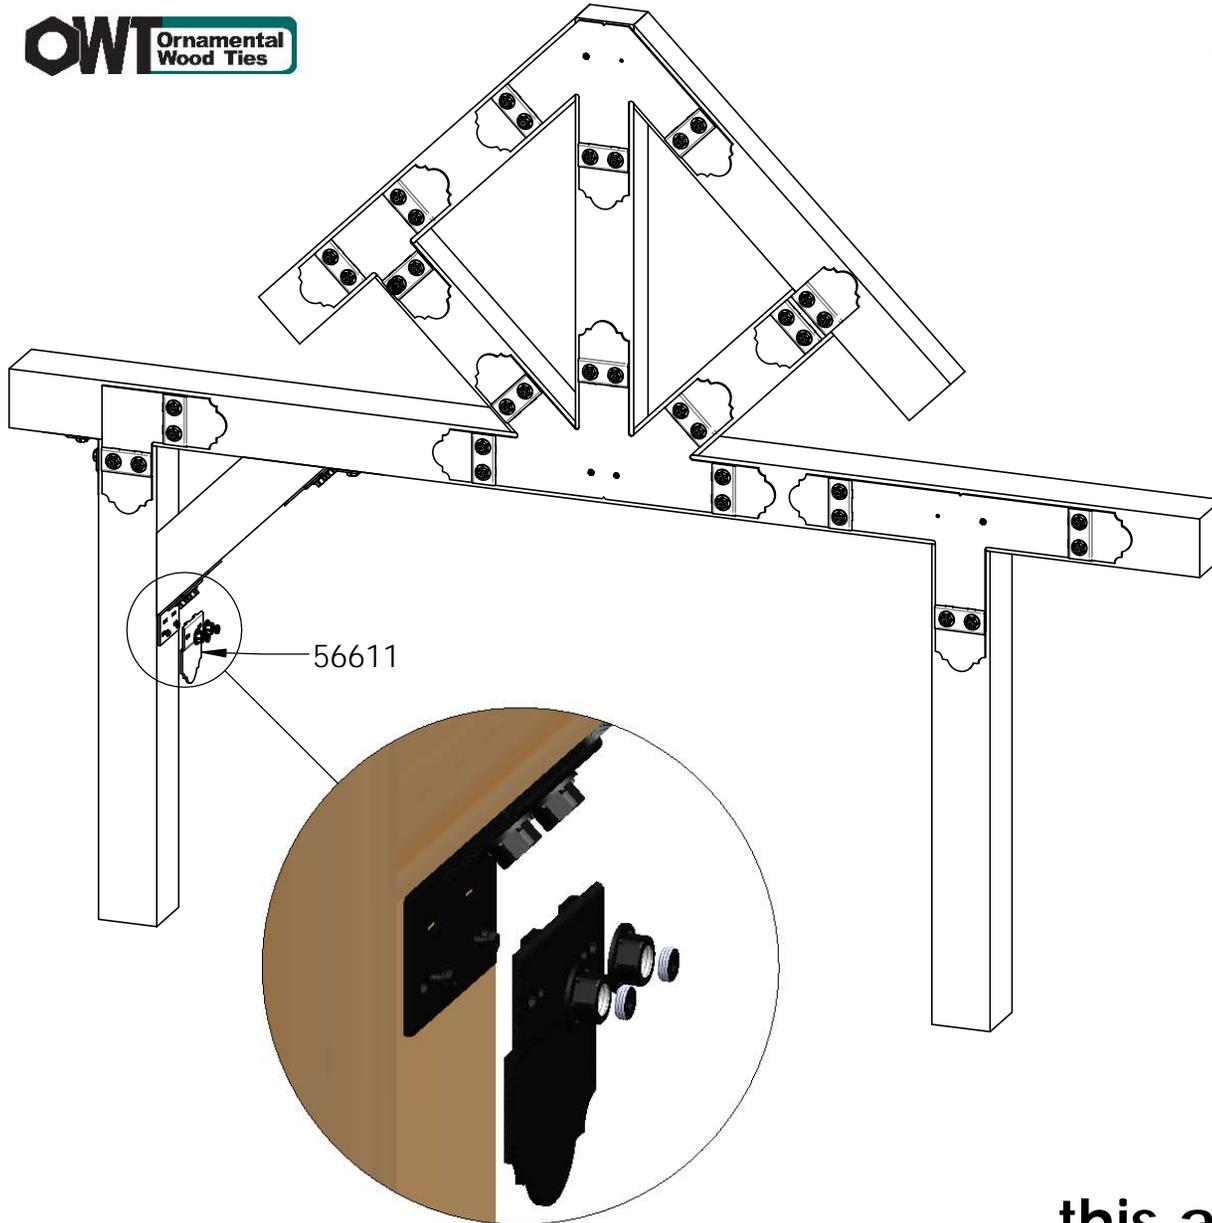

56611
(accessory)
2 per package
to be used with all
Truss brackets

Fasteners not shown.

Fasteners from brackets will be utilized


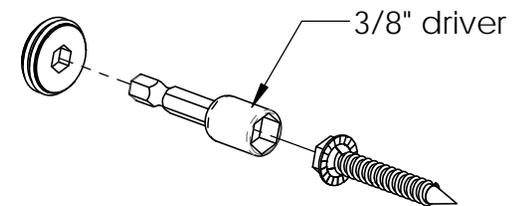


**this accessory compliments
all Ozco Truss brackets**
(shown installed on all)


56611

Installation Instructions, Ozco Truss System

56614

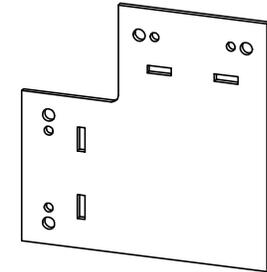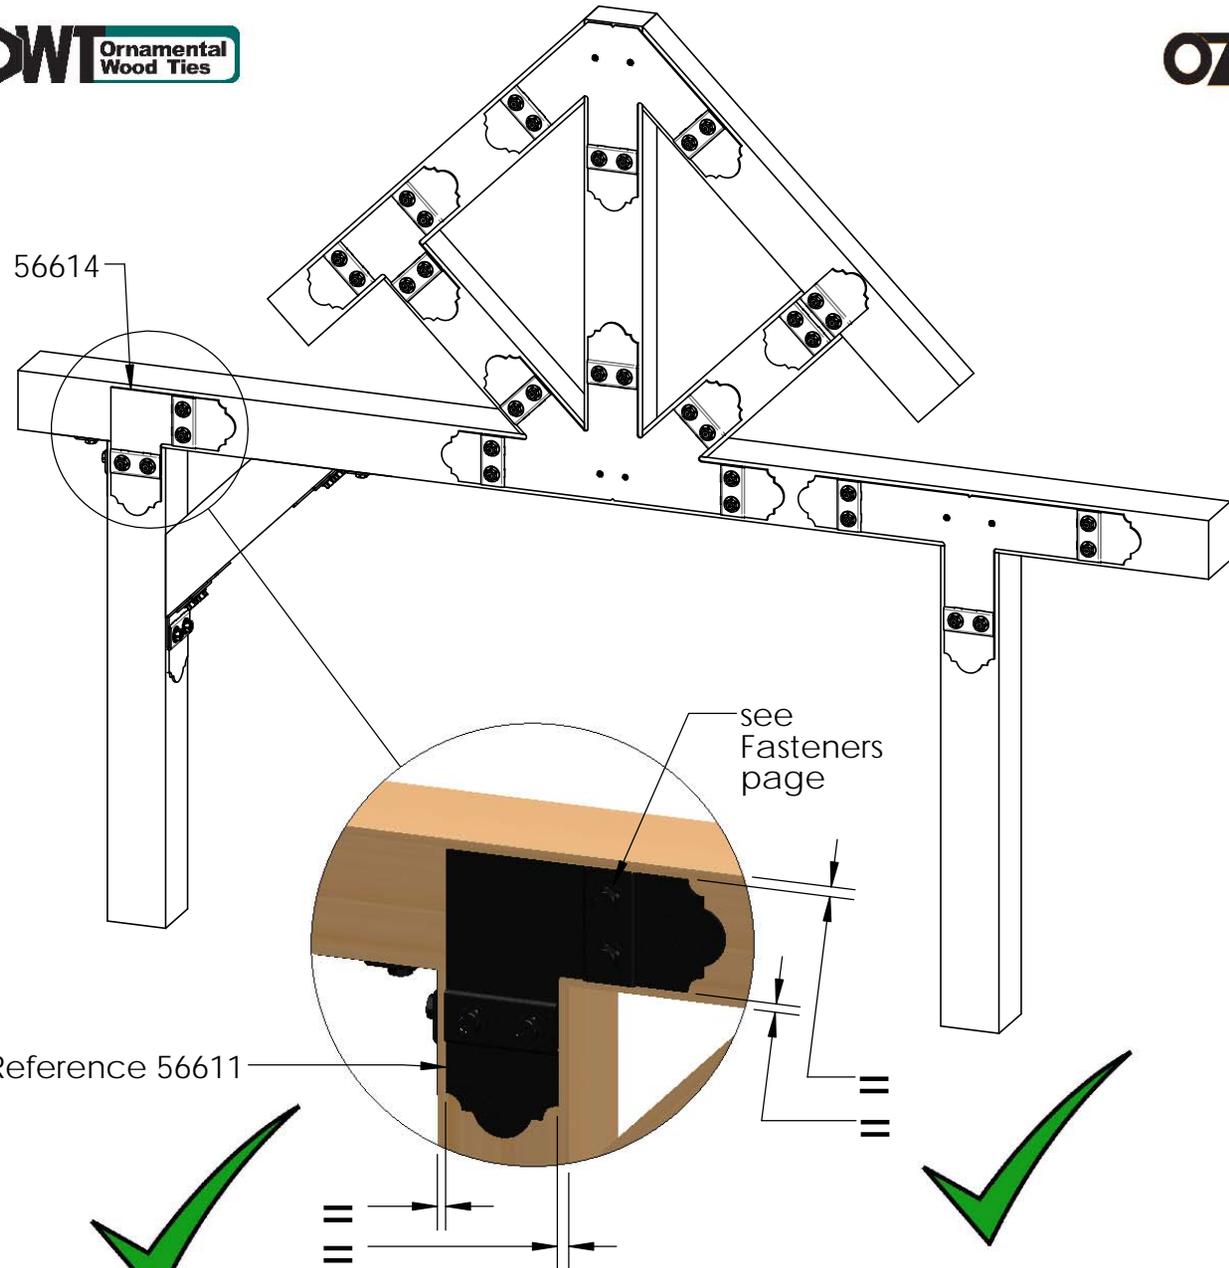



56614
2 per package

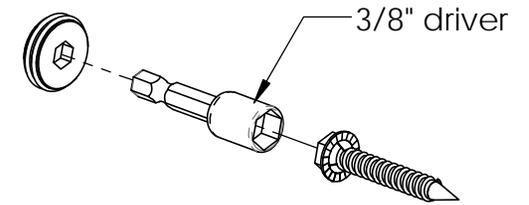


3/8" driver

56614

Installation Instructions, Osco Truss System

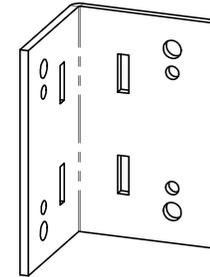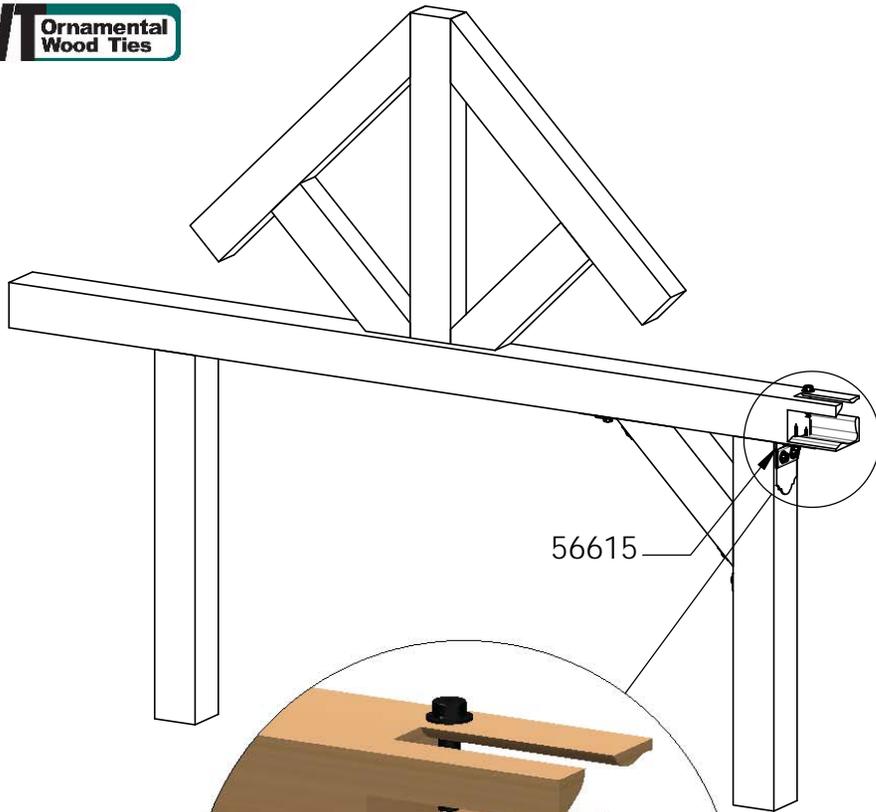


56615
2 per package

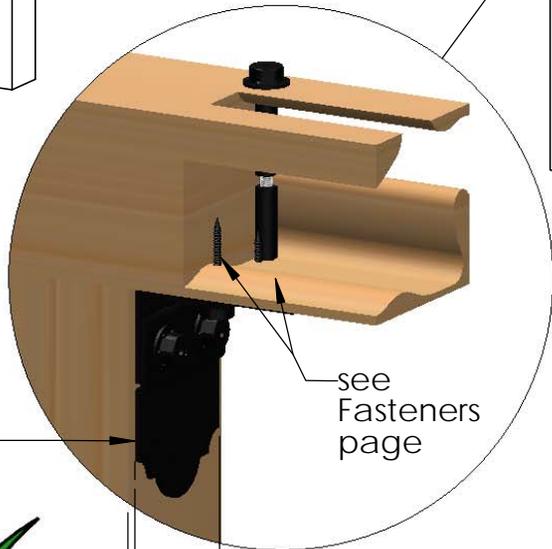



Reference 56611

same spacing
on other end

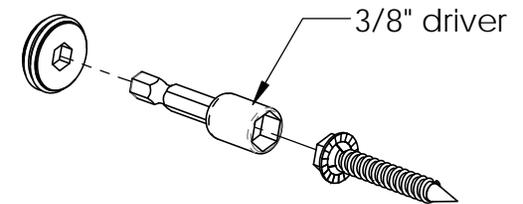


56615

Installation Instructions, Osco Truss System

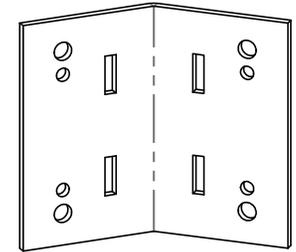
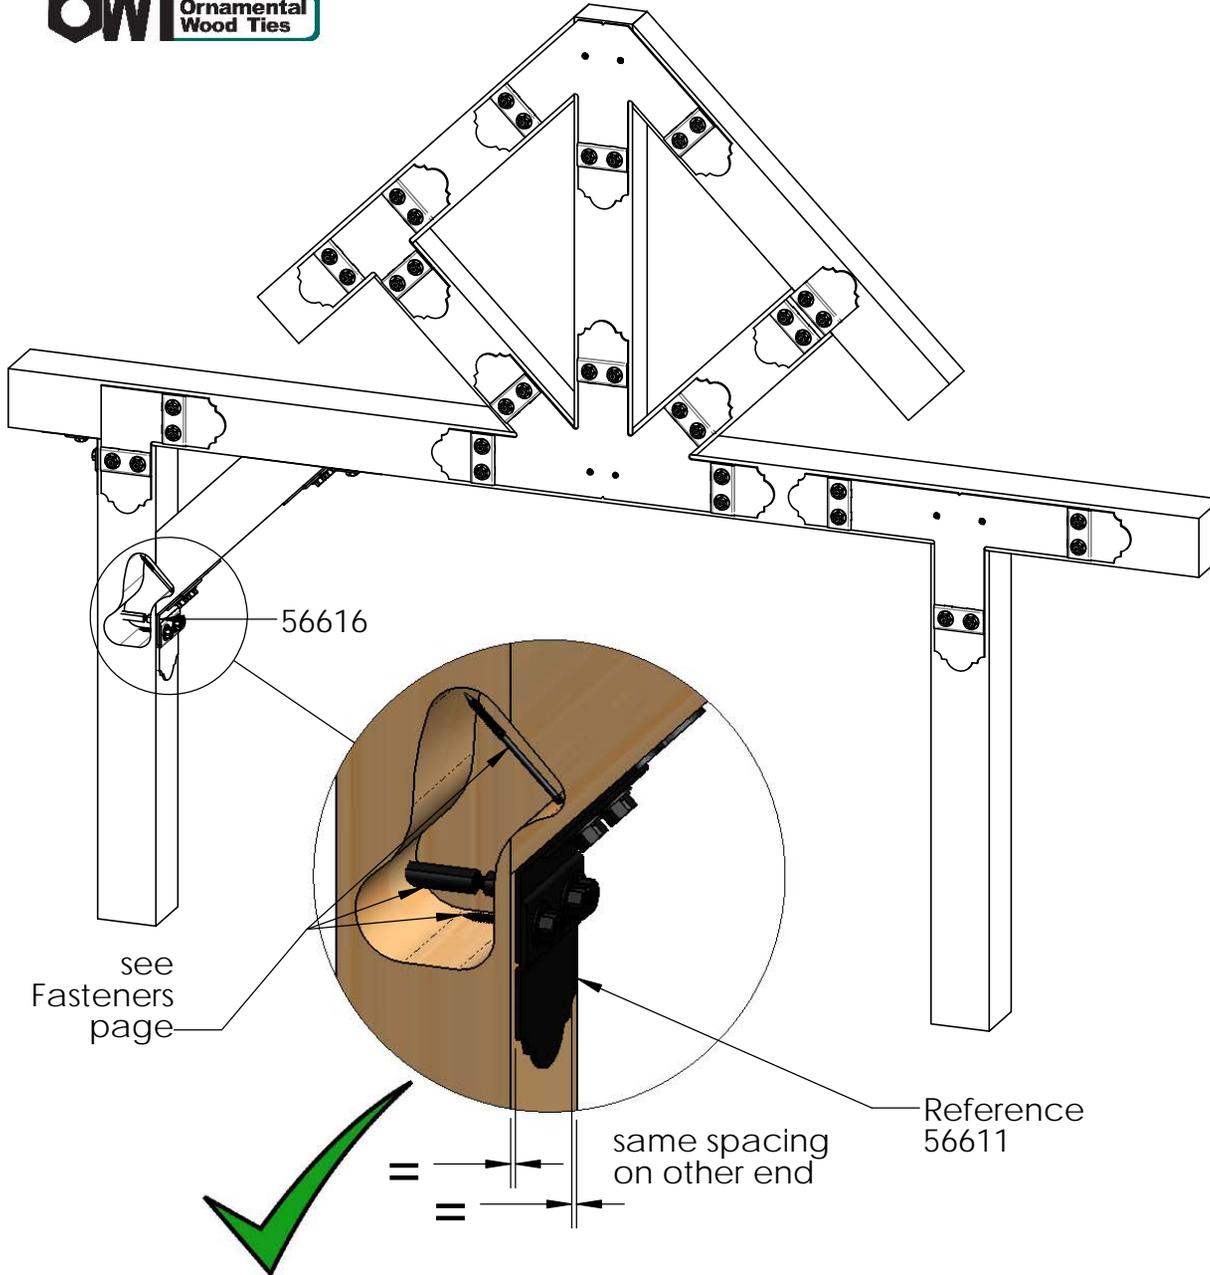


56616
2 per package

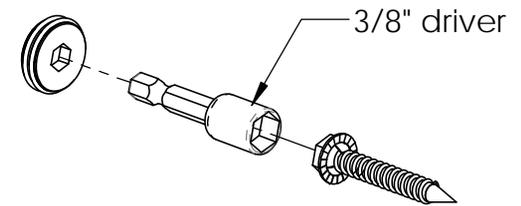


56616

Installation Instructions, Osco Truss System

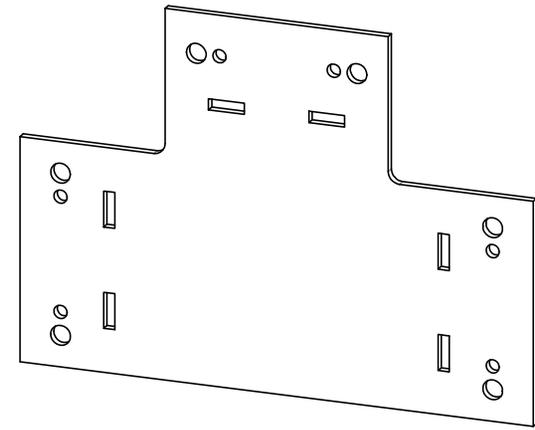
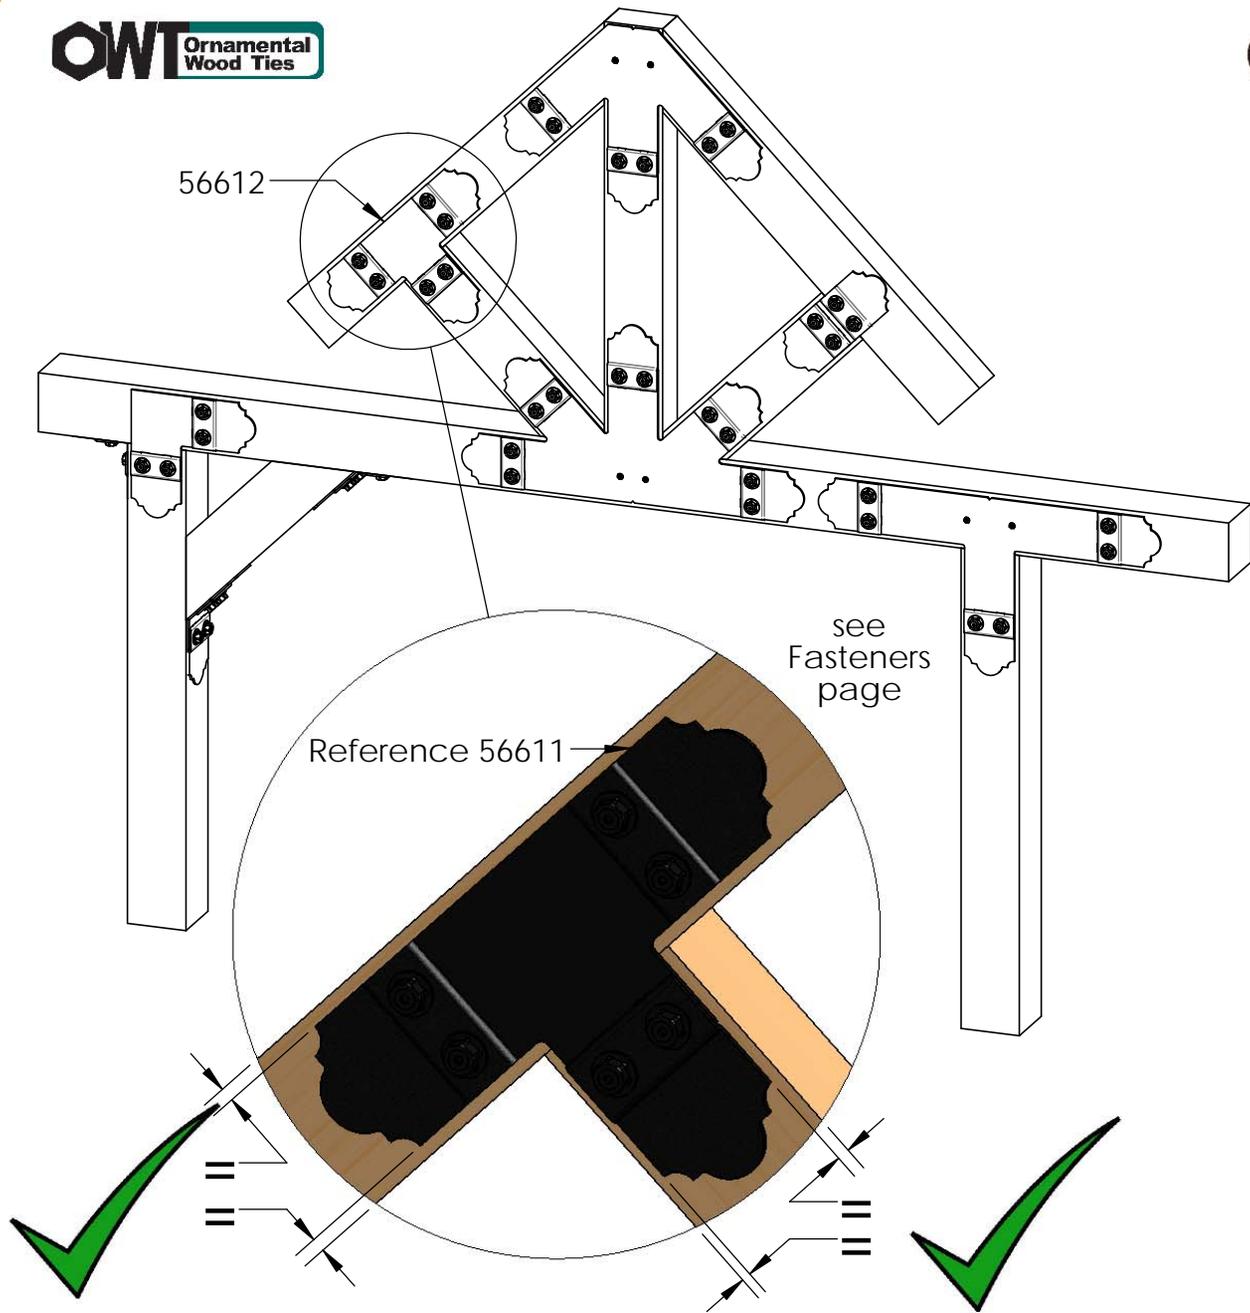


56612
2 per package


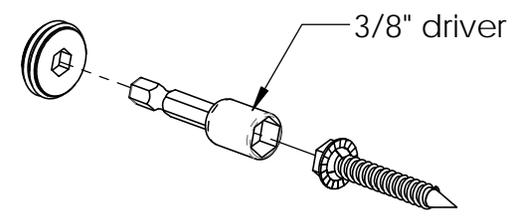


56612

Installation Instructions, Osco Truss System

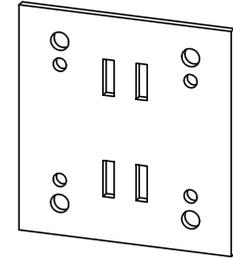
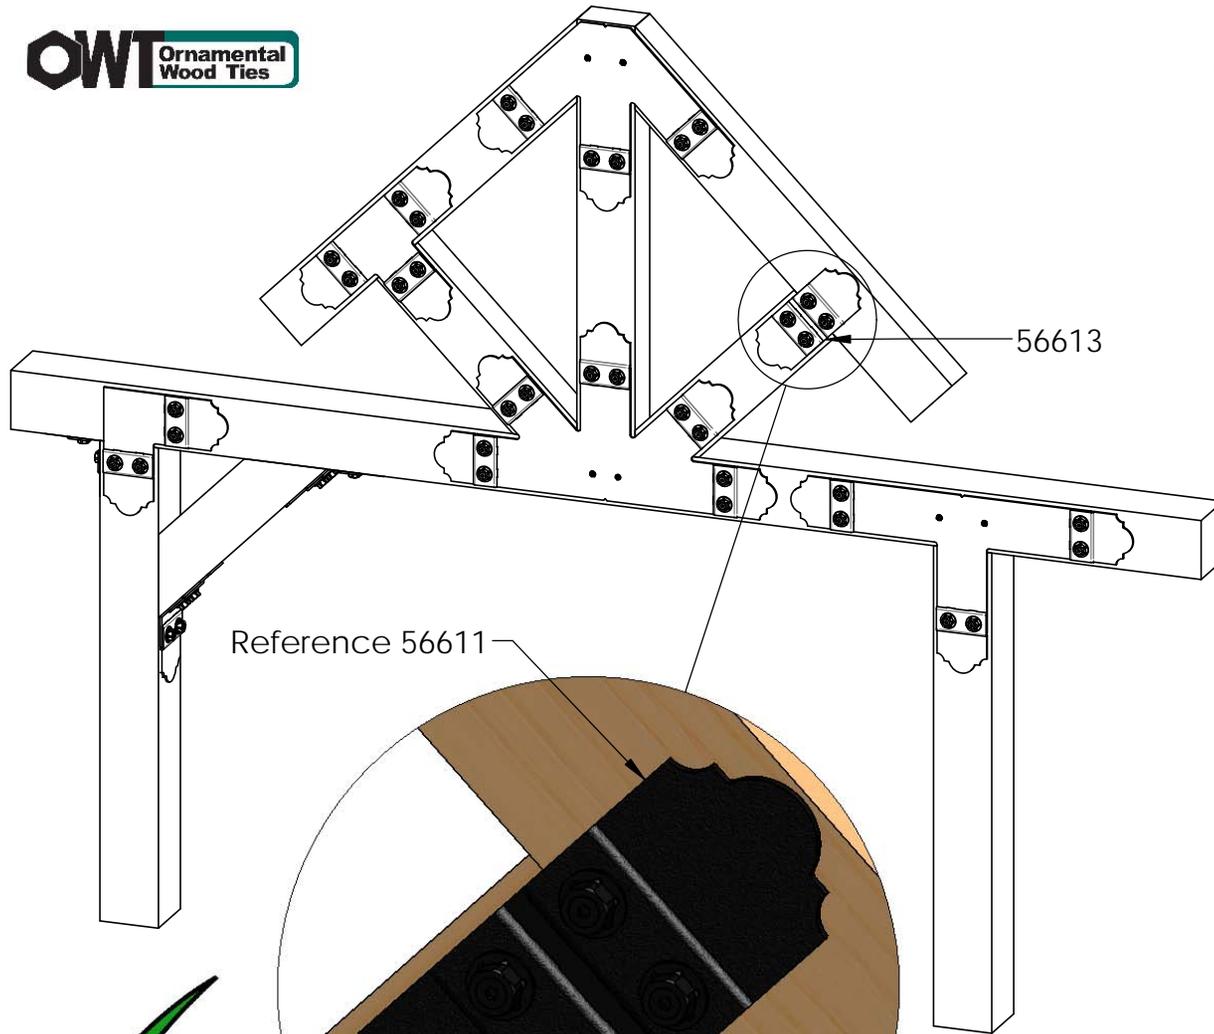


56613
2 per package

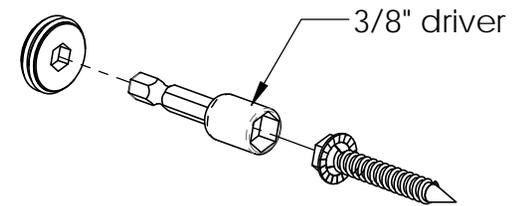
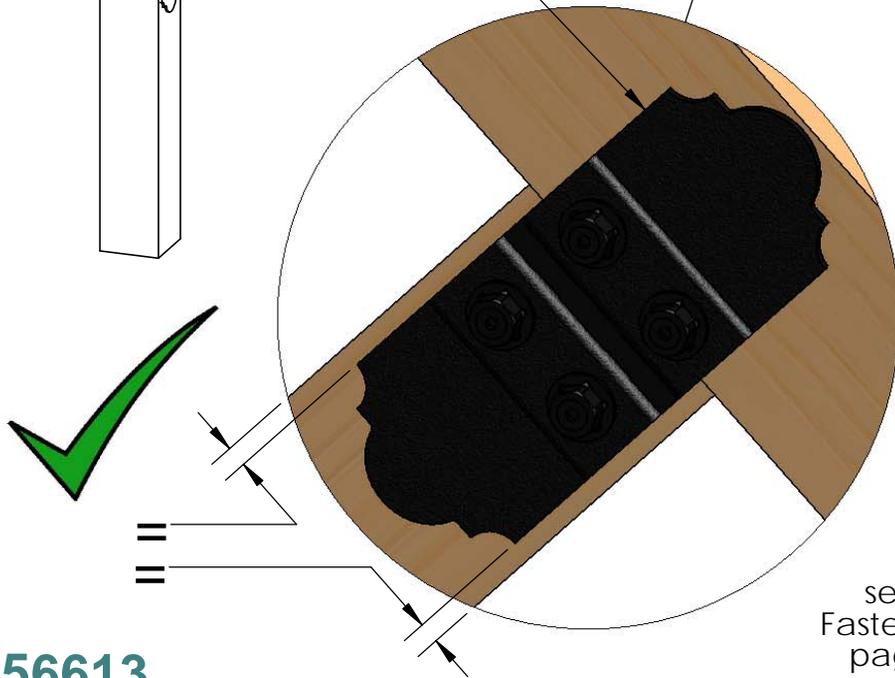


56613

Installation Instructions, Osco Truss System

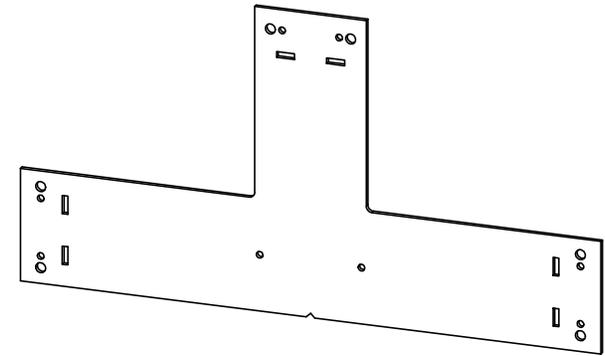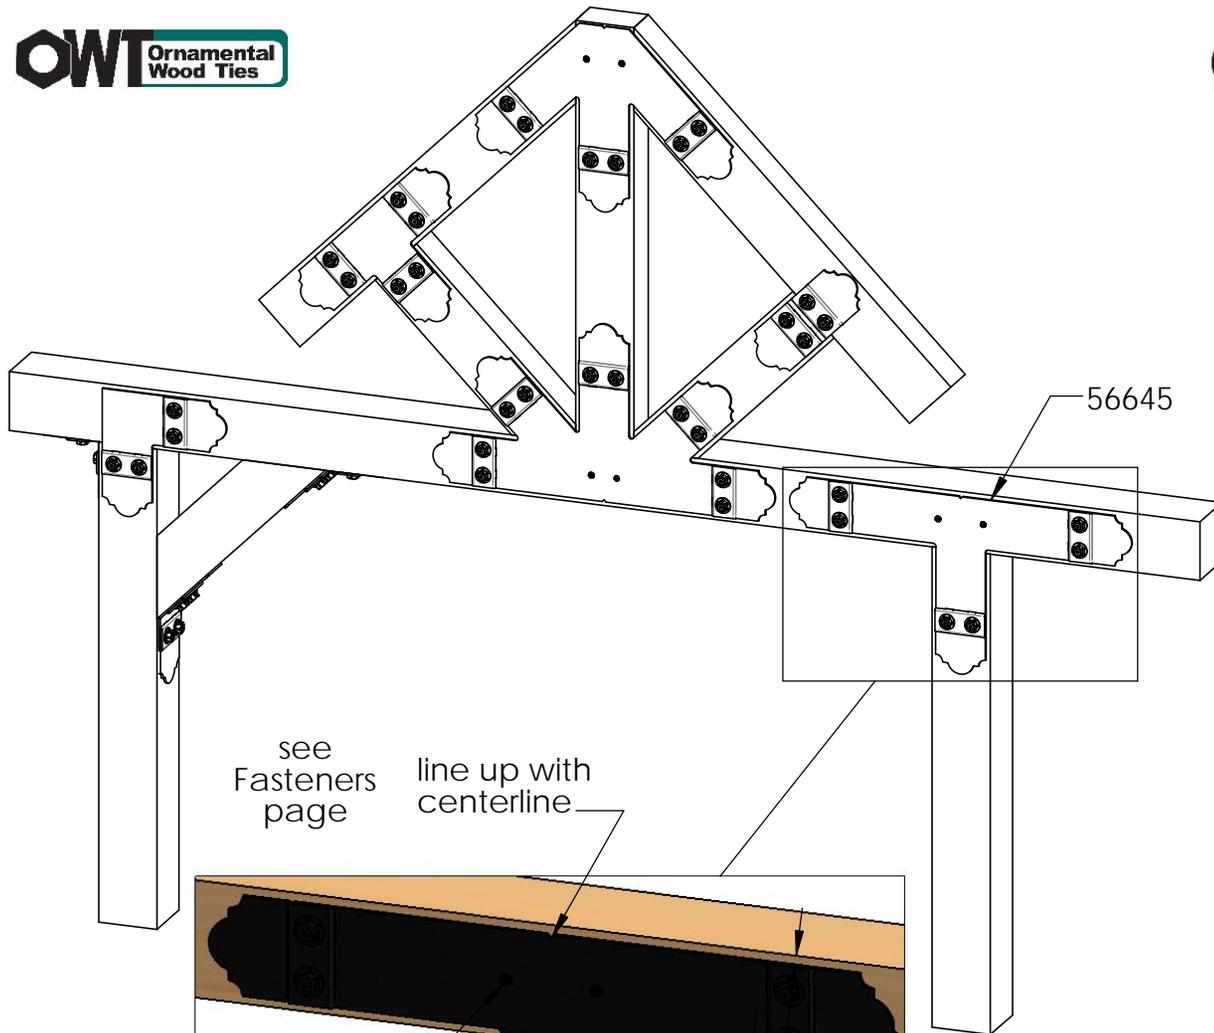

56645

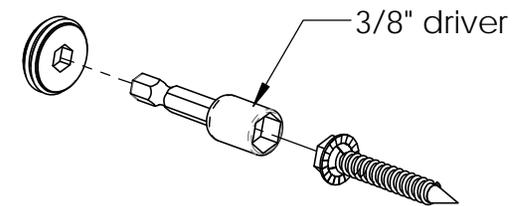
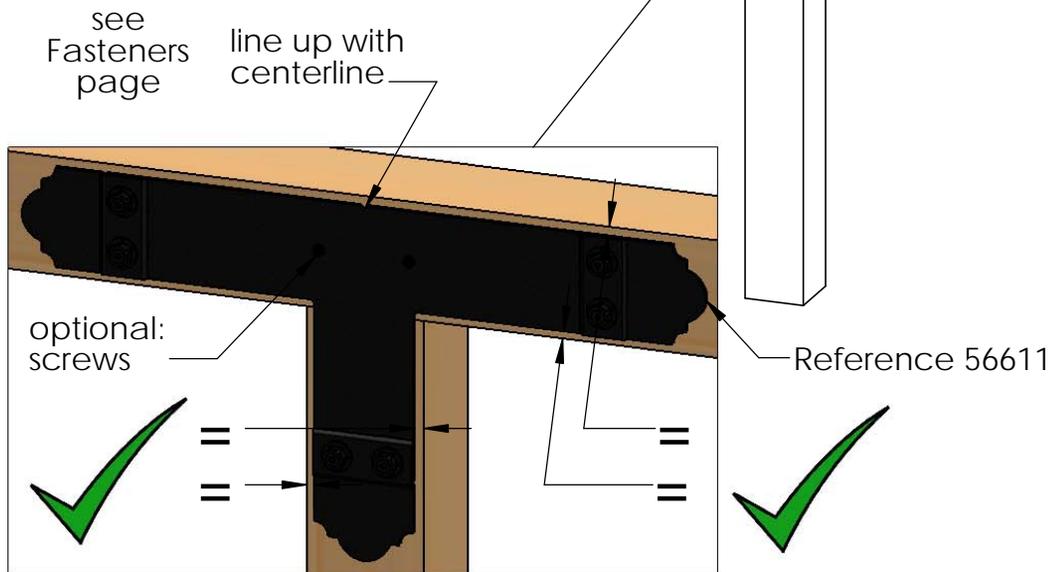


3/8" driver

56645

Installation Instructions, Osco Truss System


56646

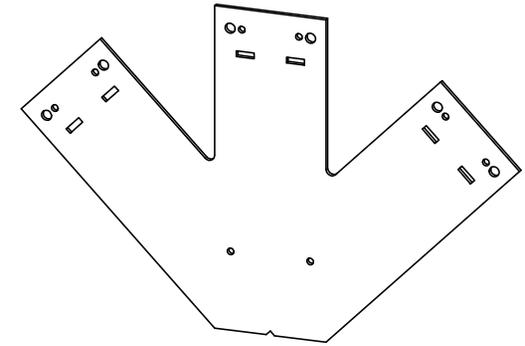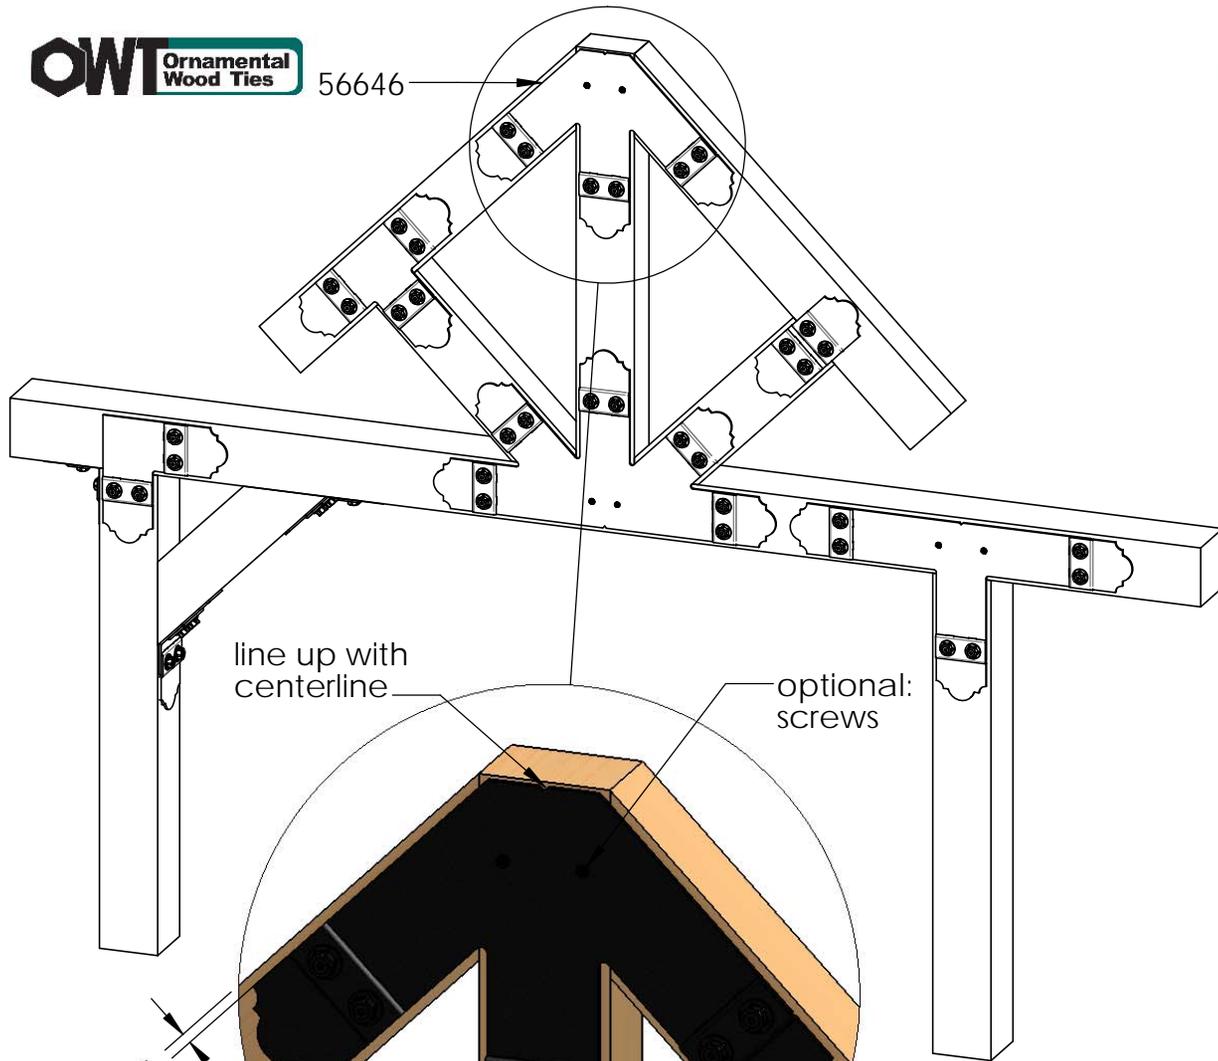

56646
(shown installed inverted)

line up with centerline

optional: screws

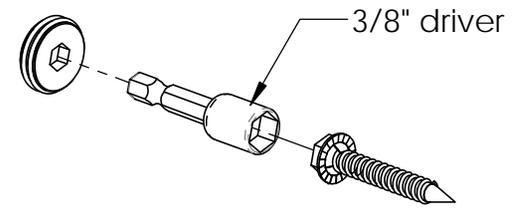








3/8" driver

see Fasteners page

Reference 56611

56646

Installation Instructions, Osco Truss System

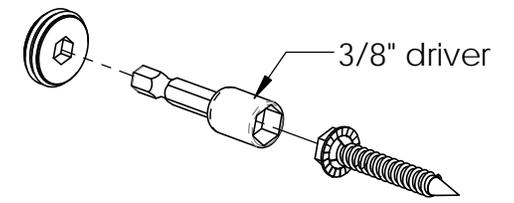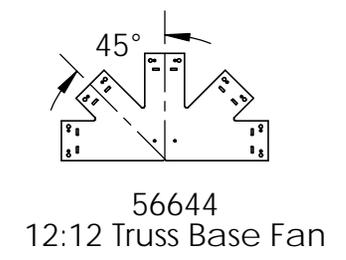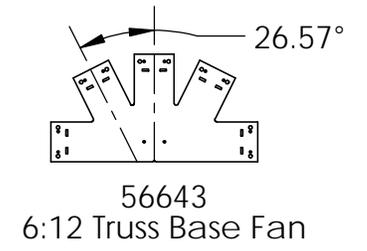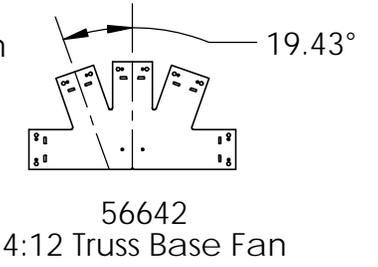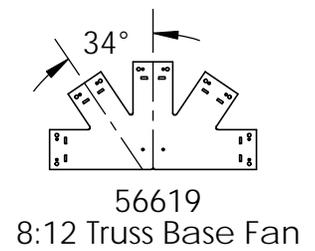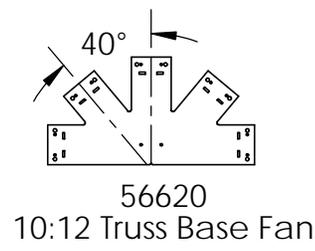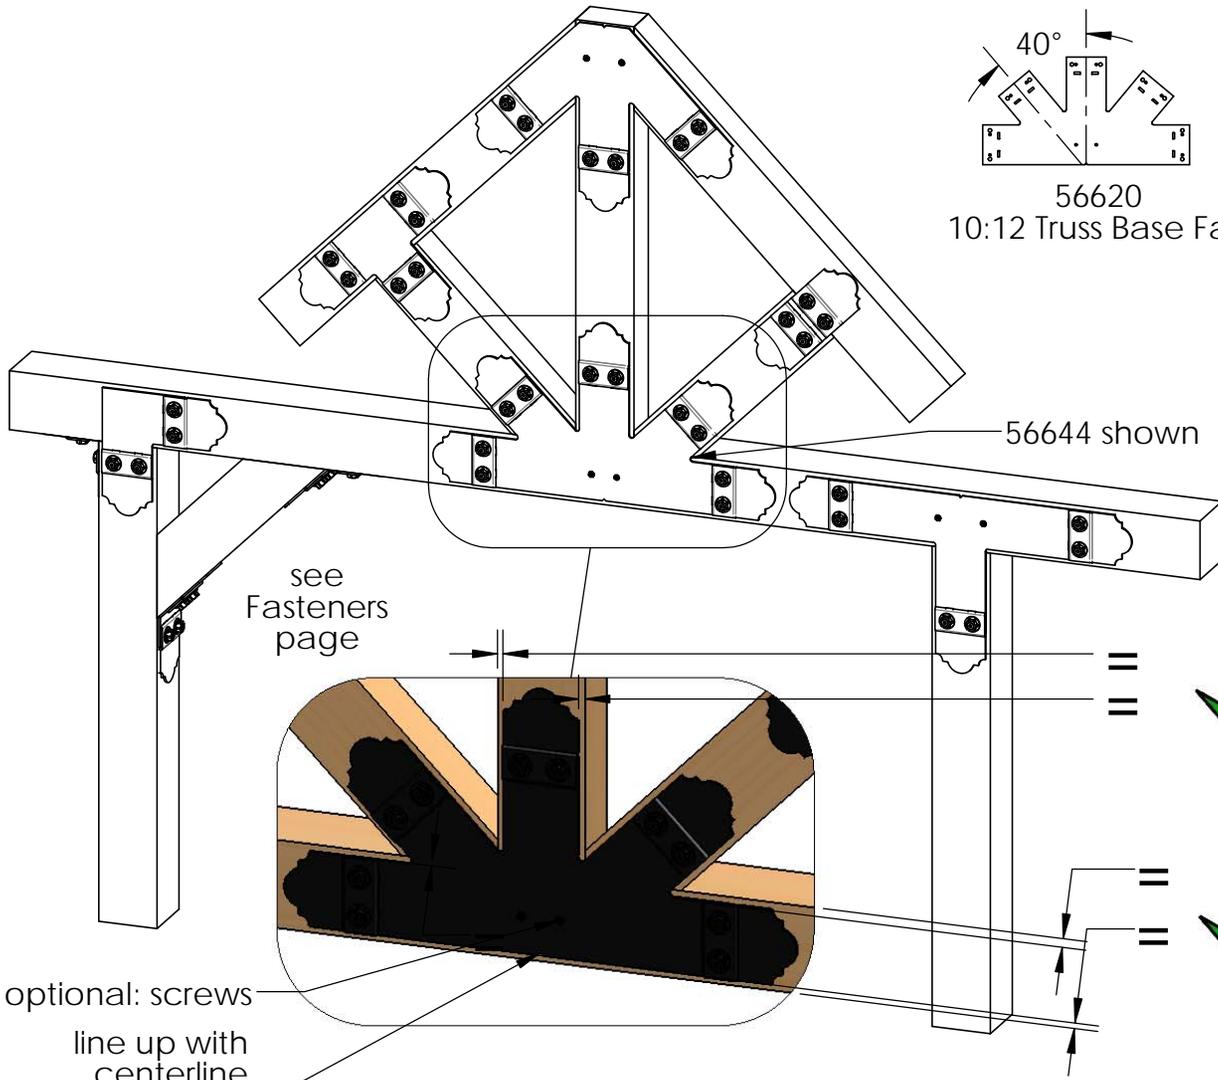

Truss Base Fan

Installation Instructions, Osco Truss System