#### **SPECIFICATIONS**

Operating frequency	24.150 GHz	
Output power (EIRP)	<u>&lt;</u> 20dBm	
Detectable speed	0.1 m/s min.	
Vertical directionality	060°	
Horizontal directionality	+/- 45°	
Installation height	Max. 3 m	
Range	15 m adjustable	
Relay control time	16 sec. adjustable	
Relay output configuration	Form C (SPDT)	
Relay contact rating	1A @ 24V AC/DC	
Detection indicator	Red LED	
Operating temperature	-4°F122°F (-20°C50°C)	
Supply Voltage	1224 VDC/VAC	
Operating current	Max. 40mA	
Dimensions	5.5"(140mm) x 4.0"(100m) x 2.8"(70mm)	
Weight	0.55lbs. (250 g)	
Housing	ABS (plastic)	
Connection	5 position terminal block	
Mechanical protection	IP55	

## **CAUTIONS AND WARNINGS**

This product is an accessory or part of a system. Always read and follow the manufacturer's instructions for the equipment before connecting this product. Comply with all applicable codes and safety regulations. Failure to do so may result in damage, injury or death

# **WARRANTY**

#### WARRANTY

EMX Industries Incorporated warrants all products to be free of defects in materials and workmanship for a period of two years under normal use and service from the date of sale to our customer. This warranty does not cover normal wear and tear, abuse, misuse, overloading, altered products, damage caused by incorrect connections, lightning damage, or use other than intended design.

There is no warranty of merchantability. There are no warranties expressed or implied or any affirmation of fact or representation except as set forth herein.

EMX Industries Inc. sole responsibility and liability, and the purchaser's exclusive remedy shall be limited to the repair or replacement at EMX Industries option of a part or parts found not conforming to the warranty. In no event shall EMX Industries Inc. be liable for damages of any nature, including incidental or consequential damages, including but not limited to damages resulting from non-conformity, defect in material or workmanship.

effective date January 1, 2002





4564 Johnston Parkway Cleveland, Ohio 44128 United States of America WEB http://www.emxinc.com
Technical Support Telephone (216) 834-0761
E-mail: technical@emxinc.com
Sales E-mail salessupport@emxinc.com
Telephone (216) 518-9888
Fax (216) 518-9888





# **OPERATING INSTRUCTIONS**

#### **MATERIALS SUPPLIED**

- Operating Instructions
- HAWK 1 Sensor

## **GENERAL DESCRIPTION**

The HAWK 1 is a planar technology microwave detector working in the K band. It is the ideal solution for operating all types of automatic doors. It detects the movement of people in the monitored area.

Easy to install at a height of up to 3 meters (10ft.), it has a versatile mechanical orientation system for accurate positioning to the required coverage area.

The detection sensitivity and direction of movement (toward, away or both) are programmed by DIP switch setting. A microprocessor processes the received Doppler signals and provides set of form C relay contacts for external connection.

The LED on the front of the HAWK 1 indicates detection.


#### **SET-UP**

The HAWK 1 motion sensor can be configured in the mono direction mode (one direction only) or in the bi-directional mode (both directions). Remove cover from the base of the detector and set the required function using the DIP-switch (FIG. 1-A) settings per the following table.

#### Setting the detection range


It is possible to define the controlled area by changing the angle of the detector and the position of the DIP-switch 4 (Fig. 1-A). Using trimmer TR1 (FIG. 1-E) the sensitivity can be optimized to activate detection only for the desired area.

SW1	SW2	SW4	SENSITIVITY	FUNCTION
OFF	ı	ON	Low	Detect in both directions
OFF	-	OFF	High	Detect in both directions
ON	OFF	ON	Low	Detect approaching
ON	OFF	OFF	High	Detect approaching
ON	ON	ON	Low	Detect leaving
ON	ON	OFF	High	Detect leaving

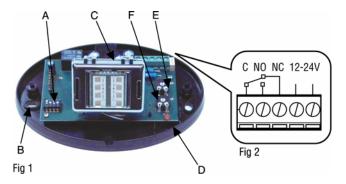

#### Relay contact setting

The HAWK 1 output is a form C set of relay contacts. The setting options are indicated in the following table. These conditions are valid when the device is powered.

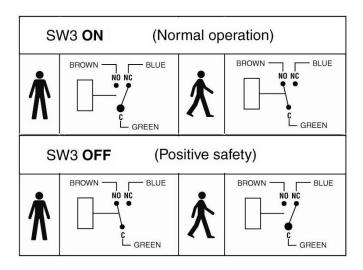

## Adjusting activation period

Trimmer TR2 (Fig. 1-F) is used to set the desired duration of the output contact, variable form 1 to 6 seconds.

## **INSTALLATION**

The HAWK 1 can be installed at the center of the door to be controlled, or on the side on non-vibrating structures (walls or ceiling) at a maximum height of 10ft. Use the template supplied with the unit for preparing the mounting holes.

Remove the cover and insert the wires and tighten them to the terminal block as indicated in Fig. 2. Route the cable out the back of the device and thought the grooves in the case. Fasten the device using the prepared hole. Aim the detector (Fig. 1-C) toward the area to be controlled and re-attach the cover.

For proper operation, do not install HAWK 1:

- Facing the moving parts of a door
- Facing fluorescent lights (minimum distance 6.5 ft.)
- Facing area where rain could provoke water fluxes

These conditions could cause undesired opening of the door.

## **WIRING**

See Fig. 2.

## SENSITIVITY PATTERNS

