




BL 2000 Series Code Change Instructions

- 1) Remove the lock from the door.
- 2) Remove the 4 red coloured retaining screws from the back of the keypad. Take extra care to keep the keypad on a flat surface when removing the covering plate as this has several springs attached.
- 3) You will now see that there are 5 red coloured coded tumblers and 8 blue coloured un-coded tumblers plus 1 clear tumbler (C button).
- 4) To change your code, push the C button and hold it. You can then easily remove one or more of your coded and un-coded tumblers, using the tweezers supplied.
- 5) Please note you should never remove the C tumbler or take your finger off of the C button when changing your code.
- 6) Please note the different shapes of tumblers before reinserting them into the lock body. Firstly there is a difference in shape between the coded and un-coded tumblers, as illustrated below. Secondly, when refitting the tumblers into the lock body they must be fitted facing the correct way, again see the illustration below. All square cut-outs must face outwards. Once inserted correctly the dimple on the tumbler will sit in the cut-out on the coding chamber.
- 7) After you have refitted the tumblers and have made a note of the new code, please replace the metal plate with the 4 red screws.
- 8) Please note – with the spare tumblers provided you can either increase the number of digits in your code to 6 - 7 or reduce to 3 – 4.

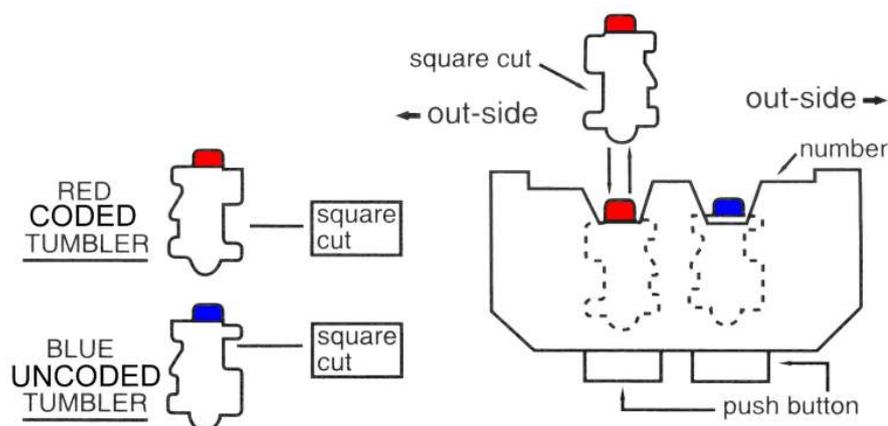

If you experience any problems when fitting this lock or changing the code please contact the:

Borg Locks Helpline
+44 (0) 1708 225700