FOR MODELS: 1011, 1021, 1031, 1041, L1011, L1021, L1031, L1041 WITH 1/2" (13 mm) LATCH

D2-PKG-1799E(b) 9/07

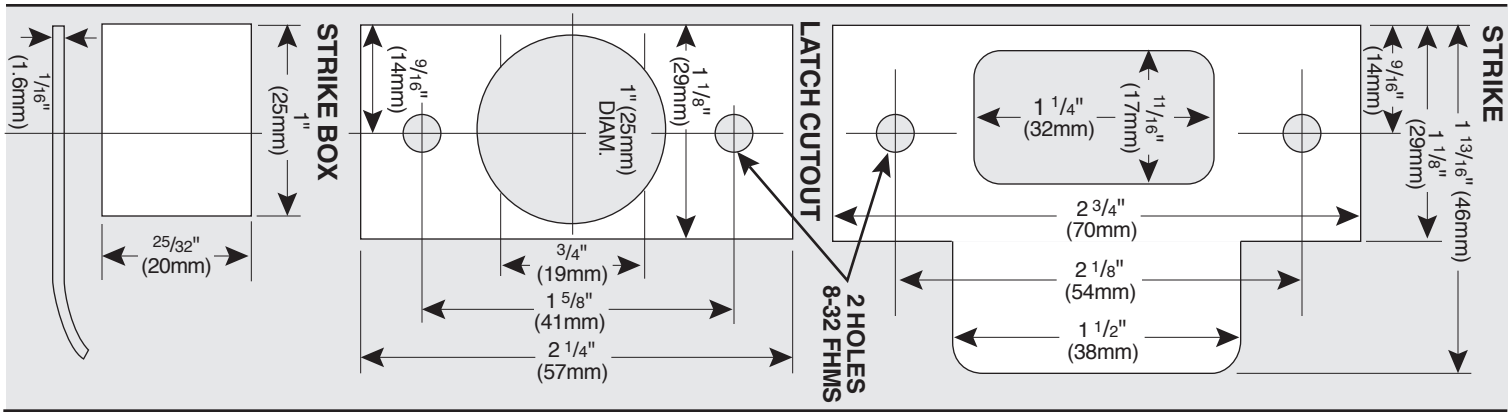

CAUTION
APPLY TEMPLATE AND DRILL FROM OUTSIDE BUT COMPENSATE FOR DOOR BEVEL IF ANY.

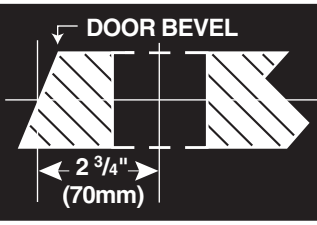

TEMPLATE B
(with passage set)
RIGHT HAND

THIS FLAP FOLDS OVER THE EDGE OF THE DOOR

BE SURE THE FOLD IS EXACTLY ON THE LINE

CAUTION : MARK ACCURATELY - BORE STRAIGHT

TOP

FOR PASSAGE MODELS ONLY

REFERENCE ONLY, NOT TO SCALE.
Do not use as a drilling template.
Call 800-849-8324.

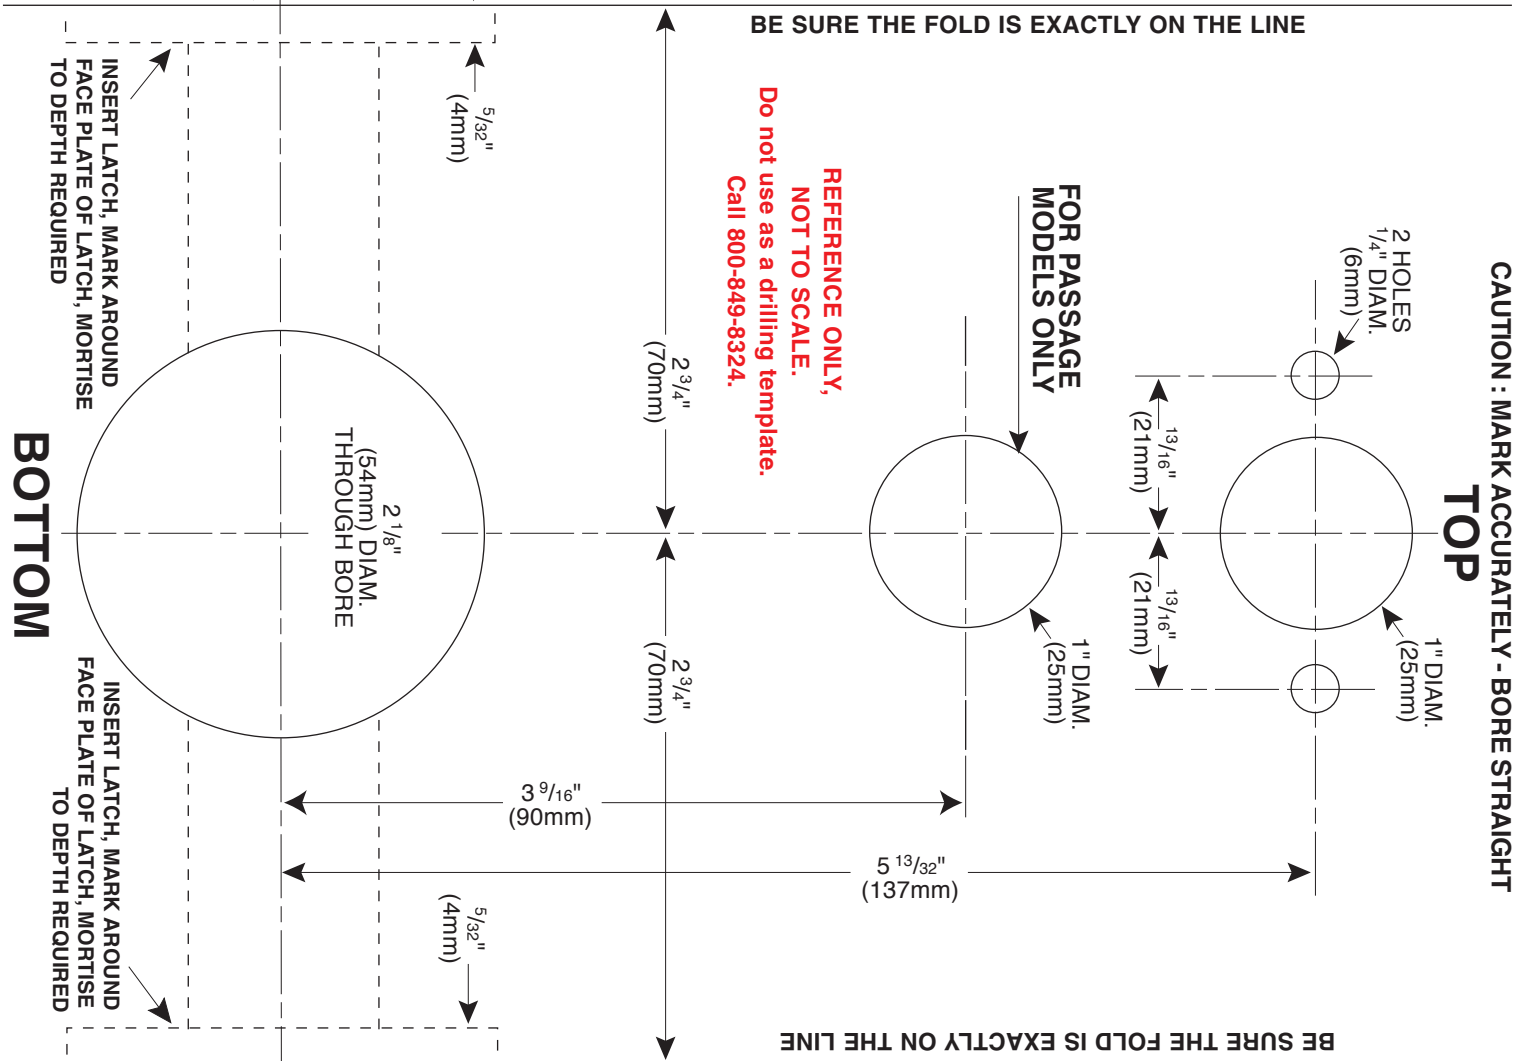

BOTTOM

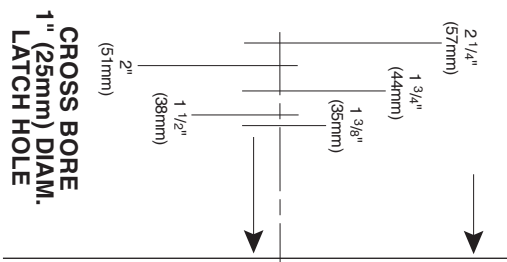

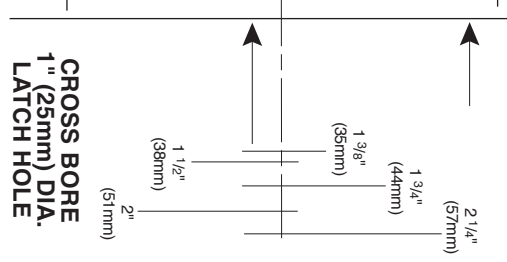

THIS FLAP FOLDS OVER THE EDGE OF THE DOOR

BE SURE THE FOLD IS EXACTLY ON THE LINE

TEMPLATE B
(with passage set)
LEFT HAND

NOTE: Lock will accomodate doors 13/8" (35mm) to 2 1/4" (57mm) thick. Suitable reinforcement shall be provided by the hollow metal door manufacturer to prevent collapsing of door. When door silencers are to be installed, proper allowances must be made for strike location.